

[Manuals.plus](#) /

› [Faber](#) /

› Faber FFSD 8PR 14S 14 Place Settings Free Standing Dishwasher User Manual

Faber FFSD 8PR 14S

Faber FFSD 8PR 14S 14 Place Settings Free Standing Dishwasher User Manual

Model: FFSD 8PR 14S

Brand: Faber

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation, installation, and maintenance of your Faber FFSD 8PR 14S 14 Place Settings Free Standing Dishwasher. Please read these instructions thoroughly before using the appliance and keep them for future reference.

2. SAFETY INFORMATION

2.1 General Safety

- Ensure the dishwasher is properly grounded before use.
- Do not allow children to play with, on, or inside the dishwasher.
- Use only detergents and rinse aids specifically designed for automatic dishwashers.
- Keep all detergents and rinse aids out of the reach of children.
- Never open the door while the dishwasher is operating, especially during the hot wash cycle.
- Sharp items should be loaded with points down to prevent injury.

2.2 Electrical Safety

- Do not operate the dishwasher if the power cord is damaged. Contact qualified service personnel.
- Do not use extension cords or ungrounded adapters.
- Disconnect the appliance from the power supply before cleaning or performing any maintenance.

2.3 Water Safety

- Ensure water inlet and outlet pipes are securely connected to prevent leaks.
- The Electronic Aqua Stop feature provides leak protection.

3. PRODUCT OVERVIEW

The Faber FFSD 8PR 14S dishwasher is designed for modern households, offering efficient cleaning with advanced features.

3.1 Key Features

- **Capacity:** 14 Place Settings, suitable for families with up to 8 members.
- **Wash Programs:** 8 comprehensive wash cycles including Normal, Eco, 90 Minutes, Glass, Rapid, Soak (Pre-Wash), Auto Wash, and Intensive.
- **Controls:** User-friendly Electronic Push Button Panel with LED Display.
- **Racks:** Height-adjustable upper rack and foldable racks for flexible loading.
- **Noise Level:** Ultra-silent operation at 44 dB.
- **Efficiency:** Water Consumption 10–17 liters, Energy Consumption 1.0–1.6 kWh per cycle. Energy Efficiency Rating: A++ / A / A (Energy / Cleaning / Drying).
- **Indicators:** Salt and Rinse Aid Indicators for consistent performance.
- **Safety:** Electronic Aqua Stop for leak protection.

3.2 Components

The dishwasher includes:

- Upper and Lower Racks
- Cutlery Basket/Drawer
- Spray Arms (3D Wash system)
- Detergent and Rinse Aid Dispenser
- Salt Container
- Filter System

Wash **Smart,** Save More



Half Load



Dual Zone
function for
efficiency



Figure 1: Front view of the Faber FFSD 8PR 14S Dishwasher.



Figure 2: Side view with dimensions (845mm H x 598mm W x 600mm D) of the Faber FFSD 8PR 14S Dishwasher.

4. SETUP AND INSTALLATION

Your dishwasher comes with an Inlet Pipe and an Outlet Pipe for connection. Refer to the included User Manual for detailed installation instructions. Professional installation is recommended.

4.1 Placement

- Place the dishwasher on a level, stable surface.
- Ensure adequate clearance for door opening and closing.
- Avoid placing near heat sources or in direct sunlight.

4.2 Water Connections

- Connect the inlet pipe to a cold water supply with a minimum pressure of 0.04 MPa and a maximum of 1 MPa.
- Connect the outlet pipe to a drain system, ensuring it is properly secured to prevent backflow.

4.3 Electrical Connection

- Connect the dishwasher to a dedicated, grounded electrical outlet (230 Volts, 50 Hz).
- Do not use adapter plugs or extension cords.

5. OPERATING INSTRUCTIONS


Follow these steps for optimal washing results.

5.1 Loading the Dishwasher

- Scrape off large food particles from dishes before loading.
- Place larger items in the lower rack and smaller, delicate items in the upper rack.
- Utilize the height-adjustable upper rack and foldable racks to accommodate various dish sizes.
- Arrange cutlery in the Infinite Plus Cutlery Drawer or basket, ensuring items are separated to allow water to reach all surfaces.

FABER
FRANKE'S AIR EXPERT

Adjust **Racks** *for*
Every Need

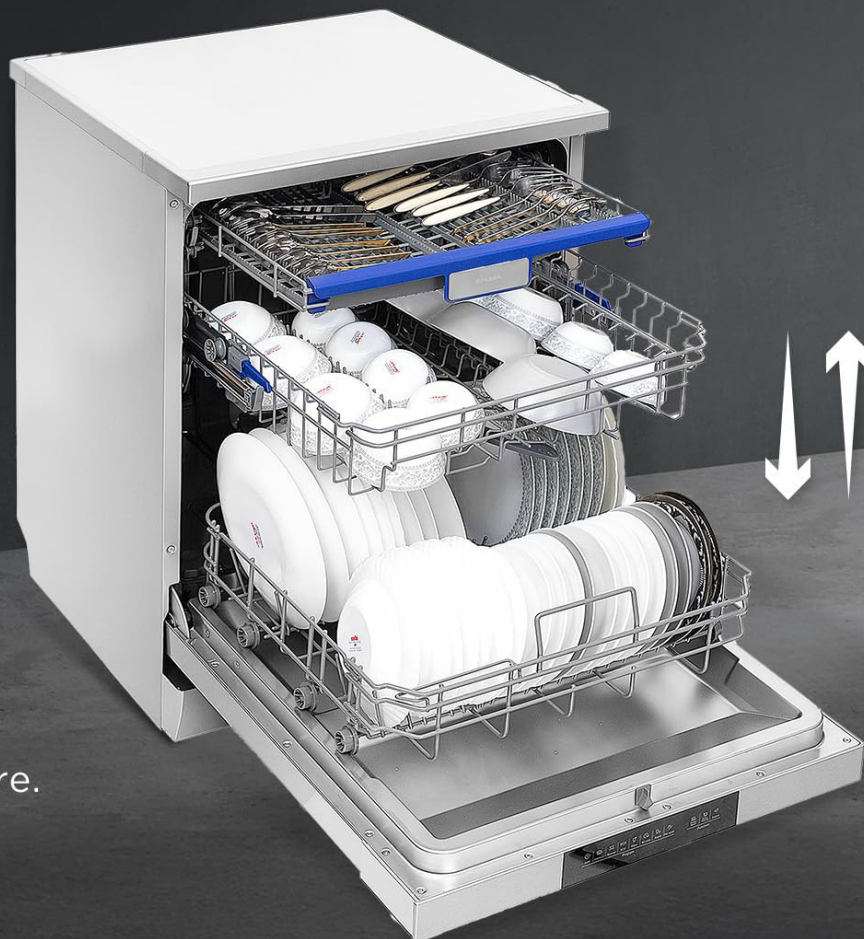

Fits all kinds
of Indian cookware.

Figure 3: Adjustable racks for flexible loading of various dish sizes.

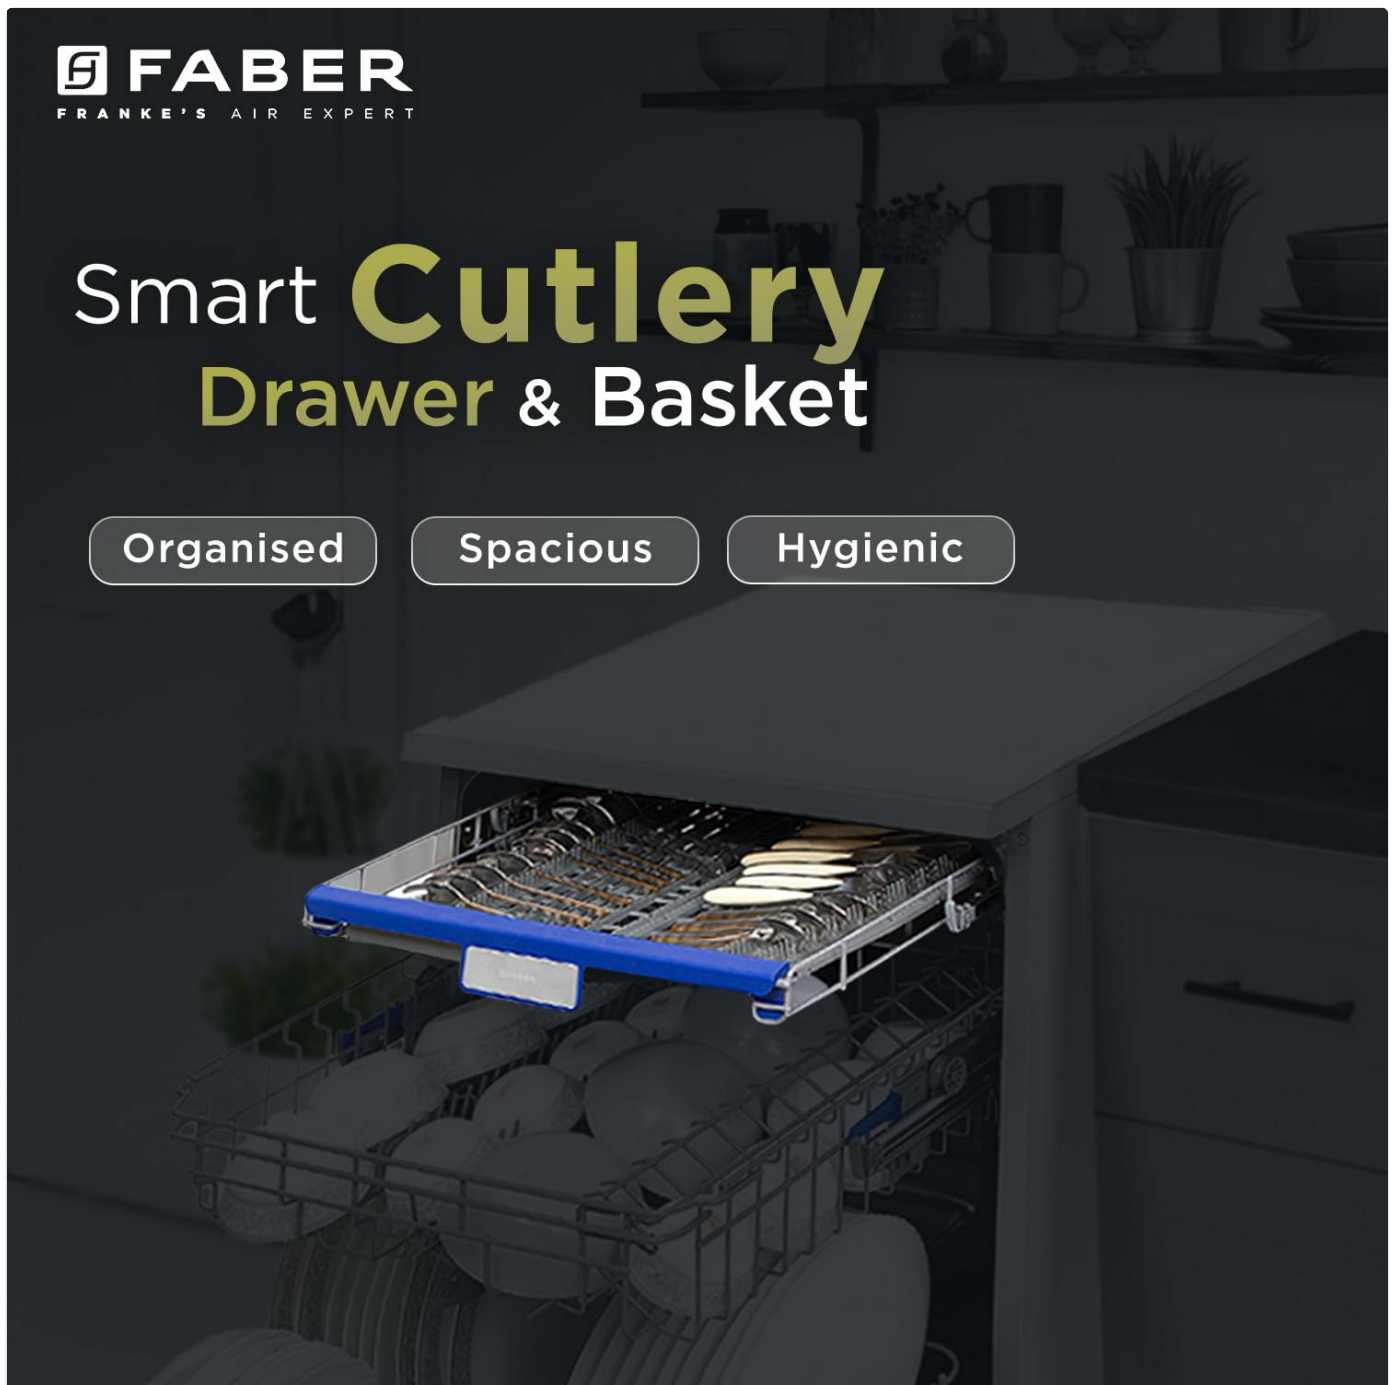


Figure 4: Smart cutlery drawer and basket for organized and hygienic cleaning.

5.2 Adding Detergent and Rinse Aid

- Fill the detergent dispenser with the appropriate amount of dishwasher detergent.
- Fill the rinse aid dispenser. The rinse aid indicator will alert you when a refill is needed.
- Add dishwasher salt to the salt container as indicated by the salt indicator.

5.3 Selecting a Wash Program

The dishwasher features 8 wash programs:

- **Auto Wash:** Smart sensing for optimal cleaning based on soil level.
- **Intensive:** Heavy-duty wash for pots, pans, and heavily soiled dishes.
- **Normal:** Standard daily cleaning for normally soiled dishes.
- **Eco:** Energy and water-saving mode for lightly to normally soiled dishes.

- **Glass:** Gentle wash for delicate glassware.
- **90 Minutes:** Efficient cleaning in a shorter time for moderately soiled dishes.
- **Rapid:** Quick clean for lightly soiled dishes.
- **Soak (Pre-Wash):** Pre-rinse for tough, dried-on stains.

Additional functions include Power Wash for extra soil, Extra Drying for serveware, and Express for smaller loads.

Your browser does not support the video tag.

Video 1: Demonstration of Faber Dishwasher features, including loading, controls, and 3D wash technology.

5.4 Delay Start Option

The delay start option allows you to set the dishwasher to begin a cycle at a later time, up to 24 hours, to match your schedule.

6. MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your dishwasher.

6.1 Cleaning the Filters

- Regularly check and clean the filter system to prevent blockages and ensure efficient cleaning.
- Remove food debris and rinse filters under running water.

6.2 Refilling Salt and Rinse Aid

- Monitor the salt and rinse aid indicators on the control panel.
- Refill when the indicators signal low levels to maintain wash quality and prevent water spots.

6.3 Exterior and Interior Cleaning

- Wipe the exterior with a soft, damp cloth.
- Clean the interior periodically with a dishwasher cleaner or a mixture of vinegar and baking soda to remove odors and mineral buildup.

7. TROUBLESHOOTING

Before contacting customer service, refer to the following common issues and solutions:

Problem	Possible Cause	Solution
Dishwasher does not start	Power supply issue, door not closed properly, program not selected.	Check power connection, ensure door is latched, select a wash program.
Dishes not clean	Improper loading, clogged spray arms/filters, insufficient detergent/rinse aid.	Reload dishes correctly, clean spray arms and filters, refill detergent/rinse aid.
Water remaining in tub	Clogged drain filter, kinked drain hose.	Clean drain filter, straighten drain hose.
Excessive noise	Improper loading, foreign object in pump.	Adjust loading, check for and remove foreign objects.

8. SPECIFICATIONS

- **Brand:** Faber
- **Model Name:** DISHWASHER FFSD 8PR 14S

- **Installation Type:** Freestanding
- **Product Dimensions (D x W x H):** 60D x 59.8W x 84.5H Centimeters
- **Capacity:** 14 Place Settings
- **Controls Type:** Fully Electronic
- **Noise Level:** 44 Decibels
- **Voltage:** 230 Volts
- **Operating Frequency:** 50 Hz
- **Display:** LED
- **Energy Consumption:** 1.0 - 1.6 kWh (per cycle)
- **Water Consumption:** 10 - 17 litres (per cycle)
- **Number Of Settings:** 8 (Wash Programs)
- **Material Type:** Stainless Steel
- **Finish Type:** Inox Finish
- **Item Weight:** 14000 Grams

9. WARRANTY AND SUPPORT

Your Faber FFSD 8PR 14S Dishwasher comes with a comprehensive warranty:

- **2-Year Comprehensive Warranty** on the product.
- **10-Year Warranty** on the cavity against rust through.

For service or support, please contact Faber customer care. Refer to your purchase documentation for specific contact details.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

Open the live page

<https://manuals.plus/asin/B07MHXJ9T5>

More documents and user manuals: <https://manuals.plus/>