

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [YAMAZAKI](#) /

› [YAMAZAKI Home Tall Slim Trash Can Model 4488 Instruction Manual](#)

YAMAZAKI 4488

YAMAZAKI Home Tall Slim Trash Can Model 4488 Instruction Manual

Model: 4488 | Brand: YAMAZAKI

INTRODUCTION

This manual provides essential information for the proper use and care of your YAMAZAKI Home Tall Slim Trash Can, Model 4488. Designed for efficiency and style, this waste basket is suitable for various spaces including kitchens, bathrooms, and offices.



Image: The YAMAZAKI Home Tall Slim Trash Can in white, showcasing its minimalist design.

SETUP

The YAMAZAKI Home Tall Slim Trash Can requires no assembly. Follow these steps to prepare it for use:

1. **Unpack:** Carefully remove the trash can from its packaging.
2. **Placement:** Position the trash can in your desired location. Its slim profile is ideal for narrow spaces.
3. **Insert Trash Bag:**
 - Remove the top frame of the trash can.
 - Place a standard 18" x 32" trash bag into the main body of the can.
 - Fold the edges of the trash bag over the rim of the main body.
 - Place the top frame back onto the trash can, ensuring the bag edges are secured and hidden by the interlocking design.

Your browser does not support the video tag.

Video: Product Demonstration Video. This video illustrates the process of inserting a trash bag and securing it with the top frame, highlighting the hidden bag feature and ease of use.



CONCEALED LINER DESIGN

Seamless top design keeps liners hidden for a clean, elevated look

Image: Close-up view of the trash can's top frame being placed over a trash bag, demonstrating the concealed liner design.

OPERATING INSTRUCTIONS

Using your YAMAZAKI Home Tall Slim Trash Can is straightforward:

- **Disposal:** Simply place waste into the open top of the trash can. The design ensures that the trash bag remains securely in place and its edges are hidden.
- **Emptying:** When the trash can is full, lift the top frame to access the trash bag. Use the rear handle on the main body of the can to easily lift and empty it.
- **Repositioning:** The integrated cutouts on the top frame allow for easy repositioning of the trash can as needed.

HIDDEN HANDLE, EASY TO MOVE

Reposition effortlessly
with integrated cutouts



Image: A hand demonstrating how to use the integrated handle for easy lifting and emptying of the trash can.

MAINTENANCE

To keep your trash can in optimal condition:

- **Cleaning:** Wipe clean with a soft, damp cloth. Ensure to wipe dry immediately to prevent water spots or rust, as the product is made of powder-coated steel.
- **Avoid Harsh Chemicals:** Do not use abrasive cleaners, scourers, or harsh chemical detergents, as these can damage the finish.
- **Regular Inspection:** Periodically check the rubber feet at the base to ensure they are intact and continue to protect your floors.

TROUBLESHOOTING

Here are solutions to common issues you might encounter:

- **Trash Bag Slippage:** Ensure the trash bag is properly folded over the rim and the top frame is securely placed, utilizing the interlocking design to hold the bag in place.
- **Unstable Placement:** Verify that the trash can is placed on a flat, even surface. The rubber feet are designed to provide stability and prevent slips.
- **Difficulty Cleaning:** For stubborn marks, use a mild soap solution with a soft cloth. Always rinse thoroughly and dry immediately.

SPECIFICATIONS

Feature	Detail
Brand	YAMAZAKI
Model Number	4488
Material	Powder-Coated Steel
Color	White
Capacity	7.25 Gallons (27 Liters)
Product Dimensions (L x W x H)	8.86" x 8.86" x 23.62"
Item Weight	7.72 lbs
Opening Mechanism	Open-Top
Special Features	Interlocking design, Padded base, Rear handle
Assembly Required	No
Recommended Bag Size	18" x 32"



8.86"

8.86"

6.68"

23.62"

Image: Diagram showing the precise dimensions of the YAMAZAKI Home Tall Slim Trash Can.

WARRANTY INFORMATION

This product is sold without an explicit warranty. For any concerns regarding manufacturing defects or issues upon arrival, please contact customer support immediately.

CUSTOMER SUPPORT

For further assistance, questions, or to explore other YAMAZAKI Home products, please visit the official YAMAZAKI Home store or contact their customer service:

- **Online Store:** [YAMAZAKI Home Amazon Store](#)
- **General Inquiries:** Refer to the contact information provided on the YAMAZAKI Home official website or product packaging.