



Manuals.plus /

› Megir /

› Megir M-2011-2 Chronograph Watch User Manual

## Megir M-2011-2

# Megir M-2011-2 Chronograph Watch User Manual

Model: M-2011-2

## 1. INTRODUCTION

---

This manual provides instructions for the proper use and care of your Megir M-2011-2 Chronograph Watch. Please read this manual thoroughly to ensure optimal performance and longevity of your timepiece. The Megir M-2011-2 features a durable stainless steel case, a comfortable leather band, a precise Japanese quartz movement, and a chronograph function with date display. It is designed for daily wear and offers water resistance up to 30 meters.



Image 1.1: Front view of the Megir M-2011-2 Chronograph Watch, showcasing the black dial, silver case, and black leather strap.

## 2. WATCH COMPONENTS

Familiarize yourself with the main components of your Megir M-2011-2 watch:

- **Crown:** Used for setting time and date.
- **Pushers (A & B):** Used to operate the chronograph function.
- **Hour, Minute, Second Hands:** Indicate the current time.
- **Date Window:** Displays the current date.
- **Chronograph Sub-dials:**
  - 24-hour sub-dial (top)

- Minute sub-dial (left)
- Second sub-dial (bottom)
- **Leather Band:** Secures the watch to your wrist.
- **Stainless Steel Case:** Protects the internal movement.



Image 2.1: Angled view of the watch, highlighting the crown and pushers on the side of the case.

### 3. SETUP AND INITIAL ADJUSTMENT

#### 3.1. Setting the Time

1. Pull the crown out to the second click position. The second hand will stop.
2. Rotate the crown to move the hour and minute hands to the desired time. Ensure the 24-hour sub-dial also aligns correctly with AM/PM.
3. Push the crown back into the normal position to start the watch.

### **3.2. Setting the Date**

1. Pull the crown out to the first click position.
2. Rotate the crown clockwise or counter-clockwise (depending on the movement) to set the correct date.
3. Push the crown back into the normal position.

*Note:* Avoid setting the date between 9:00 PM and 3:00 AM, as this can interfere with the automatic date change mechanism. If the date needs to be adjusted during this period, first set the time outside this range, adjust the date, then reset the time.

## **4. OPERATING THE CHRONOGRAPH**

---

The chronograph function allows you to measure elapsed time independently of the main time display.

### **4.1. Starting and Stopping the Chronograph**

1. Press the upper pusher (A) to start the chronograph. The chronograph second hand (large central second hand) will begin to move.
2. Press the upper pusher (A) again to stop the chronograph. The elapsed time will be indicated by the chronograph second, minute, and 24-hour sub-dials.

### **4.2. Resetting the Chronograph**

1. After stopping the chronograph (using pusher A), press the lower pusher (B) to reset all chronograph hands to their zero positions.

*Note:* Do not press the reset pusher (B) while the chronograph is running, as this can damage the movement.



Image 4.1: The Megir M-2011-2 watch displayed on a wooden surface, showing its full design.

## 5. MAINTENANCE AND CARE

### 5.1. Water Resistance

Your Megir M-2011-2 watch is water resistant up to 30 meters (3 ATM). This means it is suitable for daily use, such as splashes, rain, or accidental short immersion. It is **not** suitable for swimming, diving, or showering.

- Ensure the crown is always pushed in completely to maintain water resistance.
- Do not operate the crown or pushers while the watch is wet or submerged.
- Avoid exposing the watch to hot water or steam, as this can compromise the seals.

### 5.2. Cleaning

- Wipe the watch case and crystal with a soft, dry cloth.
- For the leather band, wipe with a slightly damp cloth and allow it to air dry completely. Avoid excessive moisture, direct sunlight, or harsh chemicals, as these can damage the leather.

### 5.3. Battery

The watch is powered by a product-specific battery, which is included. When the battery needs replacement, it is recommended to have it replaced by a qualified watch technician to ensure proper sealing and function.



Image 5.1: Rear view of the watch, showing the stainless steel back engraved with "MEGIR", "STAINLESS STEEL BACK", and "WATER RESISTANT M:2011".

## 6. TROUBLESHOOTING

- **Watch not running:**

Ensure the crown is fully pushed in. If the watch still does not run, the battery may need

replacement. Consult a professional watch technician.

- **Date not changing at midnight:**

The watch's 24-hour cycle might be misaligned. Advance the time by 12 hours (past noon/midnight) to correct the AM/PM setting, then reset the date if necessary.

- **Chronograph hands not resetting to zero:**

This may require a chronograph reset procedure. Pull the crown out to the second click position. Press pusher A to advance the chronograph second hand, and pusher B to advance the chronograph minute hand. Once all hands are at zero, push the crown back in. If this does not work, professional service may be required.

- **Water inside the watch:**

Immediately take the watch to a professional watch repair service. Do not attempt to open the watch yourself, as this can cause further damage.

## 7. SPECIFICATIONS

<b>Model Number</b>	M-2011-2
<b>Movement</b>	Japanese Quartz
<b>Case Material</b>	Stainless Steel
<b>Band Material</b>	Leather
<b>Case Diameter</b>	43 mm (4.3 cm)
<b>Case Thickness</b>	11 mm
<b>Band Width</b>	22 mm
<b>Band Length (with case)</b>	25 cm
<b>Water Resistance</b>	30 Meters (3 ATM)
<b>Weight</b>	140 g
<b>Battery</b>	1 Product Specific battery (included)



Image 7.1: Diagram illustrating the key dimensions of the Megir M-2011-2 watch, including case diameter, band width, case thickness, and band length.

## 8. WARRANTY AND SUPPORT

Specific warranty details for the Megir M-2011-2 Chronograph Watch are not provided within this manual. For warranty information, service, or support, please refer to the documentation included with your purchase or contact the retailer or manufacturer directly.