

[Manuals.plus](#) /

› [Salton](#) /

› Salton SF17021RN Retro Slow Cooker Instruction Manual

Salton SF17021RN

Salton SF17021RN Retro Slow Cooker

Instruction Manual

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before using this appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse the cord, plugs, or heating unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'OFF', then remove plug from wall outlet.
- Do not use appliance for other than intended use.

PRODUCT OVERVIEW

The Salton SF17021RN Retro Slow Cooker is designed for convenient and efficient cooking. It features a 3.5L (3.7 Quarts) capacity ceramic pot, a clear glass lid, and multiple heat settings to suit various recipes.



The Salton SF17021RN Retro Slow Cooker, shown here in a kitchen environment, highlighting its design and size.

Components:

- Heating Base Unit
- Removable Ceramic Pot (3.5L / 3.7 Quarts)
- Glass Lid
- Control Knob with OFF, LOW, HIGH, AUTO settings

SETUP

Before First Use:

1. Unpack the slow cooker and remove all packaging materials.
2. Wash the ceramic pot and glass lid in warm, soapy water. Rinse thoroughly and dry completely.
3. Wipe the exterior of the heating base unit with a damp cloth. Do not immerse the heating base in water.

4. Ensure all parts are dry before assembly and use.

Placement:

Place the slow cooker on a flat, stable, heat-resistant surface, away from walls and other appliances to allow for proper ventilation.

OPERATING INSTRUCTIONS

The slow cooker features a control knob with four settings: OFF, LOW, HIGH, and AUTO. It also includes a 'Keep Warm' function.



Close-up view of the control knob, indicating the 'OFF', 'HIGH', 'LOW', and 'AUTO' settings.

Cooking Settings:

- **OFF:** Turns the appliance off.
- **LOW:** Gently simmers food for extended periods. Ideal for dishes requiring 6-8 hours of cooking.
- **HIGH:** Cooks food faster than the LOW setting. Suitable for dishes requiring 3-4 hours of cooking, or for browning meats before slow cooking.
- **AUTO:** Starts cooking on the HIGH setting for a period, then automatically switches to LOW for the remainder of the cooking time. This is useful for recipes that benefit from an initial higher heat.
- **KEEP WARM:** After cooking is complete, the slow cooker can be set to 'Keep Warm' to maintain the food at an ideal

serving temperature without further cooking.

General Use:

1. Prepare your ingredients and place them into the ceramic pot. Do not fill the pot more than two-thirds full.
2. Place the ceramic pot into the heating base unit.
3. Cover with the glass lid.
4. Plug the slow cooker into a suitable electrical outlet.
5. Turn the control knob to your desired setting (LOW, HIGH, or AUTO).
6. Cook for the recommended time according to your recipe. Avoid lifting the lid frequently, as this releases heat and extends cooking time.
7. Once cooking is complete, you may switch to the 'Keep Warm' setting if desired, or turn the knob to 'OFF' and unplug the appliance.

Refer to the included 32-page recipe booklet for specific cooking times and recipe ideas.

CARE AND MAINTENANCE

Cleaning:

- Always unplug the slow cooker and allow it to cool completely before cleaning.
- The ceramic pot and glass lid are dishwasher safe. Alternatively, they can be washed by hand in warm, soapy water. Avoid abrasive cleaners or scouring pads that could damage the surfaces.
- Wipe the exterior of the heating base unit with a soft, damp cloth. Do not use abrasive cleaners. Never immerse the heating base in water or any other liquid.
- Ensure all parts are thoroughly dry before storing.

Storage:

Store the slow cooker in a dry place. You can store the ceramic pot and lid inside the heating base unit to save space.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet not working; control knob not set.	Ensure the appliance is securely plugged into a working outlet. Check the control knob is set to LOW, HIGH, or AUTO.
Food is not cooking properly.	Lid lifted too often; incorrect setting; insufficient cooking time.	Avoid lifting the lid during cooking. Ensure the correct heat setting is selected for the recipe. Increase cooking time as needed.
Food is sticking to the ceramic pot.	Lack of liquid; food cooked too long on high heat.	Ensure adequate liquid is used in the recipe. Consider using the LOW or AUTO setting for longer cooking times.

SPECIFICATIONS

- **Brand:** Salton
- **Model:** SF17021RN

- **Capacity:** 3.5 Liters (3.7 Quarts)
- **Wattage:** 200 watts
- **Voltage:** 220 Volts
- **Material:** Ceramic Pot, Glass Lid, Color-coated Iron Exterior
- **Control Type:** Knob with OFF, LOW, HIGH, AUTO settings
- **Dimensions:** Approximately 15.4 x 11.1 x 8.5 inches
- **Dishwasher Safe:** Ceramic pot and glass lid are dishwasher safe.

WARRANTY AND SUPPORT

This product is covered by a manufacturer's warranty against defects in material and workmanship. For specific warranty details, duration, and terms, please refer to the warranty card included with your purchase or contact Salton customer support.

If you experience any issues with your Salton SF17021RN Retro Slow Cooker or require technical assistance, please contact Salton customer service. Contact information can typically be found on the manufacturer's website or in the product packaging.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

Open the live page

<https://manuals.plus/asin/B07MJXKYPW>

More documents and user manuals: <https://manuals.plus/>