

Camper K200781

Camper TRISHA K200781 Women's Plain Toe Shoes User Manual

Model: K200781

INTRODUCTION

This manual provides comprehensive instructions for the Camper TRISHA K200781 women's plain toe shoes. These mid-heel shoes feature a smooth upper, a unique cut, and an outsole designed for both comfort and style. They offer excellent cushioning and lightweight wear, making them suitable for various everyday styles. Please read this manual carefully to ensure proper use and maintenance of your footwear.

SETUP AND FIRST USE

Upon receiving your Camper TRISHA K200781 shoes, follow these steps for initial preparation:

1. **Unboxing:** Carefully remove the shoes from their packaging. Inspect them for any signs of damage or manufacturing defects.
2. **Initial Inspection:** Check the overall condition of the shoes, including the stitching, sole, and upper material. Ensure both shoes are present and match.
3. **Try-On:** Wear the shoes indoors on a clean surface to assess the fit and comfort. Ensure there is adequate space for your toes and that the heel feels secure.



Image: Front-side view of the Camper TRISHA K200781 shoes.



Image: Back view of the Camper TRISHA K200781 shoe.

The shoes are designed for immediate wear after unboxing. No complex assembly or charging is required.

OPERATING (WEARING INSTRUCTIONS)

The Camper TRISHA K200781 shoes are designed for comfortable everyday wear. Follow these guidelines for optimal use:

- **Proper Fit:** Ensure the shoes fit snugly but comfortably. An improper fit can lead to discomfort or premature wear.
- **Walking Surface:** These shoes are suitable for various urban and indoor surfaces. Exercise caution on slippery or uneven terrain.
- **Break-in Period:** While designed for comfort, a short break-in period may be beneficial for some users to allow the material to conform to your foot shape.



Image: Front view of the Camper TRISHA K200781 shoe.



Image: Top view of the Camper TRISHA K200781 shoe.

The shoes feature a slip-on design for ease of wear. The platform height is 1.5 cm, providing a subtle lift.

MAINTENANCE AND CARE

Proper care will extend the life and appearance of your Camper TRISHA K200781 shoes. The material composition is sheepskin for the upper and a synthetic sole.

- **Cleaning the Upper (Sheepskin):**

- Gently wipe the surface with a soft, damp cloth to remove dust and light dirt.
- For tougher stains, use a specialized leather cleaner suitable for sheepskin, following the product's instructions.
- Avoid harsh chemicals or abrasive materials, as these can damage the leather.
- Allow shoes to air dry naturally away from direct heat or sunlight.

- **Cleaning the Sole (Synthetic):**

- Wipe the synthetic sole with a damp cloth and mild soap if necessary.
- Rinse with a clean damp cloth and allow to air dry.

- **Storage:**

- Store shoes in a cool, dry place away from direct sunlight.
- Use shoe trees to help maintain their shape and absorb moisture.
- If storing for extended periods, place them in a breathable shoe bag.



Image: Bottom view of the Camper TRISHA K200781 shoe sole.

Regular maintenance ensures the longevity and aesthetic appeal of your footwear.

TROUBLESHOOTING

Here are some common issues and their potential solutions:

Problem	Possible Cause	Solution
Discomfort or rubbing	Incorrect size, new shoes not broken in, or specific foot shape.	Ensure correct size. Allow for a break-in period. Consider using thin socks or foot cushions.
Scuffs or minor marks on leather	Accidental contact with surfaces.	Gently clean with a damp cloth. For deeper scuffs, use a leather conditioner or polish suitable for sheepskin.
Slippery sole	New sole, wet surface, or worn-out tread.	Exercise caution on wet surfaces. New soles may become less slippery with wear. If tread is worn, consider professional resoling.

If you encounter issues not listed here or require further assistance, please contact Camper customer support.

SPECIFICATIONS

Detailed specifications for the Camper TRISHA K200781 shoes:

- **Model Number:** K200781
- **Department:** Women
- **Material Composition (Upper):** Sheepskin
- **Sole Material:** Synthetic sole
- **Platform Height:** 1.5 cm (0.6 inches)
- **Closure Type:** Slip-on
- **Product Dimensions:** 1 x 1 x 1 cm (packaging dimensions, actual shoe dimensions vary by size)
- **Item Weight:** 860 g (for the pair, varies by size)
- **Manufacturer:** CAMPER
- **Date First Available:** 7 July 2022



Image: Right side profile of the Camper TRISHA K200781 shoe.

WARRANTY AND SUPPORT

Camper products are manufactured to high-quality standards. For information regarding warranty coverage, returns, or customer support, please refer to the official Camper website or contact your retailer.

Official Website: www.camper.com

Please retain your proof of purchase for any warranty claims or support inquiries.

© 2024 Camper. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question