

iball SoundPunch

iBall SoundPunch Portable Bluetooth Speaker

MODEL: SOUNDPUNCH

Introduction

This manual provides detailed instructions for the setup, operation, and maintenance of your iBall SoundPunch Portable Bluetooth Speaker. Please read this manual thoroughly before using the device to ensure proper functionality and to prevent damage.

Safety Information

- Do not expose the speaker to extreme temperatures or direct sunlight for extended periods.
- Avoid dropping or subjecting the speaker to strong impacts.
- Keep the speaker away from water and liquids, despite its waterproof rating, to prevent internal damage.
- Do not attempt to disassemble or modify the speaker. This will void the warranty.
- Use only the provided charging cable or a certified equivalent.
- Clean the speaker with a soft, dry cloth. Do not use harsh chemicals or abrasive cleaners.

Package Contents

Verify that all items are present in the package:

- iBall SoundPunch Portable Bluetooth Speaker
- USB Charging Cable
- AUX Cable
- User Manual

Product Overview

The iBall SoundPunch is a portable Bluetooth speaker designed for versatile audio playback. It features a robust design and multiple connectivity options.

Design and Portability

The speaker is constructed with a durable metal enclosure and is designed to be lightweight for easy transport. It is available in Starry Grey and Piano Black colors. The device is also waterproof, offering enhanced durability for outdoor use.



Image: Front view of the iBall SoundPunch Portable Bluetooth Speaker, showcasing its compact and portable design.

Audio Performance

The SoundPunch speaker delivers stereo audio output, designed to provide room-filling sound. It features dynamic drivers with a 1-inch tweeter driver diameter for clear audio reproduction.

Connectivity Options

The speaker offers multiple ways to play your music:

- **Bluetooth:** Wireless connection to smartphones, tablets, and other Bluetooth-enabled devices.
- **USB:** Play audio files directly from a USB drive.
- **MicroSD:** Play audio files from a MicroSD card.
- **FM Radio:** Built-in FM radio for listening to local stations.
- **AUX Input:** Wired connection via a 3.5 mm audio jack for devices without Bluetooth.



**POWERFUL,
YET WEIGHTLESS**

Feeling like that a little? iBall SoundPunch portable speaker gives you the freedom to carry your music wherever you go.

**GO STARRY OR CLASSIC
TAKE A PICK**

Available in two colours: Starry Grey and Pure Black

**MULTIPLE WAYS TO
YOUR MUSIC**

Play Music wirelessly with the multiple playback options - Bluetooth® | USB | MicroSD | FM Radio | AUX Input

*With the 3.5 mm jack, connect to smartphone/ tablet/ PC also get grooving the wired way.

**GO
HANDS-FREE**

Comes with a built-in Mic for hands-free calling in Bluetooth® mode. iBall SoundPunch lets you connect with your beloved without the need to hold your phone. Just chill, and let the "punch" take care of it.

PLAY ALL DAY

With built-in rechargeable battery, this portable speaker is built to be with you, whenever you go.

Playback Time **8 hours**
*on Half Volume

Image: The iBall SoundPunch speaker shown in an outdoor environment, highlighting its portability and suitability for various listening scenarios.

Hands-Free Calling

A built-in microphone allows for hands-free calling when connected via Bluetooth, enabling you to answer calls directly through the speaker.

Battery Life

The speaker is equipped with a rechargeable battery, providing approximately 8 hours of playback time at half volume.

Setup

1. Charging the Speaker

1. Connect the small end of the USB charging cable to the charging port on the speaker.
2. Connect the large end of the USB charging cable to a USB power adapter (not included) or a computer's USB port.
3. The charging indicator light will illuminate. Once fully charged, the light may change color or turn off.

2. Powering On/Off

- To power on, press and hold the Power button until you hear an audible indication.
- To power off, press and hold the Power button again until the speaker shuts down.

3. Bluetooth Pairing

1. Ensure the speaker is powered on and in Bluetooth mode (indicated by a flashing LED). If not, press the Mode button to switch to Bluetooth.
2. On your mobile device, enable Bluetooth and search for available devices.
3. Select "iBall SoundPunch" from the list of devices.
4. Once paired, the speaker will provide an audible confirmation, and the LED indicator will stop flashing.

4. Wired Connections (AUX, USB, MicroSD)

- **AUX Input:** Connect one end of the 3.5mm AUX cable to the speaker's AUX port and the other end to your audio device's headphone jack. The speaker will automatically switch to AUX mode or require a press of the Mode button.
- **USB/MicroSD:** Insert a USB drive or MicroSD card into the respective port. The speaker will automatically detect and begin playing audio files, or you may need to press the Mode button to select the correct input.

5. FM Radio Tuning

1. Press the Mode button to switch to FM Radio mode.
2. Press the Play/Pause button to initiate an automatic scan for available FM stations. The speaker will save detected stations.
3. Use the Previous/Next track buttons to navigate between saved stations.

Operating Instructions

Button Functions

The speaker features several control buttons. While specific labels may vary, common functions include:

- **Power Button:** Press and hold to power on/off.
- **Mode Button:** Short press to switch between Bluetooth, AUX, USB, MicroSD, and FM Radio modes.
- **Play/Pause Button:** Short press to play or pause music. In FM mode, short press to auto-scan.
- **Volume Up/Next Track Button:** Short press for next track/station. Long press to increase volume.
- **Volume Down/Previous Track Button:** Short press for previous track/station. Long press to decrease volume.

Call Management

- **Answer Call:** Short press the Play/Pause button when a call comes in.
- **End Call:** Short press the Play/Pause button during a call.
- **Reject Call:** Long press the Play/Pause button when a call comes in.

Music Playback

- Ensure the speaker is in the desired mode (Bluetooth, AUX, USB, MicroSD).
- Use the Play/Pause button to control playback.
- Adjust volume using the Volume Up/Down buttons.
- Navigate tracks using the Next/Previous track buttons.

Maintenance

Cleaning

Wipe the speaker's exterior with a soft, dry, lint-free cloth. Do not use liquid cleaners, aerosols, or solvents.

Storage

When not in use for extended periods, store the speaker in a cool, dry place away from direct sunlight and extreme temperatures. It is recommended to charge the battery periodically to maintain its health.

Battery Care

To prolong battery life, avoid fully discharging the speaker frequently. Charge the speaker regularly, even if not in active use.

Troubleshooting

Problem	Possible Solution
Speaker does not power on.	Ensure the battery is charged. Connect the speaker to a power source and try again.
No sound from the speaker.	Check the volume level on both the speaker and the connected device. Ensure the correct input mode is selected (Bluetooth, AUX, USB, MicroSD).

Problem	Possible Solution
Bluetooth pairing fails.	Ensure the speaker is in Bluetooth pairing mode. Disable and re-enable Bluetooth on your device. Move the speaker closer to your device. Clear previous Bluetooth connections on your device.
FM Radio not working or poor reception.	Ensure the speaker is in FM mode. Perform an auto-scan for stations. Move the speaker to a location with better signal reception.
Short battery life.	Ensure the speaker is fully charged before use. High volume levels can reduce battery life.

Specifications

- **Brand:** iball
- **Model Name:** SoundPunch
- **Connectivity Technology:** Bluetooth
- **Audio Output Mode:** Stereo
- **Mounting Type:** Tabletop Mount
- **Material:** Metal
- **Speaker Type:** Outdoor
- **Product Features:** Portable
- **Colour:** Gray
- **Is Waterproof:** TRUE
- **Control Method:** Touch
- **Tweeter Driver Diameter:** 1 Inches
- **Network Connectivity Technology:** Bluetooth
- **Wireless Technology Type:** Bluetooth
- **Connectivity Protocol:** Bluetooth
- **Audio Driver Type:** Dynamic Driver
- **Number of Audio Channels:** 2.1
- **Compatible Devices:** Smartphone, Tablet
- **Power Source:** Battery Powered
- **Number of Batteries:** 1 A batteries required (included)

Warranty and Support

Warranty Information

The iBall SoundPunch Portable Bluetooth Speaker comes with a limited manufacturer's warranty. Please refer to the warranty card included in your package for specific terms, conditions, and duration. Keep your purchase receipt as proof of purchase for warranty claims.

Customer Support

For technical assistance, troubleshooting beyond this manual, or warranty inquiries, please contact iBall customer support. Contact details can typically be found on the official iBall website or on the product packaging.