

Thomson MIC201IDABBT

Thomson MIC201IDABBT Home Audio System User Manual

Model: MIC201IDABBT

1. INTRODUCTION

This manual provides detailed instructions for the safe and efficient operation of your Thomson MIC201IDABBT Home Audio System. Please read this manual thoroughly before using the device and retain it for future reference. This system is designed for home use, offering a variety of audio playback options including DAB+ and FM radio, CD playback, Bluetooth connectivity, USB media playback, and wireless charging.

2. SAFETY INSTRUCTIONS

Always follow basic safety precautions when using this appliance to reduce the risk of fire, electric shock, and personal injury.

- Do not expose this appliance to rain or moisture.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the appliance.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this appliance during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

3. PACKAGE CONTENTS

Verify that all items are present upon unpacking:

- Thomson MIC201IDABBT Home Audio System
- Remote Control (requires LR03 batteries, not included)
- Power Cable
- User Manual

4. PRODUCT OVERVIEW

Front Panel and Controls



This image displays the front panel of the Thomson MIC201IDABBT system. Visible features include the central digital display, various control buttons for playback and mode selection, the CD loading tray, two USB ports (one for charging, one for music playback), and a 3.5mm headphone jack. The system features a white front panel with a light wood-grain casing.

Top Panel and Wireless Charging



This image shows the top surface of the Thomson MIC201IDABBT system, highlighting the integrated wireless charging pad. A smartphone is positioned on the charging pad, demonstrating its functionality. The system's light wood-grain finish is prominent in this view.

5. SETUP

5.1 Power Connection

1. Ensure the system is placed on a stable, flat surface.
2. Connect the power cable to the AC IN socket on the rear of the unit.
3. Plug the other end of the power cable into a standard 220V AC wall outlet.

5.2 Antenna Connection

For optimal DAB+ and FM radio reception, ensure the integrated antenna is fully extended and positioned for best signal quality.

5.3 Initial Setup

Upon first power-on, the system may automatically initiate a DAB+ station scan. Allow this process to complete for a full list of available stations.

6. OPERATING INSTRUCTIONS

6.1 Power On/Off

Press the **POWER** button on the unit or remote control to turn the system on or off.

6.2 Source Selection

Press the **SOURCE** button repeatedly on the unit or remote control to cycle through available input modes: DAB+, FM, CD, Bluetooth, USB, AUX.

6.3 DAB+ Radio Operation

1. Select DAB+ mode using the **SOURCE** button.
2. The system will perform an automatic scan for stations.
3. Use the **PREV/NEXT** buttons to navigate through the list of available stations.
4. To save a station as a preset, press and hold the **PRESET** button, then use **PREV/NEXT** to select a preset number (1-20) and press **ENTER** to confirm.
5. To recall a preset, briefly press the **PRESET** button, then use **PREV/NEXT** to select the desired preset and press **ENTER**.

6.4 FM Radio Operation

1. Select FM mode using the **SOURCE** button.
2. Press and hold the **SCAN** button for automatic station search. The system will stop at the next strong signal.
3. Briefly press **PREV/NEXT** to manually tune the frequency.
4. Saving and recalling presets works similarly to DAB+ mode.

6.5 CD Player Operation

1. Select CD mode using the **SOURCE** button.
2. Gently insert a CD into the CD tray with the label side facing up. The system will automatically load the CD.
3. Use **PLAY/PAUSE**, **STOP**, **PREV/NEXT** buttons for playback control.

6.6 Bluetooth Pairing

1. Select Bluetooth mode using the **SOURCE** button. The display will show "PAIRING" or similar.
2. On your Bluetooth-enabled device (e.g., smartphone), enable Bluetooth and search for available devices.
3. Select "MIC201IDABBT" from the list.
4. Once paired, you can play audio from your device through the system.

6.7 USB Playback

1. Insert a USB flash drive containing MP3 audio files into the USB MUSIC port.
2. Select USB mode using the **SOURCE** button.
3. The system will automatically detect and begin playing MP3 files.
4. Use playback controls (**PLAY/PAUSE**, **STOP**, **PREV/NEXT**) as needed.

6.8 Auxiliary Input

1. Connect an external audio device (e.g., MP3 player) to the AUX IN jack using a 3.5mm audio cable (not supplied).
2. Select AUX mode using the **SOURCE** button.
3. Control playback from your external device.

6.9 Wireless Charging

1. Place your Qi-compatible smartphone or device on the wireless charging pad located on the top of the unit.
2. Ensure the device is centered on the charging pad for optimal charging.
3. The device's screen or an indicator light will confirm charging has begun.

6.10 Equalizer

The system includes an equalizer function. Press the **EQ** button on the remote control to cycle through various preset sound modes (e.g., Flat, Classic, Rock, Pop, Jazz).

6.11 Remote Control

The included remote control allows for convenient operation of all system functions from a distance. Ensure LR03 batteries are correctly inserted.

7. MAINTENANCE

7.1 Cleaning

Wipe the unit with a soft, dry cloth. Do not use abrasive cleaners, waxes, or solvents as they may damage the finish. Ensure the unit is unplugged before cleaning.

7.2 Storage

If the unit is not used for an extended period, unplug it from the power outlet and store it in a cool, dry place, away from direct sunlight and extreme temperatures.

8. TROUBLESHOOTING

- **No Power:** Check if the power cable is securely connected to both the unit and the wall outlet. Ensure the outlet is functional.

- **No Sound:** Check the volume level. Ensure the correct source is selected. If using an external device via AUX or Bluetooth, check its volume.
- **Poor Radio Reception:** Adjust the position of the antenna. Try moving the unit to a different location to improve signal.
- **CD Not Playing:** Ensure the CD is clean and free of scratches. Insert the CD correctly with the label side up.
- **Bluetooth Pairing Issues:** Ensure the unit is in Bluetooth mode and discoverable. Make sure your device is within range and not connected to another Bluetooth device.
- **Wireless Charging Not Working:** Ensure your device is Qi-compatible and correctly centered on the charging pad. Remove any thick cases that might interfere with charging.
- **Remote Control Not Working:** Check and replace the batteries (LR03). Ensure there are no obstructions between the remote and the unit's sensor.

9. SPECIFICATIONS

- **Model:** MIC201IDABBT
- **Type:** Micro Chain Music System for Home Use
- **Color:** White, Wood
- **Output Power:** 60W RMS
- **Radio Tuner:** Digital DAB+, FM with Auto Scan
- **Presets:** 20 stations
- **Connectivity:** Bluetooth, USB 2.0 (1 port), Auxiliary Input (3.5mm), Headphone Output (3.5mm)
- **Media Playback:** CD Player, MP3 via USB
- **Special Features:** Integrated Speakers, Wireless Charging, Equalizer, Remote Control
- **Power Source:** AC (220V)
- **Weight:** 2.87 Kilograms

10. WARRANTY AND SUPPORT

Thomson products are manufactured to high standards and are warranted against defects in materials and workmanship. For specific warranty terms and conditions, please refer to the warranty card included with your product or contact your local retailer. For technical support or service inquiries, please visit the official Thomson website or contact their customer service department.

