

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Wonder Creature](#) /
- › [Wonder Creature Cat Water Fountain User Manual](#)

Wonder Creature B808

Wonder Creature Cat Water Fountain User Manual

Model: B808

1. INTRODUCTION

Thank you for choosing the Wonder Creature Cat Water Fountain. This automatic pet fountain is designed to provide fresh, filtered water for your cats and dogs, encouraging them to drink more and stay hydrated. Featuring a durable stainless steel lid, quiet pump, and LED water level indicator, this fountain offers convenience and promotes your pet's health.



Figure 1: Wonder Creature Cat Water Fountain



Figure 2: The 360-degree design is suitable for multi-pet households.

2. PRODUCT COMPONENTS

The Wonder Creature Cat Water Fountain comes with the following components:

- 1 x Fountain Unit (Bowl with Water Level Window)
- 1 x Stainless Steel Lid
- 1 x DC Pump
- 1 x Power Adapter
- 1 x Flower Spout (Stamen and Spout parts)
- 1 x Carbon Filter
- 1 x Pre-filter Sponge



Figure 3: Included components of the fountain.

Keep Water Fresh & Cooler Than Normal Pet Bowl



Figure 4: Detailed breakdown of fountain parts including filters and pump.

3. SETUP INSTRUCTIONS

Setting up your Wonder Creature Cat Water Fountain is quick and easy:

1. **Clean Components:** Before first use, thoroughly rinse all parts of the fountain (except the pump and adapter) with water.
2. **Install Pump:** Place the DC pump into the designated slot at the bottom of the fountain bowl. Ensure the power cord is routed through the provided channel.
3. **Attach Pre-filter Sponge:** Attach the pre-filter sponge to the pump intake to catch hair and debris.
4. **Place Filter:** Insert the round carbon filter into the filter holder. The filter should be rinsed under running water before initial use.
5. **Assemble Lid:** Place the stainless steel lid onto the fountain bowl, ensuring it sits securely.
6. **Install Spout:** Insert the flower spout (stamen and spout parts) into the center opening of the stainless steel lid.

7. **Fill with Water:** Fill the fountain with water up to the 'MAX' level indicated on the water level window. Do not overfill.
8. **Connect Power:** Plug the power adapter into a wall outlet. The fountain will begin operating.

4. OPERATION

The Wonder Creature Cat Water Fountain provides continuous fresh water for your pets. It features a transparent water level window with an LED light, allowing you to easily monitor the water level day or night.



Figure 5: Transparent water level window with LED light for easy monitoring.

The fountain offers **3 different drinking modes** by adjusting the flower spout:

- **Flower Waterfall:** Provides multiple streams of water, mimicking a natural waterfall.
- **Flower Bubble:** Creates a bubbling effect at the top, attracting pets with gentle movement.
- **Gentle Fountain:** A calm, flowing surface for pets who prefer stiller water.

3 Different Flow Designs

Clear & Fresh High Quality Stainless Steel



- **Flower waterfall**



- **Flower bubble**



- **Gentle fountain**

Figure 6: Choose from three distinct water flow designs.

The pump operates at a whisper-quiet level, staying below 40 decibels, ensuring it does not disturb your pets or household.

Extremely quiet



20dB
Rustling leaves



30dB
Wonder Creature



40dB
Whisper



Operation $\leq 30\text{dB}$

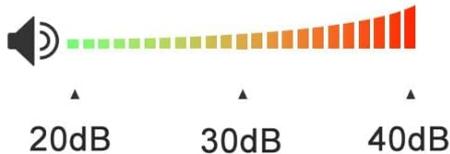


Figure 7: The fountain operates at an extremely quiet level, typically below 30dB.

5. MAINTENANCE

Regular cleaning and maintenance are crucial for the longevity of your fountain and the health of your pets.

5.1 Cleaning the Fountain

- **Weekly Cleaning:** Disassemble all parts of the fountain (except the pump and adapter) and wash them thoroughly with mild soap and water. Rinse completely to remove any soap residue.
- **Pump Cleaning:** The pump should be cleaned regularly (e.g., every 2-4 weeks) to prevent mineral buildup and ensure optimal performance. Disassemble the pump by removing the pump cover, impeller cap, and impeller. Clean all parts with a small brush and rinse thoroughly.



Figure 8: Disassemble the pump for thorough cleaning.

5.2 Filter Replacement

- The carbon filter should be replaced every 2-4 weeks, or more frequently if you have multiple pets or if the water appears dirty.
- The pre-filter sponge should be replaced every 1-2 months, or when it appears clogged with debris.
- Always rinse new filters thoroughly before placing them in the fountain.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Fountain not flowing / Weak flow	Low water level; Clogged pump or filter; Kinked tubing.	Refill water to MAX level; Clean pump and replace filter; Check and straighten tubing.
Fountain is noisy	Low water level; Debris in pump impeller; Pump not properly seated.	Add water; Clean pump impeller (refer to Maintenance section); Ensure pump is securely placed.
Water tastes or smells bad	Filter needs replacement; Fountain needs cleaning.	Replace carbon filter; Thoroughly clean all fountain components.

7. SPECIFICATIONS

- **Model Number:** B808
- **Capacity:** 2.4 Liters (81 oz)
- **Material:** Stainless Steel, Plastic (BPA-Free)
- **Item Dimensions (LxWxH):** 7.48 x 7.48 x 6.29 inches
- **Item Weight:** 1.7 pounds
- **Power:** Low-voltage DC pump (below 40 decibels)
- **Features:** LED Water Level Window, 3 Flow Designs, Replaceable Carbon Filter, Pre-filter Sponge

 Ultra quiet



 Long life span

 1.5W Low consumption

 4 suction cups at the bottom

 FCC Certification

Figure 9: Key features and benefits of the fountain.

8. WARRANTY AND SUPPORT

The Wonder Creature Cat Water Fountain comes with a **1-year limited warranty** from the date of purchase. This warranty covers manufacturing defects and issues arising from normal use.

For warranty claims, technical support, or any questions regarding your product, please contact Wonder Creature customer service through their official channels or visit the [Wonder Creature Store on Amazon](#).