

[Manuals.plus](#) /

› [UpStart Components](#) /

› Replacement for RCA 3-Device Universal Remote Control Palm Sized - Compatible with Daewoo TV - Remote Code 0451, 1661, User Manual

UpStart Components RC-RCR503BZ-DL20

User Manual

UPSTART COMPONENTS REPLACEMENT FOR RCA 3-DEVICE UNIVERSAL REMOTE CONTROL

Model: RC-RCR503BZ-DL20

Introduction

This manual provides comprehensive instructions for the setup, operation, and maintenance of your UpStart Components Replacement for RCA 3-Device Universal Remote Control. This remote is designed for ease of use and compatibility with various home entertainment devices.

Setup

Follow these steps to prepare your universal remote control for use.

1. Battery Installation

The remote requires two (2) AAA batteries (not included).

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align with the markings inside the compartment.
4. Replace the battery compartment cover until it clicks securely into place.



Components



Image: Back view of the remote control, illustrating the battery compartment location.

2. Initial Use (No Programming Needed)

This replacement remote control is designed for quick use without the need for complex programming for compatible devices. Simply install the batteries, and it should be ready to operate your device. If your device is a Daewoo TV, specific codes (0451, 1661) are often associated with compatibility, though this remote is designed to work out of the box for many RCA 3-device universal remote applications.

For specific device setup or if the remote does not respond, refer to the "Troubleshooting" section or consult the original device's manual for remote code search procedures if applicable, though this remote is generally plug-and-play.

Operating Instructions

This universal remote control is designed to operate up to three different devices, typically including a TV, a

Satellite/Cable/DTC box, and a DVD/VCR player. Familiarize yourself with the button layout and their functions.



Image: Front view of the universal remote control, displaying all buttons and their labels.

Button Functions:

- **POWER** (Red button): Turns the selected device on or off.
- **SAT-CBL-DTC DVD-VCR / TV**: Device selection buttons. Press to select the device you wish to control.
- **CODE SEARCH**: Used for programming or searching for device codes (if manual programming is ever required).
- **VOL+ / VOL-**: Increases or decreases the volume.

- **CHAN+ / CHAN-**: Changes the channel up or down.
- **MUTE**: Silences the audio.
- **MENU**: Accesses the on-screen menu of the selected device.
- **GO BACK**: Returns to the previous channel or menu screen.
- **SLEEP**: Activates the sleep timer function on compatible devices.
- **Number Buttons (0-9)**: Used for direct channel entry or inputting numerical values.
- **ENTER**: Confirms selections.
- **SOURCE**: Cycles through input sources (e.g., HDMI 1, AV, Component).
- **REW / PLAY / FWD / REC / PAUSE II / STOP**: Standard media playback controls for DVD/VCR or other compatible devices.

To operate a specific device, first press the corresponding device selection button (e.g., **TV**, **SAT-CBL-DTC DVD-VCR**). Once selected, the remote's buttons will control that device.

Maintenance

Proper care will ensure the longevity and optimal performance of your remote control.

Battery Replacement:

Replace batteries when the remote's response becomes sluggish or it stops functioning. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries.

Cleaning:

To clean the remote, gently wipe its surface with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water. Avoid using harsh chemicals, abrasive cleaners, or excessive moisture, as these can damage the remote's electronics or finish.

Troubleshooting

If you encounter issues with your remote control, try the following solutions:

- **Remote not responding:**
 - Ensure the batteries are inserted correctly with the correct polarity.
 - Replace old batteries with fresh AAA batteries.
 - Make sure there are no obstructions between the remote and the device's sensor.
 - Ensure you have selected the correct device (e.g., TV, SAT-CBL-DTC DVD-VCR) using the device selection buttons.
- **Device not responding to commands:**
 - Verify that the remote is pointed directly at the device's infrared sensor.
 - Check if the device itself is powered on and functioning correctly.
 - If the remote was previously programmed for a specific device, and it's no longer working, you may need to re-attempt the initial setup or code search process if applicable for your specific device model.
- **Some buttons do not work:**
 - This could indicate low batteries. Try replacing them.
 - Ensure the remote is in the correct device mode for the function you are trying to perform.

Specifications

Model Number:	RC-RCR503BZ-DL20
Brand:	UpStart Components
Compatible Devices:	Television, Satellite/Cable/DTC boxes, DVD/VCR players (3-device universal capability)
Power Source:	2 x AAA Batteries (not included)
Color:	Black
Special Feature:	Universal Remote Control

Warranty and Support

This product is an UpStart Components Brand replacement part. It is not an OEM (Original Equipment Manufacturer) product. All mentions of brand names or model descriptions are made strictly to illustrate compatibility. Any warranties for this product are offered solely by UpStart Components. For warranty claims or support inquiries, please refer to the contact information provided with your purchase or visit the UpStart Components official website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question