

[manuals.plus](#) /› [SoBuy](#) /› [SoBuy Rocking Chair FST16-DG Instruction Manual](#)**SoBuy FST16-DG**

SoBuy Rocking Chair FST16-DG Instruction Manual

1. IMPORTANT SAFETY INFORMATION

Warning: Read and follow the assembly instructions carefully. To prevent damage or misuse, ensure the maximum weight of 120 kg (264 lbs) is not exceeded and always place the armchair on a stable, level surface.

- Do not exceed the maximum weight capacity of 120 kg (264 lbs).
- Ensure all screws and fasteners are securely tightened before use.
- Keep children and pets away during assembly.
- Avoid placing the chair near open flames or heat sources.
- Regularly check all connections for tightness.

2. PRODUCT OVERVIEW

The SoBuy FST16-DG rocking chair is designed for comfort and versatility. It features an ergonomic design with a padded headrest and a breathable cotton-polyester fabric seat. The chair includes a 5-level adjustable footrest and offers a smooth rocking motion, making it suitable for various relaxation activities indoors or outdoors.



Image 2.1: The SoBuy FST16-DG rocking chair in a living room environment.

5 Posizioni Regolabili



Image 2.2: Detailed dimensions of the rocking chair.

3. PACKAGE CONTENTS

Before beginning assembly, please ensure all parts listed below are present and undamaged. If any parts are missing or damaged, do not proceed with assembly and contact customer support.



Image 3.1: Main components of the rocking chair.

- Wooden frame components (rockers, armrests, support bars)
- Seat and backrest cushion with headrest
- Adjustable footrest mechanism
- Hardware pack (screws, nuts, washers, Allen key)
- Adhesive floor protection pads

4. ASSEMBLY INSTRUCTIONS

Assembly is designed to be straightforward, but careful attention to the illustrated instructions is recommended. Some users have noted that attaching screws to the wooden frame may require patience.

1. **Unpack and Identify Parts:** Carefully remove all components from the packaging. Lay them out on a clean, soft surface to prevent scratches. Refer to the parts list to ensure everything is present.
2. **Assemble the Wooden Frame:** Connect the main wooden frame pieces using the provided screws and Allen key. Ensure all connections are aligned correctly before tightening.
3. **Attach Armrests:** Secure the armrests to the main frame.
4. **Install the Cushion:** Place the seat and backrest cushion onto the frame. The cushion is designed to fit snugly.
5. **Attach the Adjustable Footrest:** Secure the footrest mechanism to the designated points on the chair frame. Ensure it moves freely through its adjustment levels.
6. **Apply Floor Protection:** Attach the adhesive pads to the bottom of the rocking chair runners to protect your floors.
7. **Final Check:** Once assembled, gently rock the chair and check all connections to ensure they are secure and stable.



Image 4.1: Example of frame connections during assembly.

5. OPERATING INSTRUCTIONS

The SoBuy FST16-DG rocking chair is designed for comfortable use and easy adjustment.

- **Rocking Motion:** Sit comfortably in the chair and gently push off with your feet to initiate the smooth rocking motion.
- **Adjusting the Footrest:** The footrest can be adjusted to 5 different levels. To adjust, lift the footrest slightly and move it to the desired position. Ensure it clicks securely into place.

- **Headrest:** The integrated padded headrest provides additional comfort and support for your head and neck.



Image 5.1: The 5-level adjustable footrest mechanism.

Vivi un'esperienza di massimo relax



Image 5.2: Footrest in an elevated position.

6. MAINTENANCE AND CARE

- **Cleaning the Fabric:** The chair features a removable cover. To wash the cushion cover, it is necessary to partially disassemble the chair as the assembly screws pass through eyelets in the fabric. For easier maintenance, consider using a separate protective cover or spot cleaning the cushion.
- **Cleaning the Wooden Frame:** Wipe the wooden frame with a soft, damp cloth. Avoid using harsh chemicals or abrasive cleaners.
- **Floor Protection:** Periodically check the adhesive pads on the bottom of the rockers. Replace them if they show signs of wear to continue protecting your floors.
- **General Care:** Avoid prolonged exposure to direct sunlight or excessive moisture to preserve the material and wood finish.



Image 6.1: Zipper detail for removable cushion cover.

7. TROUBLESHOOTING

- **Chair feels unstable:** Ensure all assembly screws are fully tightened. Check that the chair is placed on a flat, stable surface.
- **Footrest not adjusting smoothly:** Verify that the footrest mechanism is free from obstructions and properly aligned. Re-check assembly steps related to the footrest.
- **Discomfort during use:** Ensure the headrest is positioned correctly. If the cushion feels inadequate, consider adding additional padding or a separate cover.
- **Squeaking noise:** Check all bolted connections and tighten if loose. A small amount of lubricant can be applied to moving parts if necessary, avoiding contact with fabric.

8. SPECIFICATIONS

Brand	SoBuy
Model	FST16-DG
Color	Grey
Material	Birch Wood, Cotton-Polyester Fabric
Product Dimensions (L x W x H)	80 x 56 x 90 cm (31.5 x 22.05 x 35.43 inches)
Item Weight	10 kg (22 lbs)
Maximum Load Capacity	120 kg (264 lbs)

9. CUSTOMER SUPPORT

For any questions, suggestions, or assistance regarding your SoBuy FST16-DG rocking chair, please do not hesitate to contact us. We are committed to providing the best possible support and will do our best to address your needs and inquiries.

Please refer to your purchase documentation or the SoBuy official website for specific contact details.