

OXO 8710200

OXO On Conical Burr Coffee Grinder User Manual

Model: 8710200

1. INTRODUCTION

Thank you for choosing the OXO On Conical Burr Coffee Grinder with Intelligent Dosing Scale. This appliance is designed to provide precise and consistent coffee grounds for various brewing methods, from espresso to French press. Its integrated scale measures coffee by weight, ensuring accuracy for your desired brew. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new coffee grinder.



Figure 1: OXO On Conical Burr Coffee Grinder, showing the bean hopper, grind adjustment dial, and grounds bin.

2. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using the appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Do not immerse the motor base in water or other liquids.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Avoid contact with moving parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always ensure the grounds bin is properly in place before operating the grinder.
- This appliance is for household use only.

3. PARTS IDENTIFICATION

Familiarize yourself with the components of your OXO On Conical Burr Coffee Grinder:

1. **Bean Hopper:** Holds whole coffee beans (capacity: 16 oz). Features a "trap door" to retain beans when removed.
2. **Hopper Lid:** Covers the bean hopper.
3. **Grind Adjustment Dial:** Allows selection of 38 grind settings, from fine to coarse.
4. **Conical Burrs:** Durable 40 mm stainless steel burrs for uniform grinding.
5. **Control Dial:** Used to switch between Cups Mode, Grams Mode, or Manual Mode.
6. **Start/Stop Button:** Initiates and stops the grinding process.
7. **Grounds Bin:** Collects ground coffee (capacity: up to 125 grams).
8. **Motor Base:** Contains the high torque/low speed motor and integrated scale.

4. SETUP

Follow these steps for initial setup of your coffee grinder:

1. **Unpack:** Carefully remove all components from the packaging. Retain packaging for future storage or transport.
2. **Clean:** Wash the bean hopper, hopper lid, and grounds bin with warm, soapy water. Rinse thoroughly and dry completely. The motor base should be wiped with a damp cloth.
3. **Assemble:**
 - Place the grounds bin onto the scale platform on the motor base. Ensure it is seated correctly.
 - Align the bean hopper with the opening on the top of the motor base. Twist clockwise until it locks into place.
 - Place the hopper lid on top of the bean hopper.
4. **Placement:** Place the grinder on a stable, flat, and dry surface. Ensure there is adequate space around the unit for ventilation.
5. **Power Connection:** Plug the power cord into a grounded electrical outlet.

5. OPERATING INSTRUCTIONS

Your OXO On Conical Burr Coffee Grinder offers precise control over your coffee grinding.

5.1 Filling the Bean Hopper

Remove the hopper lid and pour whole coffee beans into the bean hopper. Replace the lid securely. The hopper can hold up to 16 ounces of coffee beans.

5.2 Selecting Grind Setting

Rotate the grind adjustment dial to select your desired grind size. The grinder offers 38 settings:

- **Fine:** Suitable for Espresso machines.
- **Medium:** Ideal for Drip coffee makers and Pour Over.
- **Coarse:** Best for French Press and Cold Brew.

Experiment with different settings to find the perfect grind for your brewing method and taste preference.



Figure 2: Grind adjustment dial, showing various settings from fine to coarse.

5.3 Grinding Modes

Use the single control dial to switch between the available grinding modes:

- **Cups Mode:** Grind based on the number of cups of coffee you intend to brew. The integrated scale will automatically measure and stop grinding once the pre-set weight for the selected number of cups is reached.
- **Grams Mode:** Grind a specific weight of coffee in grams. Rotate the dial to select the desired gram amount. The grinder will stop automatically when the target weight is achieved.
- **Manual Mode:** Grind continuously until you press the Start/Stop button again. This mode does not use the integrated scale for automatic stopping.

Ensure the grounds bin is properly seated on the scale platform before starting any grinding operation. The "no-bean detector" feature prevents grinding if the hopper is empty.

6. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your grinder. Always unplug the grinder before cleaning.

6.1 Daily Cleaning

- Empty and wash the grounds bin and hopper lid with warm, soapy water. Rinse and dry thoroughly.
- Wipe the exterior of the motor base with a damp cloth. Do not immerse the motor base in water.

6.2 Burr Cleaning (Weekly/Bi-weekly)

Coffee oils and fine particles can accumulate on the burrs, affecting grind consistency.

1. Ensure the grinder is unplugged.
2. Remove the bean hopper by twisting it counter-clockwise and lifting it off. The "trap door" will close, retaining any remaining beans.
3. Locate the upper burr assembly. Twist the wire handle counter-clockwise and lift the upper burr out.
4. Use the provided cleaning brush (or a stiff brush) to remove any loose coffee grounds from both the upper and lower burrs.
5. Clean the grinding chamber with the brush.

6. Reinsert the upper burr, aligning the tabs, and twist clockwise to lock it into place.
7. Reattach the bean hopper by aligning and twisting clockwise until it locks.



Figure 3: Disassembled view of the grinder, highlighting the removable upper burr for cleaning.

7. TROUBLESHOOTING

If you encounter issues with your grinder, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Grinder does not start.	Not plugged in. Hopper or grounds bin not properly seated. No beans in hopper (no-bean detector activated). Motor overheating protection activated.	Ensure power cord is securely plugged into a working outlet. Check that the hopper is twisted clockwise until locked and the grounds bin is fully inserted. Add coffee beans to the hopper. Unplug the grinder and allow it to cool down for 30 minutes before restarting.
Inconsistent grind.	Burrs are dirty or clogged with coffee oils. Incorrect grind setting for bean type.	Clean the burrs thoroughly as described in Section 6.2. Adjust the grind setting. Finer grinds are for espresso, coarser for French press.
Grinder stops unexpectedly.	Motor overheating. No beans remaining in hopper. Grounds bin full (in Cups or Grams mode).	Unplug and allow to cool. Add more coffee beans. Empty the grounds bin.

8. SPECIFICATIONS

Brand	OXO
Model Number	8710200
Material	Stainless Steel
Color	Silver
Item Weight	7.4 Pounds
Wattage	151.00 W
Power Source	Electric
Hopper Capacity	16 oz (coffee beans)

Grounds Bin Capacity	Up to 125 grams
Grind Settings	38 (Fine to Coarse)

9. WARRANTY AND SUPPORT

OXO stands behind the quality of its products. This product comes with a **100% satisfaction guarantee**.

For warranty claims, product support, or further assistance, please contact OXO Customer Service through their official website or the contact information provided with your purchase.

© 2026 OXO. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question