



[Manuals.plus](#) /

> [Xtrasaver](#) /

> Xtrasaver Replacement Remote Control Instruction Manual for Westinghouse and Element Smart TVs

Xtrasaver 8541715568

Xtrasaver Replacement Remote Control Instruction Manual

For Westinghouse and Element Smart LED LCD HD 4K TVs

1. INTRODUCTION

This manual provides essential instructions for the setup, operation, and maintenance of your Xtrasaver Replacement Remote Control. This remote is designed to function as a direct replacement for original Westinghouse and Element Smart TV remote controls. It is specifically compatible with the following TV models:

- **Westinghouse Models:** WE58UB4108, WE55UB4417, WD50UB4417, WE50UB4417, WD40FB2530
- **Element Models:** ELSW3917BF, E4SFT5017, E4STA5017, ELSJ5017, ELST3216H, ELST5016S, E2SW5018

No programming is required for its use; simply install batteries and begin operation.



Image: The Xtrasaver Replacement Remote Control, showcasing its ergonomic design and button layout.

2. SETUP

2.1 Battery Installation

The Xtrasaver Replacement Remote Control requires two (2) AAA batteries (not included).

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or outwards to open it.

3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.

4. Slide the battery compartment cover back into place until it clicks securely.

Note: Ensure batteries are inserted correctly. Incorrect insertion may prevent the remote from functioning.

3. OPERATING INSTRUCTIONS

This remote control is designed for immediate use with compatible Westinghouse and Element Smart TVs. Point the remote directly at your television's infrared receiver.

3.1 Basic Functions

- **Power Button:** Turns the TV on or off.
- **Volume Up/Down:** Adjusts the sound level.
- **Channel Up/Down:** Changes the TV channel.
- **Mute Button:** Silences the TV audio.
- **Number Buttons (0-9):** Directly select channels.

3.2 Smart TV Navigation

- **Directional Pad (Up, Down, Left, Right):** Navigates menus and selections.
- **OK/Enter Button:** Confirms selections.
- **Back/Return Button:** Returns to the previous screen or menu.
- **Home Button:** Accesses the Smart TV's main menu or app launcher.
- **Source/Input Button:** Changes the input source (HDMI, AV, etc.).

Refer to your television's original manual for specific Smart TV interface navigation details.

4. MAINTENANCE

4.1 Cleaning

To clean the remote control, use a soft, dry cloth. For stubborn dirt, lightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals or abrasive materials, as these can damage the remote's surface or internal components.

4.2 Battery Replacement

Replace batteries when the remote's performance degrades or it stops responding. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries. Dispose of used batteries according to local regulations.

5. TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote is unresponsive.	Dead or incorrectly inserted batteries.	Replace batteries with new AAA batteries, ensuring correct polarity.

Problem	Possible Cause	Solution
Remote does not control the TV.	Obstruction between remote and TV sensor; remote is out of range.	Ensure a clear line of sight to the TV's IR sensor. Move closer to the TV.
Some buttons do not work.	Dirt or debris under the button; button malfunction.	Clean the remote. If the issue persists, the button may be faulty.
Remote is not compatible with my TV.	TV model is not listed as compatible.	Verify your TV model against the compatible models listed in the introduction and specifications. This remote is not universal.

6. SPECIFICATIONS

- **Brand:** Xtrasaver
- **Model Name:** 8541715568
- **Compatible TV Models (Westinghouse):** WE58UB4108, WE55UB4417, WD50UB4417, WE50UB4417, WD40FB2530
- **Compatible TV Models (Element):** ELSW3917BF, E4SFT5017, E4STA5017, ELSJ5017, ELST3216H, ELST5016S, E2SW5018
- **Connectivity Technology:** Infrared (IR)
- **Power Source:** 2 x AAA Batteries (not included)
- **Maximum Range:** 10 Meters (approximately 33 feet)
- **Controller Type:** Button Control
- **Special Feature:** Ergonomic design
- **Color:** Black

7. WARRANTY AND SUPPORT

Specific warranty information for this Xtrasaver Replacement Remote Control is not provided within this manual. For details regarding warranty coverage, technical support, or replacement parts, please contact the Xtrasaver customer service directly or refer to the product packaging.

For further assistance, you may visit the Xtrasaver official website or the retailer's support page where the product was purchased.