

ALLIMITY BN59-01014A

ALLIMITY BN59-01014A Replacement Remote Control User Manual

Model: BN59-01014A | Brand: ALLIMITY

1. INTRODUCTION

This manual provides instructions for the ALLIMITY BN59-01014A replacement remote control. This remote is designed to function as a direct replacement for various Samsung TV models, offering full functionality without the need for programming. Please read this manual carefully to ensure proper use and to maximize your viewing experience.

2. SETUP

2.1 Battery Installation

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch to open it.
3. Insert two (2) AAA batteries (not included) into the compartment, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.

Note: Always replace both batteries at the same time. Do not mix old and new batteries or different types of batteries. Remove batteries if the remote will not be used for an extended period.

3. BUTTON FUNCTIONS

The ALLIMITY BN59-01014A remote control features a comprehensive set of buttons for controlling your Samsung TV. Refer to the image below for a visual guide to the button layout, followed by a description of each button's function.





Image of the ALLIMITY BN59-01014A replacement remote control, showing its full layout of buttons. The remote is black with grey and colored buttons, and the model number BN59-01014A is printed at the bottom.

Button Descriptions:

Button	Function
POWER (Red)	Turns the TV on or off.
SOURCE	Selects the input source (e.g., HDMI, AV, Component).
HDMI	Direct access to the HDMI input.
0-9	Number buttons for direct channel selection or data entry.
TTX/MIX	Activates Teletext or Mix mode.
PRE-CH	Returns to the previously viewed channel.
MUTE	Mutes or unmutes the TV audio.
Volume (+/-)	Adjusts the TV's volume level.
Channel (P ^ / P v)	Changes TV channels up or down.
CH LIST	Displays the channel list.
MENU	Opens the TV's main menu for settings and options.
GUIDE	Displays the Electronic Program Guide (EPG).
TOOLS	Accesses quick settings or a tools menu.
INFO	Displays information about the current program or input.
Navigation Pad (Up, Down, Left, Right, Enter/OK)	Navigates through menus and confirms selections.
RETURN	Returns to the previous screen or menu.
EXIT	Exits the current menu or function.
A, B, C, D (Color Buttons)	Color-coded function buttons, often used for specific features within menus or smart TV applications.
P.MODE	Selects different Picture Modes (e.g., Standard, Dynamic, Movie).
S.MODE	Selects different Sound Modes (e.g., Standard, Music, Clear Voice).
DUAL / I-II	Selects dual audio or language options.
AD	Activates or deactivates Audio Description.
P.SIZE	Adjusts the picture size or aspect ratio.
SUBT.	Controls subtitles (on/off, language).
Playback Controls (Record, Play, Pause, Fast Forward, Rewind, Stop)	Controls media playback functions for compatible devices or content.

4. OPERATING INSTRUCTIONS

Once batteries are installed, the remote control is ready for use with compatible Samsung TV models. No programming is required.

1. Point the remote control directly at the infrared sensor on your Samsung TV.
2. Press the **POWER** button to turn the TV on or off.
3. Use the **Channel (P ^ / P v)** buttons to browse channels or the number buttons for direct channel input.
4. Adjust the volume using the **Volume (+/-)** buttons.
5. Access TV menus and settings using the **MENU** button and navigate with the **Navigation Pad**.

5. TROUBLESHOOTING

- **Remote not responding:**
 - Ensure batteries are correctly inserted and not depleted. Replace if necessary.
 - Check for any obstructions between the remote control and the TV's infrared sensor.
 - Ensure you are within the operating range (up to 10 meters) and pointing the remote directly at the TV.
- **Some functions not working:**
 - Verify that your TV model is listed as compatible with the BN59-01014A remote.
 - Some advanced Smart TV features or specific app functions may require the original Smart Remote or a dedicated app. This remote provides standard TV control.

6. SPECIFICATIONS

- **Model:** BN59-01014A
- **Brand:** ALLIMITY
- **Connectivity Technology:** Infrared (IR)
- **Number of Buttons:** 25
- **Maximum Range:** 10 Meters (approx. 33 feet)
- **Power Source:** 2 x AAA Batteries (not included)
- **Color:** Black
- **Compatibility:** Designed as a replacement for various Samsung TV models, including LE46C630, LE46C570, LE46C550, LE40C630, LE40C570, LE40C550, LE37C630, LE37C570, LE37C550, LE32C630, LE32C570, LE32C550.

7. MAINTENANCE

- Keep the remote control clean by wiping it with a soft, dry cloth. Do not use liquid cleaners.
- Avoid exposing the remote to extreme temperatures, direct sunlight, or high humidity.
- If the remote will not be used for an extended period, remove the batteries to prevent leakage.

8. WARRANTY AND SUPPORT

For any questions regarding the ALLIMITY BN59-01014A replacement remote control, or if you encounter issues not covered in this manual, please contact the seller or manufacturer directly through your purchase platform for assistance. Please retain your proof of purchase for warranty claims, if applicable.

