Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- > Delta Children /
- > Delta Children Sutton 3 Drawer Dresser with Changing Top Instruction Manual

Delta Children 69903-100

Delta Children Sutton 3 Drawer Dresser with Changing Top - Instruction Manual

Model: 69903-100

INTRODUCTION

The Delta Children Sutton 3 Drawer Dresser with Changing Top is a versatile storage solution designed for nursery and children's rooms. This unit features three spacious drawers for organizing essentials and includes a removable changing topper, allowing it to transition from a changing station to a standard dresser as your child grows. This manual provides essential information for assembly, safe use, and maintenance of your dresser.



Image: The Delta Children Sutton 3 Drawer Dresser in white, shown with the removable changing top installed.

SAFETY INFORMATION

Your child's safety is paramount. All Delta Children dressers and chests are engineered and tested to meet ASTM F2057, the voluntary industry tip-over standard for dressers. For additional security, it is strongly recommended that all dressers in your home be anchored to the wall. A wall anchor is included with this product. Please refer to the assembly instructions for proper installation of the wall anchor.

- Always use the included wall anchor to secure the dresser to a wall.
- Do not place heavy items on top of the dresser, especially when the changing topper is removed.
- Ensure drawers are closed when not in use to prevent climbing hazards.

- When using the changing topper, always keep your child within arm's reach.
- Tested for lead and other toxic elements to meet or exceed ASTM safety standards.

SETUP AND ASSEMBLY

Assembly of the Delta Children Sutton 3 Drawer Dresser is required. The product is designed for straightforward assembly. Please follow the detailed instructions provided in the separate assembly guide included in the packaging. All necessary hardware is provided.

Assembly Tips:

- Read all instructions carefully before beginning assembly.
- Ensure all parts are present before starting.
- Do not overtighten screws, as this may cause damage to the wood. Tighten until snug.
- It is recommended to have two adults for assembly due to the weight of some components.
- Install the wall anchor immediately after assembly to prevent tip-over incidents.



OPERATING INSTRUCTIONS

Using the Drawers:

The dresser features three large drawers with metal drawer guides and safety stops for smooth and secure operation. These drawers provide ample storage space for clothing, accessories, or toys.

- To open a drawer, gently pull the knob.
- To close a drawer, push it firmly until it is fully seated.
- Avoid overloading drawers to ensure smooth operation and prevent damage.



Image: The dresser with its top drawer partially open, revealing interior storage space.

Using the Changing Top:

The dresser includes a removable changing topper. This topper is designed to securely hold a changing pad measuring 34 inches x 16 inches x 1 inch (changing pad sold separately).

- Place the changing topper securely on top of the dresser.
- Insert a compatible changing pad into the topper.
- To remove the changing topper, unscrew the securing fasteners (if applicable, refer to assembly guide) and lift it off. This allows the unit to function as a standard dresser.



Image: An angled view of the white dresser with the changing top securely in place.

MAINTENANCE

To maintain the appearance and longevity of your Delta Children Sutton 3 Drawer Dresser, follow these simple care instructions:

- Wipe the surface with a dry cloth to remove dust and light smudges.
- For more stubborn marks, use a slightly damp cloth with mild soap, then dry immediately with a clean, soft cloth.
- Avoid using abrasive cleaners, harsh chemicals, or furniture polish that may damage the finish.
- · Regularly check all screws and fasteners to ensure they are tight. Retighten if necessary.

SPECIFICATIONS

Feature	Detail
Brand	Delta Children
Model Number	69903-100
UPC	080213032265
Assembled Dimensions (W x D x H)	35" x 17.75" x 33.75"
Item Weight	85 Pounds
Color	White
Number of Drawers	3
Changing Pad Size (Recommended)	34" x 16" x 1" (sold separately)
Assembly Required	Yes
Safety Standards	Meets ASTM F2057, tested for lead and toxic elements

TROUBLESHOOTING

Common Issues and Solutions:

- **Drawers not sliding smoothly:** Ensure the metal drawer guides are correctly installed and free of obstructions. Check that all screws are tightened appropriately, but not overtightened.
- Cracks appearing during assembly: This can occur if screws are overtightened. Always tighten screws until snug, avoiding excessive force. If damage occurs, contact customer support for assistance.
- **Dresser instability:** Verify that the dresser is placed on a level surface. Ensure all assembly hardware is securely fastened. Most importantly, confirm the wall anchor is properly installed and secured to prevent tip-over.

WARRANTY AND SUPPORT

This Delta Children Sutton 3 Drawer Dresser with Changing Top comes with a **1-year parts only warranty**. For warranty claims, missing parts, or any product-related inquiries, please contact Delta Children customer support. Refer to the contact information provided in your product packaging or visit the official Delta Children website.

For additional support and resources, you may visit the Delta Children Store on Amazon.

OFFICIAL PRODUCT VIDEOS

Delta Children - The Brand

Your browser does not support the video tag.

This video provides an overview of the Delta Children brand,

highlighting their commitment to safety and quality in children's products. It showcases the company's values and range of offerings.

Related Documents - 69903-100



Delta Children Saint 4 Drawer Dresser with Changing Top: Assembly & Safety Guide

Official assembly instructions, safety warnings, and care guide for the Delta Children Saint 4 Drawer Dresser with Changing Top (Model W135440). Ensure safe setup and use for your nursery.



Delta Children William 3 Drawer Dresser with Changing Top Assembly Instructions & Safety Guide

Official assembly instructions and safety guide for the Delta Children William 3 Drawer Dresser with Changing Top. Provides step-by-step assembly, crucial safety warnings, and care recommendations.



Delta Children Dresser with Changing Top Assembly Instructions and Safety Guide

Comprehensive assembly instructions, safety tips, and care guide for the Delta Children Dresser with Changing Top. Includes parts list and step-by-step assembly in English and Spanish.



Delta Children Dresser with Changing Top Assembly Instructions and Safety Guide

Assembly instructions, safety tips, and care guide for the Delta Children Dresser with Changing Top. Includes important information on furniture tip-over prevention and safe sleep for babies.



Delta Children Madeline 4 Drawer Dresser with Changing Top Assembly Instructions

Comprehensive assembly instructions and safety guidelines for the Delta Children Madeline 4 Drawer Dresser with Changing Top. Includes parts list, step-by-step assembly, and important safety tips for nursery furniture.



<u>Delta Children Dresser with Changing Top Assembly Instructions</u>

Official assembly instructions and safety guide for the Delta Children Dresser with Changing Top (Model W133440). Find parts lists, step-by-step assembly, safety tips, and support information.