

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [Fisher-Price](#) /
- › [Fisher-Price Linkimals Smooth Moves Sloth Instruction Manual](#)

## Fisher-Price FYK61

# Fisher-Price Linkimals Smooth Moves Sloth

Model: FYK61

Brand: Fisher-Price

## INTRODUCTION

---

The Fisher-Price Linkimals Smooth Moves Sloth is an interactive learning toy designed to engage infants and toddlers aged 9 months and older. This toy features lights, music, songs, and animated movements to encourage early learning and development. It is part of the Linkimals collection, which allows multiple Linkimals toys to interact and synchronize with each other for an enhanced play experience.



Image: The Fisher-Price Linkimals Smooth Moves Sloth, a grey and white sloth toy with colorful arms and interactive buttons on its feet.

## PRODUCT FEATURES

- **Interactive Movement:** The sloth claps its hands and bobs its head in response to music and interaction.
- **Learning Content:** Press the buttons on the sloth's feet to activate songs and phrases that teach the alphabet, numbers, opposites, and colors.
- **Light-Up Belly:** Features colorful lights on its belly that illuminate during play, enhancing sensory engagement.
- **Soft Arms:** The sloth has soft, textured arms for tactile exploration.
- **Linkimals Connectivity:** When other Linkimals toys (sold separately) are nearby and activated, they will light up, talk, sing, and play together, creating a synchronized learning experience.



**Press the buttons for music & phrases about ABCs, 123s & more**

Image: A child's hand pressing one of the interactive buttons on the sloth's foot, which activates lights and sounds.



## Sloth claps and bobs along to the music

Image: The Smooth Moves Sloth with its arms raised, appearing to clap, demonstrating its interactive movements.



(Each sold separately & subject to availability. Fisher-Price® Linkimals™ toys are only compatible with other Fisher-Price® Linkimals™ toys.)

Image: An illustration depicting multiple Fisher-Price Linkimals toys, including the sloth, penguin, owl, narwhal, and turtle, connected by dotted lines to show their interactive synchronization.

## SETUP

### Battery Installation

1. Locate the battery compartment on the back or bottom of the Smooth Moves Sloth.
2. Using a Phillips head screwdriver, loosen the screw on the battery compartment cover.
3. Remove the cover.
4. Insert 4 AA (LR6) alkaline batteries, ensuring correct polarity (+/-) as indicated inside the compartment. The toy comes with demonstration batteries pre-installed.
5. Replace the battery compartment cover and tighten the screw securely.

**Important:** Always use fresh alkaline batteries for optimal performance. Do not mix old and new batteries, or different types of batteries.

## OPERATING INSTRUCTIONS

## **Power On/Off and Volume Control**

- Locate the power/volume switch on the toy.
- Slide the switch to the 'On' position for normal play.
- Select between two volume levels: low or high.
- To turn off the toy, slide the switch to the 'Off' position.

## **Interacting with the Sloth**

- Press the music note button on the sloth's left foot to hear songs and musical phrases.
- Press the ABC/123 button on the sloth's right foot to hear phrases about the alphabet, numbers, opposites, and colors.
- The sloth will clap its hands and bob its head along with the sounds and lights.

## **Linkimals Interaction**

- Place other Linkimals toys (sold separately) near the Smooth Moves Sloth.
- Ensure all Linkimals toys are turned on.
- When one Linkimals toy is activated, the others will respond by lighting up, talking, singing, and playing together.
- Linkimals toys are designed to interact only with other Fisher-Price Linkimals toys of the same language.



Silly sloth with lights,  
songs & exciting motions

AGES  
9M+

Image: A baby sitting on a rug, happily interacting with the Fisher-Price Linkimals Smooth Moves Sloth toy.

## CARE AND MAINTENANCE

- Wipe the toy with a clean, damp cloth. Do not immerse in water.
- Do not use abrasive cleaners or solvents.
- Avoid exposing the toy to extreme temperatures or direct sunlight for prolonged periods.
- Remove batteries if the toy is to be stored for an extended period to prevent battery leakage.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Toy does not turn on or respond.	Batteries are low or incorrectly installed.	Check battery polarity. Replace with fresh AA alkaline batteries.
Sound is distorted or too quiet.	Low batteries or volume setting.	Replace batteries. Adjust the volume switch to the high setting.

Problem	Possible Cause	Solution
Sloth's movements are sluggish or absent.	Low batteries.	Replace with fresh AA alkaline batteries.
Linkimals toys are not interacting.	One or more toys are off, or not within range.	Ensure all Linkimals toys are turned on and placed close to each other. Verify they are compatible (Fisher-Price Linkimals only).

## SPECIFICATIONS

Feature	Detail
Product Dimensions	5.51 x 7.2 x 8.74 inches
Item Weight	7.1 ounces
Model Number	FYK61
Recommended Age	9 months and up
Batteries Required	4 AA (LR6) alkaline batteries (included for demonstration)
Manufacturer	Fisher-Price
Release Date	June 1, 2019

## WARRANTY AND SUPPORT

For warranty information or product support, please contact Fisher-Price customer service. Details can typically be found on the product packaging or the official Fisher-Price website. Keep your purchase receipt for any warranty claims.