

[Manuals.plus](#) /

› [CUTE STONE](#) /

› CUTE STONE Color Changing Kitchen Sink Toy Manual - Model CS181001

CUTE STONE CS181001

CUTE STONE Color Changing Kitchen Sink Toy

MODEL: CS181001

Introduction

The CUTE STONE Color Changing Kitchen Sink Toy provides an interactive and engaging play experience for children. This electric dishwasher toy features a functional faucet with running water, an automatic water cycle system, and accessories that change color with warm water. Designed for pretend role-play, it encourages skill development and imaginative play.



Image: The CUTE STONE Color Changing Kitchen Sink Toy, showcasing its main features and included accessories.

Product Features

- **Color-Changing Accessories:** Certain accessories turn white when exposed to water at 40°C (104°F) or higher, and revert to their original color as they cool. This feature allows children to play with warm water, helping to prevent chills.
- **Child-Friendly Design:** Constructed from durable ABS material with smooth, rounded edges to ensure safe play.
- **Automatic Water Cycle System:** The faucet provides a continuous flow of water without waste, as water is recycled from the sink basin.
- **Upgraded 180° Rotatable Faucet:** The faucet can be rotated 180 degrees, offering flexibility during play.
- **Educational Play:** Designed to enhance color recognition, familiarize children with kitchenware, and improve hand-eye coordination, organization, and storage skills through role-playing.

Simulate life scenarios and cultivate good habits



Image: Demonstration of the color-changing accessories when exposed to warm water.



Image: Illustration of the automatic water cycle system, showing water being pumped from the basin through the faucet.

What's Included

The CUTE STONE Color Changing Kitchen Sink Toy set includes the following components:

- Kitchen sink (1)
- Base (1)
- Plastic cups (4)
- Plastic plates (2)
- Brush (1)
- Plastic knives (2)
- Play detergent bottle (1)
- Faucet (1)
- Dish rack (1)

Setup Instructions

1. Use a screwdriver to open the faucet battery cover.
2. Insert two new 1.5V AA batteries into the faucet.

3. Securely tighten the battery cover with a screwdriver.
4. Place the faucet into its designated fixed position in the sink.

Product Instruction

Installation instructions

1. Use a screwdriver to open the faucet battery cover and insert 2 new 1.5V AA batteries.
2. Tighten the battery cover with a screwdriver.
3. Place the faucet in the fixed position in the sink. After installing the batteries, the faucet must be placed in the water in order to turn on the switch.



Instructions for use

1. Fill the sink with water up to the marked line. Insert the lower end of the faucet into the water to start using it. Make sure the sink has enough water for the motor to pump properly.
2. Another option is to pour water into the sink after placing the faucet in position. The lower end must be in the water in order to turn on the switch.
3. The first time you use it, you might need to get rid of some air. If you hear noise but no water comes out, close the faucet, lift it and shake it, then put it back into the water and keep turning the switch until water comes out.
4. Recommended to use high-quality batteries.

Care instructions

1. Let the motor rest for a 5-minute break after using it for 30 minutes.
2. Take the faucet out of the sink and drain it after use.
3. Make sure to shut off the faucet and take it out of the sink when not in use.
4. Be sure to remove the battery from the water pump when not in use.

Image: Visual guide for battery installation and faucet assembly.

Operating Instructions

1. Fill the sink with water up to the marked level (above 1.5L). Ensure the water level is sufficient for the faucet's motor to pump properly.
2. Insert the lower end of the faucet into the water to begin operation.
3. If you hear noise but no water flows, close the faucet, lift it, shake it gently, then place it back into the water and continue turning the switch until water comes out. This helps to remove any trapped air.
4. It is recommended to use high-quality batteries for optimal performance.

Your browser does not support the video tag.

Video: A full demonstration of the sink toy, including its components and how it operates.

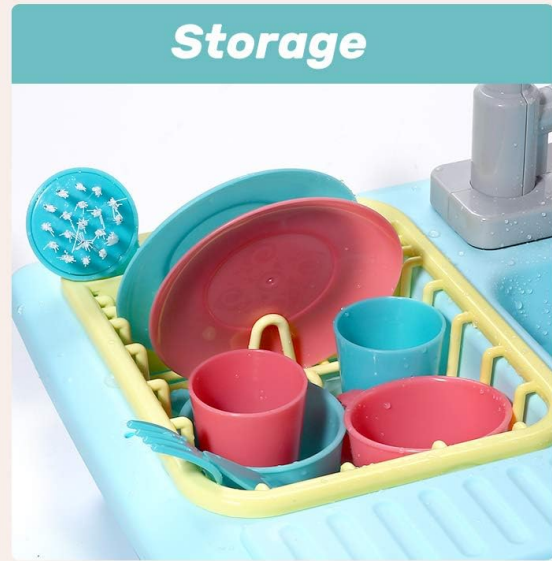


Image: Visual steps demonstrating how to use the sink toy for washing and storing dishes.

Care and Maintenance

- Allow the motor to rest for a 5-minute break after every 30 minutes of continuous use to prolong its lifespan.
- After use, remove the faucet from the sink and drain all water from the basin.
- Ensure the battery compartment cover is securely tightened to prevent water from entering. A waterproof rubber strip is present for protection.
- If the toy will not be used for an extended period, remove the faucet from the sink and take out the batteries from the water pump.

HELPFUL TIPS

1





Water must be over the hole leve

2



Be sure to tighten battery compartment cover completely to avoid water getting into it.



waterproof rubber strip

3



Remove the faucet from the sink toy if it is not used.



Image: Important tips for proper water level, securing the battery compartment, and removing the faucet when not in use.

Troubleshooting

Issue	Reason	Suggested Action
The faucet is not working	Incorrect batteries, old batteries, or a mix of old and new batteries. Improper operation, faucet not releasing water.	Replace with new 1.5V AA batteries. Ensure batteries are installed correctly. Add enough water (above 1.5L) to the sink to cover the bottom of the faucet.
The faucet makes a noise but no water comes out	Foreign objects blocking the internal structure.	Regularly replace the water in the sink and add clean water to ensure no foreign objects block the faucet.

Issue	Reason	Suggested Action
The faucet stops working after a period of time	Faucet left open when not in use and submerged in water for an extended period. Batteries left in the faucet when not in use. Motor used continuously for too long.	Close the faucet when not in use and remove it from the sink. Remove batteries from the faucet when not in use. Rest the motor for 3-5 minutes every half an hour of play.



Image: Detailed troubleshooting table for common issues with the kitchen sink toy.

Specifications

- **Product Dimensions:** 16 x 10.8 x 3.8 inches
- **Item Weight:** 2.09 pounds
- **Item Model Number:** CS181001
- **Manufacturer Recommended Age:** 36 months - 8 years
- **Material:** ABS Plastic

Safety Information

This toy is recommended for children aged 36 months to 8 years. Always supervise children during play, especially with water. Ensure all components are securely assembled before use. The toy is made from child-friendly ABS material with smooth edges to prevent injury.

Warranty and Support

For any issues or replacement parts, please contact CUTE STONE customer service directly. The manufacturer is committed to providing support for their products.

Additional Demonstrations

Your browser does not support the video tag.

Video: An honest review and demonstration of the color-changing sink toy's features.

Your browser does not support the video tag.

Video: A demonstration highlighting the fun aspects of the kitchen sink toy for children.