



[Manuals.plus](#) /

> [vidaXL](#) /

> vidaXL Foldable Party Tent with Two Sidewalls (Model 44961) - Instruction Manual

vidaXL 44961

vidaXL Foldable Party Tent with Two Sidewalls (Model 44961) - Instruction Manual

Model: 44961 | Brand: vidaXL

1. INTRODUCTION

This manual provides essential instructions for the safe assembly, operation, and maintenance of your vidaXL Foldable Party Tent with Two Sidewalls. This tent is designed for outdoor events such as parties, barbecues, and festivals, and can also serve as a sunshade in your garden. Please read these instructions carefully before use and retain them for future reference.



Image 1: Fully assembled vidaXL Foldable Party Tent in blue.

2. SAFETY INFORMATION AND WARNINGS

Your safety is paramount. Adhere to all warnings and instructions to prevent injury or damage to the product.

- **Weather Conditions:** This product should **NEVER** be used in bad weather conditions, including strong wind, heavy rain, snow, or storms. Severe weather can cause structural failure and potential injury.
- **Intended Use:** This tent is designed as a temporary outdoor shelter for events and sun protection. It is **not suitable for use as a carport** or permanent structure.
- **Ground Anchoring:** Always ensure the tent is securely anchored to the ground using the provided stakes and ropes to prevent it from being lifted or moved by wind.
- **Fire Safety:** Keep all heat sources and open flames away from the tent fabric. The fabric is not fireproof.
- **Assembly:** Ensure all connections are properly secured during assembly. Do not force parts together.
- **Additional Safety Document:** A detailed safety information PDF is available. Please consult it for further safety

guidelines.

3. SETUP AND ASSEMBLY

The vidaXL Foldable Party Tent is designed for easy assembly without special tools. It is recommended that two or more people assist with the setup.

3.1 Components Overview

Before starting, unpack all components and verify against the packing list (not provided in this manual, refer to product packaging). Ensure all frame pieces, roof fabric, sidewalls, and anchoring accessories are present.

3.2 Assembly Steps

1. **Unfold the Frame:** Carefully unfold the main steel frame structure. Ensure all joints are aligned.
2. **Connect Frame Sections:** Securely connect all frame sections. The frame features robust, powder-coated steel for durability.



Image 2: Detail of a frame connection point, showing the secure bolt and joint.



Image 3: Detail of a tent frame corner joint, illustrating the robust construction.

3. **Attach the Roof Fabric:** Drape the 220 g/m² polyester roof fabric with PVC coating over the top of the frame. Ensure it is centered and all corners are properly aligned. Secure the roof to the frame as per the design (e.g., with Velcro straps or ties).
4. **Extend Legs and Adjust Height:** Extend the tent legs to the desired height. The frame height excluding the roof is 2.35 meters. Secure the legs in place using the locking pins.



Image 4: Adjustable tent leg showing height adjustment pin holes.

5. **Attach Sidewalls:** If desired, attach the two sidewalls to the tent frame. These typically attach with Velcro or ties.



Image 5: The tent with one sidewall attached, demonstrating its appearance and function.

6. **Anchor the Tent:** Secure the tent to the ground using the provided ground stakes and ropes. This is crucial for stability, especially in light wind conditions. The tent features foot plates for anchoring.



Image 6: Detail of a tent leg foot plate, designed for secure ground anchoring.

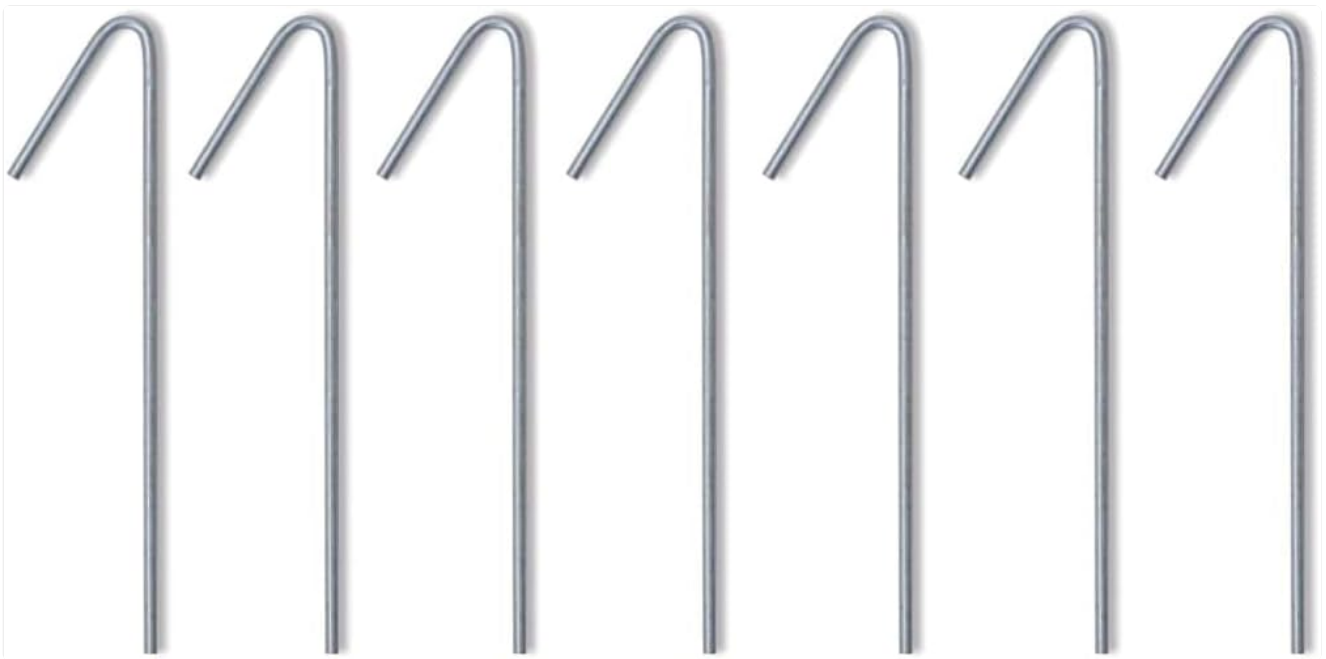


Image 7: Ground stakes used to secure the tent to the ground.

4. OPERATING INSTRUCTIONS

Once assembled and securely anchored, your vidaXL Foldable Party Tent is ready for use.

- **Event Use:** The tent provides a sheltered space for various outdoor events. The two sidewalls offer additional protection from wind or sun.
- **Sunshade:** Position the tent to maximize shade coverage in your garden or patio area.
- **Weather Monitoring:** Always monitor weather conditions. If strong winds, heavy rain, or other severe weather is forecast, disassemble the tent immediately to prevent damage and ensure safety.
- **Ventilation:** Ensure adequate ventilation, especially if using the tent in warm weather or with many occupants.

5. MAINTENANCE

Proper maintenance will extend the lifespan of your party tent.

- **Cleaning Fabric:** Clean the polyester roof and sidewalls with a mild soap solution and water. Do not use harsh chemicals or abrasive cleaners, as these can damage the PVC coating and fabric. Rinse thoroughly and allow to air dry completely before storage.
- **Cleaning Frame:** Wipe the powder-coated steel frame with a damp cloth. Inspect for any signs of rust or damage.
- **Inspection:** Regularly inspect all frame connections, fabric integrity, ropes, and stakes for wear or damage. Replace any worn or broken parts promptly. Pay particular attention to ropes and ties, as these can degrade or break with exposure to elements, as noted in user feedback.
- **Storage:** When not in use, especially during off-season or anticipated bad weather, disassemble the tent. Ensure all components are clean and completely dry before folding and storing them in a cool, dry place away from direct sunlight. This prevents mold, mildew, and material degradation.

6. TROUBLESHOOTING

Here are solutions to common issues you might encounter:

Problem	Possible Cause	Solution
Tent is unstable or moves in light wind.	Insufficient anchoring; ropes or stakes loose/damaged.	Ensure all ground stakes are fully inserted and ropes are taut. Re-check all connection points. Disassemble immediately in strong winds.
Water pooling on roof or leaking.	Roof fabric not taut; improper installation; damage to fabric.	Ensure roof fabric is stretched tightly across the frame. Check for tears or punctures in the fabric. Verify all seams are intact.
Difficulty assembling frame sections.	Parts misaligned; debris in connection points.	Ensure parts are correctly oriented. Clear any obstructions from connection points. Do not force parts; gently adjust alignment.
Sidewalls not staying attached.	Velcro/ties worn or improperly secured.	Ensure Velcro strips are clean and fully engaged. Secure all ties firmly. Replace worn attachment mechanisms if necessary.

7. SPECIFICATIONS

Key technical specifications for the vidaXL Foldable Party Tent (Model 44961):

- **Model Number:** 44961
- **Color:** Blue
- **Frame Material:** Powder-coated steel (Alloy steel)
- **Roof Material:** 220 g/m² polyester with PVC coating (100% waterproof)
- **Overall Dimensions (L x W x H):** Approximately 291 x 291 x 315 cm (114.6 x 114.6 x 124 inches)
- **Frame Height (excluding roof):** 2.35 m (92.5 inches)
- **Ground Area:** 9 Square meters
- **Number of Sidewalls:** 2
- **Item Weight:** 15.48 Kilograms (34.13 lbs)
- **UV Protection:** Yes
- **Water Resistance Level:** Waterproof
- **Assembly Required:** Yes

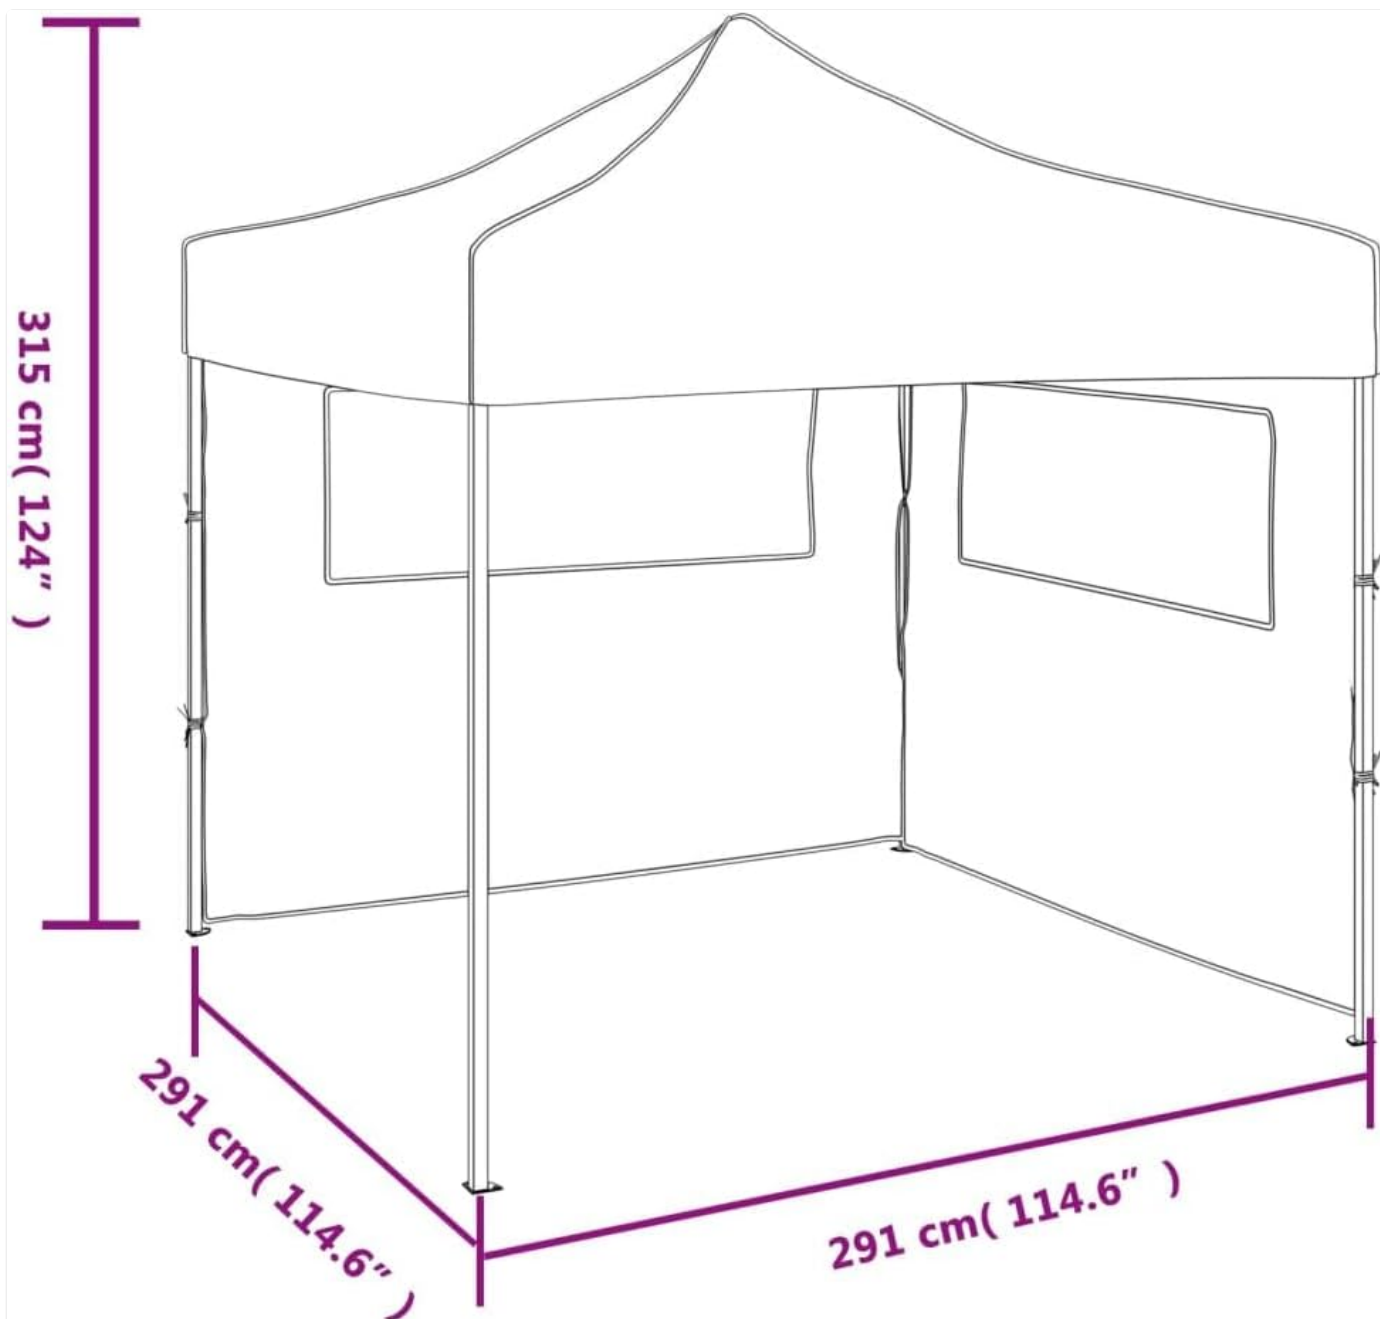


Image 8: Dimensional diagram of the party tent, illustrating length, width, and height.

8. WARRANTY AND SUPPORT

For warranty information, product support, or to inquire about replacement parts, please contact vidaXL customer service directly.

You can find more information and contact details on the official vidaXL store page:[Visit vidaXL Store](#).