

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [CLEANmaxx](#) /

› [CleanMaxx 1463 4.8V Cordless Handheld Vacuum Cleaner Instruction Manual](#)

CLEANmaxx 1463

CleanMaxx 1463 4.8V Cordless Handheld Vacuum Cleaner

Instruction Manual

[Contents](#) [Setup](#) [Introduction](#) [Safety Instructions](#) [Package](#)
[Operation](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. INTRODUCTION

Thank you for choosing the CleanMaxx 1463 4.8V Cordless Handheld Vacuum Cleaner. This manual provides important information regarding the safe operation, maintenance, and troubleshooting of your new appliance. Please read these instructions carefully before first use and keep them for future reference.

2. SAFETY INSTRUCTIONS

Always observe basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and personal injury.

- Read all instructions before using the appliance.
- Do not use the vacuum cleaner outdoors or on wet surfaces.
- Do not allow the vacuum cleaner to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with a damaged cord or plug. If the appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.

- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up toxic material (e.g., chlorine bleach, ammonia cleaner).
- Do not use without dust bag and/or filters in place.
- Use extra care when cleaning on stairs.
- Prevent unintentional starting. Ensure the switch is in the off-position before connecting to battery pack, picking up or carrying the appliance.
- Recharge only with the charger specified by the manufacturer. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
- Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.

3. PACKAGE CONTENTS

Please check the package contents upon unpacking to ensure all parts are present and undamaged.

- CleanMaxx 1463 Handheld Vacuum Cleaner Unit
- Charging Station
- Power Adapter
- Crevice Tool
- Brush Attachment
- Instruction Manual (this document)

4. SETUP

4.1 Initial Charging

Before first use, fully charge the handheld vacuum cleaner. This ensures optimal battery performance and longevity.

1. Place the charging station on a flat, stable surface near a power outlet.
2. Connect the power adapter to the charging station and then plug it into a suitable wall outlet.
3. Place the CleanMaxx 1463 handheld vacuum cleaner onto the charging station. Ensure it is seated correctly and the charging indicator light (if present) illuminates.
4. Allow the unit to charge for approximately 8-10 hours for the first charge. Subsequent charges may take less time.



Image 1: The CleanMaxx 1463 handheld vacuum placed in its charging station, connected to the power adapter. This setup is essential for charging the device.

4.2 Attaching Accessories

The CleanMaxx 1463 comes with various attachments for different cleaning tasks.

- **Crevice Tool:** Ideal for reaching tight spaces, corners, and edges. Simply push the crevice tool firmly onto the suction nozzle until it clicks into place.
- **Brush Attachment:** Suitable for cleaning upholstery, car seats, and delicate surfaces. Attach the brush tool over the crevice tool or directly onto the suction nozzle.

5. OPERATING INSTRUCTIONS

5.1 Powering On/Off

To turn the vacuum cleaner on, slide the power switch to the "ON" position. To turn it off, slide the switch to the "OFF" position.

5.2 General Vacuuming

Hold the vacuum cleaner by the handle and guide the nozzle over the surface to be cleaned. For best results, move the vacuum slowly and steadily.



Image 2: The CleanMaxx 1463 handheld vacuum effectively cleaning a liquid spill, demonstrating its versatility for both dry and wet messes.



Image 3: The CleanMaxx 1463 handheld vacuum with the brush attachment being used to clean crumbs from a sofa, highlighting its use for upholstery.



Image 4: The CleanMaxx 1463 handheld vacuum being used to clean the interior of a car, showcasing its portability and utility for vehicle cleaning.

5.3 Emptying the Dust Container

For optimal suction performance, empty the dust container regularly, especially after each significant use.

1. Ensure the vacuum cleaner is turned off.
2. Locate the dust container release button or latch, usually near the nozzle.
3. Press the release button and carefully detach the dust container from the main unit.
4. Hold the dust container over a waste bin and open its lid or flap to empty the collected debris.

5. Reattach the dust container to the main unit, ensuring it clicks securely into place.

6. MAINTENANCE

Regular maintenance ensures the longevity and efficient operation of your CleanMaxx 1463 handheld vacuum cleaner.

6.1 Cleaning the Filter

The CleanMaxx 1463 uses a cartridge filter. A clogged filter can significantly reduce suction power.

1. Turn off the vacuum cleaner and detach the dust container.
2. Carefully remove the filter from inside the dust container.
3. Tap the filter gently over a waste bin to remove loose dust and debris.
4. If necessary, rinse the filter under cool running water. Ensure it is completely dry before reinserting it into the vacuum cleaner. *Do not use detergents or hot water.*
5. Once dry, place the filter back into the dust container and reattach the container to the main unit.

6.2 Cleaning the Unit Exterior

Wipe the exterior of the vacuum cleaner with a soft, damp cloth. Do not use abrasive cleaners or solvents.

6.3 Storage

Store the vacuum cleaner and its accessories in a cool, dry place, away from direct sunlight and extreme temperatures. The charging station can be used for convenient storage and continuous charging.

7. TROUBLESHOOTING

If you encounter issues with your CleanMaxx 1463, refer to the following table for common problems and solutions.

Problem	Possible Cause	Solution
Vacuum does not turn on.	Battery is not charged. Power switch is off.	Charge the battery fully. Ensure the power switch is in the "ON" position.
Low suction power.	Dust container is full. Filter is clogged. Nozzle or hose is blocked.	Empty the dust container. Clean or replace the filter. Check for and remove any obstructions in the nozzle or hose.
Charging indicator light not working.	Power adapter not connected. Vacuum not properly seated in charging station. Faulty power outlet.	Ensure power adapter is securely plugged into both the station and the wall outlet. Re-seat the vacuum cleaner firmly in the charging station. Test the outlet with another appliance.
Vacuum turns off unexpectedly.	Battery is depleted. Overheating due to prolonged use or blockage.	Recharge the battery. Turn off the vacuum, clear any blockages, and allow it to cool down before resuming use.

8. SPECIFICATIONS

Feature	Detail
Brand	CLEANmaxx
Model Number	1463
Voltage	4.8 Volts
Power	100 Watts
Dimensions (L x W x H)	38.99 x 11 x 11.99 cm (approx. 15.35 x 4.33 x 4.72 inches)
Item Weight	720 Grams (approx. 1.59 lbs)
Filter Type	Cartridge
Special Feature	Bagless
Power Source	Battery Powered (1 Lithium-ion battery required)

9. WARRANTY AND SUPPORT

For information regarding warranty coverage, product support, or spare parts, please refer to the documentation provided at the time of purchase or contact your retailer. Keep your proof of purchase for warranty claims.

For further assistance, you may visit the official CLEANmaxx website or contact their customer service department.