



[Manuals.plus](#) /

> [Accessory USA](#) /

> Accessory USA UL Listed 5ft AC Power Cord Instruction Manual for Emerson CD Player Models

Accessory USA AC Power Cord

Accessory USA UL Listed 5ft AC Power Cord Instruction Manual

For Emerson CD Player Models: PD5203, PD5202BL, PD3812B, PD5100, PD5198, PD5201, PD5202

1. INTRODUCTION

This manual provides essential information for the safe and effective use of your Accessory USA UL Listed 5ft AC Power Cord. This power cord is designed to supply electrical power to compatible Emerson CD Player models, ensuring reliable operation. Please read this manual thoroughly before use and retain it for future reference.

Product Compatibility: This power cord is specifically designed for use with Emerson CD Player models including PD5203, PD5202BL, PD3812B, PD5100, PD5198, PD5201, and PD5202.

2. SAFETY INFORMATION

Your safety is paramount. Please observe the following precautions:

- **UL Listed:** This power cord is UL Listed, indicating it meets nationally recognized safety standards.
- **Proper Voltage:** Ensure the power outlet voltage matches the requirements of your Emerson CD Player.
- **Avoid Overloading:** Do not overload electrical outlets or extension cords.
- **Inspect Before Use:** Before each use, inspect the power cord for any signs of damage, such as frayed wires, cuts, or exposed conductors. Do not use a damaged cord.
- **Keep Dry:** Do not expose the power cord to water or excessive moisture. Use indoors only.
- **Proper Handling:** Always grasp the plug when disconnecting from an outlet; never pull by the cord.
- **Children and Pets:** Keep the power cord out of reach of children and pets to prevent accidental injury or damage.



Image 2.1: A document displaying the UL Online Certifications Directory for Cord Sets and Power-supply Cords, confirming the product's safety compliance.

3. SETUP

Follow these steps to correctly connect your power cord:

1. **Identify Connections:** Locate the AC power input port on your Emerson CD Player and a standard AC power outlet (Type B) on your wall or power strip.
2. **Connect to Device:** Insert the female end (C7 connector) of the 5ft AC power cord firmly into the AC power input port of your Emerson CD Player.
3. **Connect to Power Outlet:** Insert the male end (Type B plug) of the 5ft AC power cord firmly into a standard, grounded AC power outlet.
4. **Verify Connection:** Ensure both ends of the power cord are securely connected.



Image 3.1: A detailed view of the power cord's connectors, showing the male Type B plug and the female C7 connector, ready for connection.

4. OPERATING INSTRUCTIONS

Once the power cord is securely connected to both your Emerson CD Player and a power outlet, the CD player is ready for operation. The power cord itself does not require any specific operational steps beyond proper connection.

- Ensure the CD player's power switch is in the "Off" position before connecting the cord.
- After connecting the cord, turn on your Emerson CD Player using its dedicated power button.
- If the CD player does not power on, refer to the Troubleshooting section of this manual or the instruction manual for your specific Emerson CD Player model.



Image 4.1: The Accessory USA 5ft AC power cord, coiled, showcasing its length and standard design.

5. MAINTENANCE

Proper maintenance ensures the longevity and safe operation of your power cord:

- **Cleaning:** Disconnect the power cord from both the outlet and the device before cleaning. Wipe the cord with a dry, soft cloth. Do not use liquid cleaners.
- **Storage:** When not in use, coil the cord loosely and store it in a dry, cool place away from direct sunlight and extreme temperatures. Avoid tight coiling or kinking.
- **Regular Inspection:** Periodically check the cord for any signs of wear, damage, or discoloration. Replace the cord immediately if any damage is observed.

6. TROUBLESHOOTING

If you encounter issues, consider the following troubleshooting steps:

- **CD Player Not Powering On:**
 - Ensure the power cord is fully inserted into both the CD player and the wall outlet.
 - Check if the wall outlet is functional by plugging in another device.
 - Verify that the CD player's power switch is in the "On" position.
 - Inspect the power cord for any visible damage. If damaged, discontinue use and replace.
- **Intermittent Power:**
 - Ensure connections are secure and not loose.
 - Avoid bending or kinking the cord excessively, especially near the connectors.

If these steps do not resolve the issue, consult the instruction manual for your Emerson CD Player or contact a qualified technician.

7. SPECIFICATIONS

Product Type	AC Power Cord
Brand	Accessory USA
Length	5 feet (approximately 60 inches)
Certification	UL Listed, CE, FCC, RoHS
Connector Type (Male)	Type B (NEMA 5-15P)
Connector Type (Female)	C7 (Figure 8)
Compatibility	Emerson CD Player Models: PD5203, PD5202BL, PD3812B, PD5100, PD5198, PD5201, PD5202

8. WARRANTY AND SUPPORT

This Accessory USA power cord is manufactured to high-quality standards and is CE / FCC / RoHS certified. While specific warranty details are not provided in the product information, standard consumer rights and return policies typically apply.

- **Return Policy:** The product is generally subject to a 30-day return policy for refunds or replacements, as per standard retail practices.
- **Customer Support:** For any questions or concerns regarding the product, please contact the seller

or retailer from whom the purchase was made.

© 2023 Accessory USA. All rights reserved.
Information in this manual is subject to change without notice.