

[manuals.plus](#) /

› [Fossil](#) /

› [Fossil Fenmore Midsize Multifunction Gold-Tone Stainless Steel Watch BQ2366 User Manual](#)

Fossil BQ2366

Fossil Fenmore Midsize Multifunction Gold-Tone Stainless Steel Watch BQ2366 User Manual

INTRODUCTION

Thank you for choosing the Fossil Fenmore Midsize Multifunction Gold-Tone Stainless Steel Watch, model BQ2366. This manual provides essential instructions for setting up, operating, and maintaining your watch to ensure its longevity and optimal performance. This timepiece features a durable gold-tone stainless steel case and band, a black dial with multifunction sub-dials, and is designed for everyday wear.





Image 1: Front view of the Fossil Fenmore Midsize Multifunction Gold-Tone Stainless Steel Watch (BQ2366). The watch features a gold-tone case and band, a black dial with gold-tone hands and hour markers, and three sub-dials for multifunction display.

SETUP

1. Setting the Time and Date

- Pull out the Crown:** Gently pull the crown (the knob on the side of the watch) to position 2 (the outermost position).
- Set the Time:** Rotate the crown to move the hour and minute hands clockwise until the correct time is displayed. Ensure to account for AM/PM if setting the 24-hour sub-dial.
- Set the Date:** Push the crown back to position 1 (the middle position). Rotate the crown to adjust the date sub-dial.
- Set the Day:** Rotate the crown in position 1 in the opposite direction to adjust the day sub-dial.
- Engage the Crown:** Once the time, day, and date are set, push the crown fully back into position 0 (the innermost position) against the watch case. This will start the watch movement.

2. Adjusting the Stainless Steel Band

The stainless steel band may require adjustment for a comfortable fit. This typically involves removing or adding links. It is recommended to have this procedure performed by a professional jeweler or watch repair service to prevent damage to the band or watch.





Image 2: Side view of the Fossil Fenmore Midsize Multifunction Gold-Tone Stainless Steel Watch (BQ2366), showing the crown and pushers on the right side of the case, used for setting time and operating multifunction features.

OPERATING INSTRUCTIONS

Multifunction Features

Your Fossil Fenmore watch features three sub-dials that display additional information:

- **Day of the Week:** One sub-dial indicates the current day (e.g., MON, TUE).
- **Date:** Another sub-dial displays the current date (1-31).
- **24-Hour Time:** The third sub-dial shows the time in a 24-hour format, useful for distinguishing AM/PM.

These sub-dials are synchronized with the main time setting and adjust automatically as the main hands move past midnight. Refer to the "Setting the Time and Date" section for initial adjustment.

Water Resistance

This watch has a water resistance rating of 5 ATM (Atmospheres). This means it is suitable for short periods of recreational swimming, showering, or washing hands. It is not suitable for diving, snorkeling, or high-impact water sports. Avoid operating the crown or pushers when the watch is wet to prevent water ingress.

MAINTENANCE

Cleaning Your Watch

- To clean the watch case and stainless steel band, use a soft, damp cloth.
- For stubborn dirt, a mild soap solution can be used, followed by wiping with a clean, damp cloth and drying thoroughly.
- Avoid using harsh chemicals, abrasive cleaners, or solvents, as these can damage the watch's finish.

Battery Replacement

Your watch is powered by a Quartz Multifunction movement and requires one SR927SW battery (included). When the watch stops running, it indicates that the battery needs to be replaced. Battery replacement should be performed by a qualified watch technician to ensure proper sealing and maintain water resistance.

General Care

- Avoid exposing your watch to extreme temperatures, direct sunlight for prolonged periods, or strong magnetic fields.
- Protect the watch from impacts and drops to prevent damage to the movement or crystal.
- The watch features a scratch-resistant mineral crystal, but it is not entirely scratch-proof. Handle with

care.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Watch not running	Depleted battery	Replace battery (professional service recommended).
Incorrect time/date	Crown not fully engaged or incorrect setting	Ensure crown is pushed in. Re-set time/date as per "Setup" section.
Condensation under crystal	Temperature change or water ingress	Avoid extreme temperature changes. If severe or persistent, seek professional service.

If you encounter issues not listed here or if the suggested solutions do not resolve the problem, please contact Fossil customer support or an authorized service center.

SPECIFICATIONS

- **Model Number:** BQ2366
- **Case Size:** 44 mm
- **Movement:** Quartz Multifunction
- **Platform:** 44MM FENMORE
- **Strap Material:** Stainless Steel
- **Case Material:** Stainless Steel
- **Case Color:** Gold-Tone
- **Dial Color:** Black
- **Strap Fashion Color:** Gold Tone
- **Strap Width:** 22 mm
- **Closure:** 2 Pusher Foldover Clasp
- **Strap Inner Circumference:** 200 +/- 5 mm
- **Water Resistance:** 5 ATM
- **Crystal:** Scratch Resistant Mineral Crystal
- **Battery Type:** SR927SW (included)
- **Product Dimensions:** 1.73 x 0.87 x 0.47 inches; 3.53 ounces

WARRANTY AND SUPPORT

Fossil watches are manufactured to the highest quality standards and come with a limited warranty against defects in materials and workmanship. For specific warranty terms and conditions, please refer to the warranty card included with your purchase or visit the official Fossil website.

For customer support, service, or to locate an authorized service center, please visit the Fossil website or contact their customer service department directly. When contacting support, please have your watch model number (BQ2366) and purchase information available.

Fossil Official Website: www.fossil.com

