

Paubea K18MHC

Paubea K18MHC Cordless Ceramic Blade Hair Clippers User Manual

Model: K18MHC

INTRODUCTION

Thank you for choosing the Paubea K18MHC Cordless Ceramic Blade Hair Clippers. This manual provides essential information for the safe and effective use, maintenance, and troubleshooting of your new hair clippers. Please read these instructions thoroughly before first use and retain for future reference.

IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of electric shock, injury, or fire, always follow these basic safety precautions:

- Do not immerse the appliance in water while charging.
- Keep the appliance dry when not in use.
- Do not use the appliance with a damaged cord or plug.
- Keep the appliance away from heated surfaces.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Only use attachments supplied by the manufacturer.
- Do not open the appliance casing. There are no user-serviceable parts inside.

PACKAGE CONTENTS

Carefully unpack your Paubea K18MHC Hair Clippers and check that all items are present and in good condition. The package should contain:

- Paubea K18MHC Hair Clippers
- 4 Guide Combs (3mm, 6mm, 9mm, 12mm)

- USB Charging Cable
- Power Adapter
- Cleaning Brush
- Comb
- User Manual (this document)



Image: Contents of the Paubea K18MHC Hair Clippers package, including the clipper, four guide combs, charging cable, power adapter, cleaning brush, and comb.

PRODUCT OVERVIEW

The Paubea K18MHC features a durable ceramic and titanium blade, an adjustable cutting length, and an LED display for battery status.

Key Features:

- **Ceramic & Titanium Blade:** Designed for precise and smooth cutting.
- **Adjustable Blade Length:** Fine-tune cutting length from 0.8mm to 2.0mm directly on the clipper.
- **Guide Combs:** Four attachment combs (3mm, 6mm, 9mm, 12mm) for various hair lengths.

- **Cordless Operation:** Provides flexibility and ease of use.
- **USB Rechargeable:** Convenient charging via USB.
- **IPX7 Waterproof:** Allows for easy cleaning under running water.
- **LED Display:** Shows battery status and charging reminders.



Image: Detailed view of the ceramic and titanium blade assembly on the Paubea K18MHC hair clipper.

Adjustable Blade & Guide Combs for any hair style



Image: Illustration showing the adjustable blade settings (0.8mm, 1.2mm, 1.6mm, 2.0mm) and the four included guide combs (3mm, 6mm, 9mm, 12mm).

LED Display



Image: Close-up of the LED display on the Paubea K18MHC, indicating battery status (High, Mid, Low) and a charging reminder icon.

SETUP

Charging the Clippers:

1. Before first use, fully charge the clippers.
2. Connect the USB charging cable to the charging port on the clippers.
3. Plug the other end of the USB cable into the provided power adapter, then into a standard electrical outlet.
4. The LED display will indicate charging status. A full charge takes approximately 2.5 hours.
5. Once fully charged, disconnect the clippers from the power source.



Image: Illustration showing the charging process and battery duration information for the Paubea K18MHC hair clippers. A full charge takes 2.5 hours.

Attaching Guide Combs:

1. Ensure the clippers are turned off before attaching or removing guide combs.
2. Select the desired guide comb (3mm, 6mm, 9mm, or 12mm).
3. Align the comb with the clipper blade and push it firmly until it clicks into place.
4. To remove, gently pull the comb away from the blade.

OPERATING INSTRUCTIONS

Turning On/Off:

Press the power button to turn the clippers on or off.

Adjusting Blade Length:

The blade itself can be adjusted for fine-tuning cutting lengths. Use the lever on the side of the clipper to select between 0.8mm, 1.2mm, 1.6mm, and 2.0mm.

Hair Cutting Tips:

- For best results, use on clean, dry hair.
- Start with a longer guide comb and gradually switch to shorter ones if needed.
- Move the clippers against the direction of hair growth for an even cut.
- Overlap strokes to ensure no hair is missed.
- Regularly check the LED display for battery status to avoid interruptions during use.

MAINTENANCE

Cleaning the Blades:

1. Turn off the clippers and remove any attached guide comb.
2. Use the provided cleaning brush to remove loose hair from the blades.
3. Since the clippers are IPX7 waterproof, you can rinse the blade head under running water. Ensure the charging port cover is securely closed before rinsing.
4. Allow the blades to air dry completely before storage or next use.

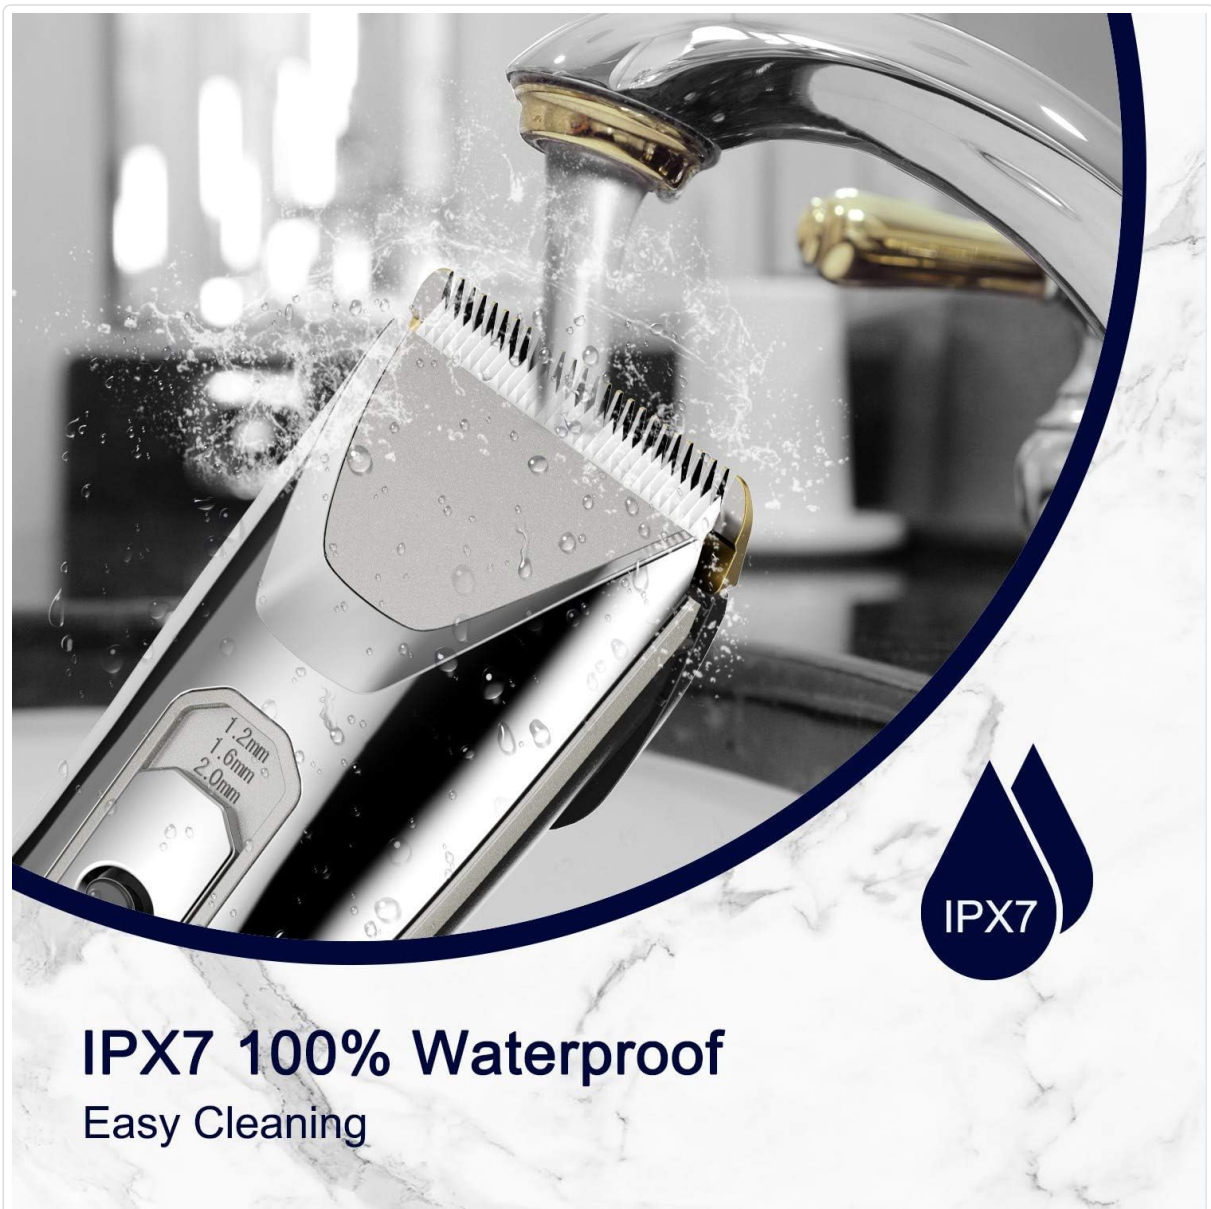


Image: The Paubea K18MHC hair clipper being cleaned under running water, highlighting its IPX7 waterproof rating for easy maintenance.

Oiling the Blades:

For optimal performance and longevity, it is recommended to oil the blades after every few uses, or if the clippers feel sluggish. Apply a small drop of clipper oil (not included) to the teeth of the blades while the clippers are running, then turn off and wipe off any excess oil.

Storage:

Store the clippers in a cool, dry place, away from direct sunlight and out of reach of children. Ensure the blades are clean and oiled before storing for extended periods.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Clippers do not turn on.	Battery is depleted.	Charge the clippers fully.
Clippers pull hair or cut unevenly.	Blades are dull or clogged with hair. Blades need oiling.	Clean the blades thoroughly. Apply clipper oil to the blades.
Clippers make unusual noise.	Blades are not properly aligned or need oiling.	Ensure blades are clean and oiled. If noise persists, contact support.
Charging indicator not working.	Cable or adapter issue.	Check if the charging cable and adapter are securely connected and functional. Try a different USB port or adapter.

SPECIFICATIONS

Model Name:	Paubea Hair Clippers
Model Number:	K18MHC
Brand:	Paubea
Power Source:	Battery Powered
Special Features:	Cordless, USB Rechargeable
Blade Material:	Ceramic, Titanium
Adjustable Blade Lengths:	0.8mm, 1.2mm, 1.6mm, 2.0mm
Guide Comb Lengths:	3mm, 6mm, 9mm, 12mm
Waterproof Rating:	IPX7
Charging Time:	Approx. 2.5 hours
Color:	Silver
Package Dimensions:	20.9 x 13.49 x 5.21 cm
Weight:	358 g

WARRANTY INFORMATION

Paubea products are manufactured to high-quality standards. For specific warranty details, please refer to the warranty card included with your purchase or contact Paubea customer support. Keep your purchase receipt as proof of purchase for any warranty claims.

CUSTOMER SUPPORT

If you have any questions, concerns, or require assistance with your Paubea K18MHC Hair Clippers, please contact our customer support team. Contact information can typically be found on the product packaging or on the official Paubea website.

For online support, you may visit the product page on Amazon or the manufacturer's website for FAQs and further assistance.