

[Manuals.plus](#) /

› [UBay](#) /

› UBay RM-YD092 Universal Remote Control Instruction Manual for Sony LCD LED HDTV and Bravia TVs

UBay RM-YD092

UBay RM-YD092 Universal Remote Control Instruction Manual

For Sony LCD LED HDTV and Bravia TVs

1. INTRODUCTION

This instruction manual provides essential information for the proper use and maintenance of your UBay RM-YD092 Universal Remote Control. This remote is designed to be compatible with a wide range of Sony LCD LED HDTV and Bravia television models, offering a direct replacement experience without complex programming. Please read this manual thoroughly before using the remote control to ensure optimal performance and longevity.

2. PRODUCT OVERVIEW

The UBay RM-YD092 is a universal replacement remote control specifically engineered for Sony televisions. It replicates the functionality of many original Sony remote models, providing intuitive control over your TV's primary functions.



Figure 1: Front view of the UBay RM-YD092 Universal Remote Control, showing all buttons and their labels.

Key Features:

- **Universal Compatibility:** Works with numerous Sony LCD LED HDTV and Bravia TV models.
- **No Setup Required:** Operates immediately upon battery insertion for most compatible Sony TVs.
- **Direct Functionality:** Provides direct access to common TV functions such as Power, Input, Volume, Channel, Menu, and Navigation.
- **Durable Design:** Constructed for everyday use.

3. SETUP

3.1 Battery Installation

The UBay RM-YD092 remote control requires two AAA batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover downwards to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

Once batteries are installed, the remote is ready for use with compatible Sony televisions. No additional programming or code entry is typically required.

4. OPERATING INSTRUCTIONS

The remote control provides access to various functions of your Sony television. Refer to the button layout in Figure 2 for visual guidance.



Figure 2: Angled view of the UBay RM-YD092 Remote Control, illustrating the arrangement of control buttons.

Common Button Functions:

- **POWER:** Turns the television on or off.

- **INPUT:** Cycles through available input sources (HDMI, AV, etc.).
- **SYNC MENU:** Accesses the TV's Sync Menu for connected devices.
- **PIC OFF:** Turns off the picture while audio continues.
- **WIDE:** Adjusts the screen aspect ratio.
- **Number Buttons (0-9):** Direct channel selection.
- **SUBTITLE CC:** Toggles subtitles or closed captions.
- **Color Buttons (Red, Green, Yellow, Blue):** Functionality varies by TV model and on-screen prompts.
- **SLEEP:** Sets a sleep timer for the TV.
- **DISPLAY:** Shows on-screen information about the current program or input.
- **Navigation Pad (Up, Down, Left, Right, Enter):** Navigates through menus and confirms selections.
- **RETURN:** Goes back to the previous menu or screen.
- **OPTIONS:** Displays context-sensitive options for the current screen.
- **HOME:** Accesses the TV's main home menu.
- **VOL +/-:** Adjusts the volume level.
- **CH +/-:** Changes the television channel.
- **JUMP:** Switches between the current and previously viewed channel.
- **MUTING:** Mutes or unmutes the television audio.
- **Playback Controls (PREV, PLAY, PAUSE, STOP, NEXT):** Controls media playback on compatible devices or TV functions.

For specific advanced functions, consult your television's original user manual, as some features may not be directly accessible via this universal remote.

5. MAINTENANCE

5.1 Battery Replacement

Replace the batteries when the remote control's response becomes inconsistent or stops working. Always replace both batteries simultaneously with new AAA batteries. Do not mix old and new batteries, or different types of batteries.

5.2 Cleaning

To clean the remote control, gently wipe its surface with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals, solvents, or abrasive materials, as these can damage the remote's finish or internal components.

Ensure no liquid enters the remote control's casing, especially around the buttons or battery compartment.

6. TROUBLESHOOTING

If you encounter issues with your UBay RM-YD092 remote control, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

 
Problem	Possible Cause	Solution
Remote control is not responding.	• Dead or incorrectly installed batteries. • Obstruction between remote and TV. • Remote is too far from the TV.	• Replace batteries with new AAA batteries, ensuring correct polarity. • Remove any objects blocking the line of sight between the remote and the TV's infrared sensor. • Move closer to the TV and point the remote directly at it.
Some buttons or functions do not work.	• Specific TV model incompatibility for certain advanced functions. • Button malfunction.	• This universal remote may not support all advanced features of every Sony TV model. Refer to your TV's original manual. • Ensure the button is not stuck. If the issue persists for a specific button, the remote may be faulty.
Buttons require multiple presses to register.	• Weak batteries. • Infrared sensor obstruction or misalignment.	• Replace batteries. • Ensure a clear line of sight and point the remote directly at the TV.

7. SPECIFICATIONS


- **Model:** RM-YD092
- **Brand:** UBay
- **Compatible Devices:** Sony LCD LED HDTV, Bravia Televisions
- **Special Feature:** Universal Replacement
- **Power Source:** 2 x AAA Batteries (not included)
- **Product Dimensions:** 6 x 1.8 x 0.5 inches
- **Item Weight:** 2.18 ounces

8. WARRANTY AND SUPPORT

For warranty information or technical support regarding your UBay RM-YD092 Universal Remote Control, please refer to the retailer or manufacturer's official website where the product was purchased. Keep your purchase receipt as proof of purchase.



© 2023 UBay. All rights reserved.

 

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question