

[manuals.plus](#) /

› [Neutral](#) /

› [Voice Recording Button User Manual](#)

## Neutral CH-R1

# Voice Recording Button User Manual

Model: CH-R1 | Brand: Neutral

## INTRODUCTION

This manual provides comprehensive instructions for the Voice Recording Button (Model CH-R1). This device allows for easy recording and playback of short audio messages, offering a versatile tool for various applications, from personal reminders to interactive games.

## PRODUCT OVERVIEW

The Voice Recording Button is a compact, battery-powered device designed for simple audio recording and playback. It features a large, easy-to-press button and a clear audio output.

- Recordable Sound Button:** Records voice content up to 30 seconds with excellent sound quality. Portable and suitable for travel, office, and party games.
- High Quality Material:** Constructed from high-quality, safe, and non-toxic ABS plastic. Operates on two AAA batteries (included).
- Versatile Use:** Allows recording of any sound for 30 seconds, enabling unlimited uses for communication, pranks, or educational purposes.
- Answer Buzzers:** Re-recordable function allows for pre-recorded responses, useful for interactive games or quick replies.
- Environmentally Friendly:** Presented in attractive packaging, making it an ideal gift for colleagues, friends, or family.



Figure 1: Front view of the Voice Recording Button, showcasing its prominent red button and black base.



Figure 2: Side profile of the Voice Recording Button, highlighting its compact design.

## SETUP

---

Before using your Voice Recording Button, ensure batteries are correctly installed.

### Battery Installation

1. Locate the battery compartment on the underside of the button.
2. Open the battery compartment cover.
3. Insert two AAA batteries, ensuring correct polarity (+/-).
4. Close the battery compartment cover securely.

# RECORD TALKING BUTTON



Insert 2 AAA batteries.



Turn to "REC" to record your voice,  
30 seconds recording time.



Turn to "PLAY" to play your voice.



Record your own voice.

Figure 3: Visual guide showing battery insertion (top-left panel) and other operational steps.

## OPERATING INSTRUCTIONS

Follow these steps to record and play messages on your Voice Recording Button.

### Recording a Message

1. **STEP 1:** Slide the REC / PLAY switch, located on the underside of the button, to the "REC" position.
2. **STEP 2:** Position yourself approximately 20 cm (8 inches) from the recording button. Press and hold the top button for 2 seconds until you hear a "beep" sound. You can then begin speaking your message. Release the button once your recording is complete. You will hear two "Beep" sounds, indicating successful recording. The maximum recording time is 30 seconds.

### Playing a Message

1. **STEP 3:** To listen to your recording, turn the REC / PLAY switch to the "PLAY" position.
2. **STEP 4:** Press the top button. The device will play the content you just recorded. Pressing the top button again after

playback will restart the recording from the beginning.

**Please Note:** If you press the top button during playback, it will stop playing. Pressing it again will restart the recording from the beginning. To make a new recording, simply repeat steps 1 and 2; the previously recorded sound will be automatically deleted.



Figure 4: The button's re-recording capability and sound quality are highlighted.



Figure 5: The button being used in a fun, interactive setting, emphasizing its ease of use for re-recording.

## Official Product Videos

There are no official seller-created product videos available for this item at this time.

## MAINTENANCE

To ensure the longevity and optimal performance of your Voice Recording Button, follow these simple maintenance guidelines:

- Cleaning:** Wipe the surface of the button with a soft, dry cloth. Avoid using abrasive cleaners or solvents, as these can damage the plastic.
- Storage:** Store the button in a cool, dry place away from direct sunlight and extreme temperatures.
- Battery Care:** If the device will not be used for an extended period, remove the batteries to prevent leakage and potential damage.

## TROUBLESHOOTING

If you encounter any issues with your Voice Recording Button, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No sound during playback.	Batteries are dead or incorrectly installed. REC/PLAY switch is in the wrong position.	Check and replace batteries if necessary. Ensure the REC/PLAY switch is set to "PLAY".
Recording is unclear or distorted.	Microphone too far or too close. Background noise.	Ensure you are 20 cm from the microphone during recording. Record in a quiet environment.

Problem	Possible Cause	Solution
Button does not respond.	Low batteries. Internal malfunction.	Replace batteries. If the issue persists, contact customer support.

## SPECIFICATIONS

Feature	Detail
Product Dimensions	3.5 x 3.5 x 1.4 inches
Item Weight	2.39 ounces
Model Number	CH-R1
Batteries Required	2 AAA batteries (included)
Digital Recording Time	30 seconds
Material	ABS Plastic

## WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact the manufacturer directly. Contact details are typically provided on the product box or an enclosed leaflet.

© 2025 Neutral. All rights reserved.