

[Manuals.plus](#) /

› [Anne Klein](#) /

› Anne Klein Women's Premium Crystal Accented Mesh Bracelet Watch (Model AK/3001SVTT) - Instruction Manual

Anne Klein AK/3001SVTT

Anne Klein Women's Premium Crystal Accented Mesh Bracelet Watch (Model AK/3001SVTT) - Instruction Manual

INTRODUCTION

This instruction manual provides essential information for the proper setup, operation, maintenance, and troubleshooting of your Anne Klein Women's Premium Crystal Accented Mesh Bracelet Watch, model AK/3001SVTT. Please read this manual thoroughly before using your watch to ensure optimal performance and longevity.

Your watch features a durable mineral crystal lens, a silver-tone sunray dial with elegant gold-tone hands and markers, and is adorned with 35 clear premium crystals. The watch is equipped with a reliable Japanese-quartz movement and a comfortable stainless steel silver-tone mesh bracelet with adjustable end links and a jewelry clasp.

SETUP

1. Setting the Time

1. Pull the crown (the small knob on the side of the watch case) gently outwards to the time-setting position.
2. Turn the crown clockwise or counter-clockwise to adjust the hour and minute hands to the correct time.
3. Once the time is set, push the crown back into its original position to start the watch movement.

2. Adjusting the Bracelet

The mesh bracelet is designed with adjustable end links to ensure a comfortable fit. To adjust, locate the clasp mechanism. The clasp typically has a small lever or tab that can be lifted to slide the clasp along the mesh band. Adjust the clasp to your desired wrist size and then securely close the lever/tab.





Image: Front view of the Anne Klein Women's Premium Crystal Accented Mesh Bracelet Watch, Two Tone. The watch features a silver-tone dial with gold-tone hands and markers, and a crystal-accented sub-dial. The bracelet is a combination of silver-tone mesh and gold-tone links.

OPERATING INSTRUCTIONS

Basic Timekeeping

Your Anne Klein watch operates on a Japanese-quartz movement, providing accurate timekeeping. Once the time is set as described in the 'Setup' section, the watch will continuously display the current time. No further daily adjustments are typically required unless the time needs to be reset due to travel or daylight saving changes.

Water Resistance

This watch is water resistant up to 100 feet (30 meters). This rating means the watch is suitable for splashes, rain, or brief immersion in water. It is **not** suitable for swimming, diving, or prolonged water activities. Avoid operating the crown while the watch is wet to prevent water intrusion.

Your browser does not support the video tag.

Video: A manufacturer's video showcasing the Anne Klein Women's AK/3214LPRG Rose Gold-Tone and Light Pink Resin Bracelet Watch. This video demonstrates the general aesthetic and design of Anne Klein watches.

Your browser does not support the video tag.

Video: A manufacturer's video highlighting features of an Anne Klein watch, similar in style to the AK/3001SVTT model. This video provides a closer look at the watch's details and craftsmanship.

MAINTENANCE

Cleaning Your Watch

- Wipe the watch case and bracelet regularly with a soft, dry cloth to remove dust and smudges.
- For stubborn dirt, a slightly damp cloth can be used, followed immediately by a dry cloth.
- Avoid using harsh chemicals, solvents, or abrasive cleaners, as these can damage the watch's finish and crystal.

Battery Replacement

Your watch is powered by a product-specific battery (included). When the watch stops running, it indicates the battery needs replacement. It is recommended to have the battery replaced by a qualified watch technician to ensure proper sealing and maintain water resistance.

Storage

When not in use, store your watch in a cool, dry place, away from direct sunlight, extreme temperatures, and strong magnetic fields. Keeping it in its original box or a soft pouch can help protect it from scratches.

TROUBLESHOOTING

- **Watch Not Running:** Ensure the crown is fully pushed in. If it is, the battery may need replacement.
- **Inaccurate Time:** If the watch is consistently fast or slow, the movement may require servicing. Extreme temperatures or strong magnetic fields can also affect accuracy.
- **Bracelet Discoloration:** While the stainless steel mesh bracelet is durable, prolonged exposure to chemicals (e.g., perfumes, lotions, cleaning agents) can cause discoloration. Clean regularly as per maintenance instructions.

- **Water Intrusion:** If moisture appears inside the watch, immediately take it to a qualified watch technician for inspection and repair to prevent further damage.

SPECIFICATIONS

Feature	Detail
Model Number	AK/3001SVTT
Case Diameter	34 millimeters
Case Thickness	9 millimeters
Band Width	12 millimeters
Movement	Japanese Quartz
Crystal Type	Mineral
Water Resistance Depth	100 feet (30 meters)
Material	Stainless Steel (Band), Metal (Case)
Clasp Type	Jewelry Clasp
Included Components	Battery, Instruction Manual, Warranty Information
Item Weight	4.8 ounces
UPC	086702634781

WARRANTY AND SUPPORT

Warranty Information

This Anne Klein watch comes with a Manufacturer's Warranty. Please refer to the included warranty information card for specific terms, conditions, and duration of coverage. Keep your proof of purchase for warranty claims.

Customer Support

For further assistance, technical support, or warranty service, please contact Anne Klein customer service. You can find contact details on the official Anne Klein website or through the retailer where the watch was purchased.

Visit the official Anne Klein store for more information:[Anne Klein Store](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07MNT1VZB>

More documents and user manuals: **<https://manuals.plus/>**