

[Manuals.plus](#) /

› [GEORGE KOVACS](#) /

› GEORGE KOVACS P5040-077-L Tube LED Wall Sconce Instruction Manual

GEORGE KOVACS P5040-077-L

GEORGE KOVACS P5040-077-L Tube LED Wall Sconce

Model: P5040-077-L | Brand: GEORGE KOVACS

IMPORTANT SAFETY INFORMATION

Please read and understand all instructions before beginning installation. Failure to follow these instructions may result in electric shock, fire, or other hazards that can cause property damage or personal injury.

- Always disconnect power at the main circuit breaker before installation or servicing.
- Consult a qualified electrician if you are unsure about the installation process.
- Ensure all electrical connections are made in accordance with local codes and ordinances.
- This fixture is rated for indoor, damp location use only. Do not install in areas exposed to direct water.
- Do not attempt to modify the fixture. Any modifications may void the warranty and create safety hazards.
- Handle glass components with care to prevent breakage.

PRODUCT OVERVIEW

The GEORGE KOVACS P5040-077-L Tube LED Wall Sconce is a contemporary lighting fixture designed for indoor use. It features a chrome finish and an etched opal glass shade, providing diffused LED illumination. This fixture is dimmable, allowing for adjustable light output.



Figure 1: Front view of the GEORGE KOVACS P5040-077-L Tube LED Wall Sconce with chrome finish and etched opal glass shade.

Components List

Verify that all components are present before beginning installation. If any parts are missing or damaged, do not proceed with installation and contact customer support.

- LED Wall Sconce Fixture (P5040-077-L)
- Etched Opal Glass Shade
- Mounting Hardware (e.g., mounting plate, screws, wire nuts) - *Typically included, verify contents of packaging.*
- Instruction Manual (this document)

SETUP AND INSTALLATION

Professional installation is recommended. Ensure power is OFF at the circuit breaker before starting.

Pre-Installation

1. Turn off the main power supply at the circuit breaker or fuse box to avoid electrical shock.
2. Carefully unpack the fixture and all components. Place them on a clean, flat surface.
3. Review the components list to ensure all parts are present.

Installation Steps

1. Attach the mounting plate to the junction box using the provided screws. Ensure the plate is securely fastened.
2. Connect the fixture's electrical wires to the corresponding house wires: black to black (live), white to white (neutral), and bare copper or green to bare copper or green (ground). Secure connections with wire nuts.
3. Carefully tuck all wires into the junction box.
4. Align the fixture base with the mounting plate and secure it with the provided screws.
5. Install the etched opal glass shade onto the fixture according to the specific design (typically by sliding it into place or securing with small set screws). Ensure it is stable and properly seated.
6. Restore power at the circuit breaker and test the fixture.



Figure 2: Side view of the wall sconce, illustrating the mounting base and glass shade attachment point.

OPERATING INSTRUCTIONS

Powering On/Off

Once installed and power is restored, the fixture can be turned on or off using a standard wall switch connected to the circuit.

Dimmable Feature

This LED wall sconce is dimmable. To utilize the dimming function, ensure you have installed a compatible LED dimmer switch (sold separately) in your wall. Follow the dimmer switch manufacturer's instructions for operation.

MAINTENANCE

Cleaning

To clean the fixture, ensure power is off. Use a soft, dry, or slightly damp cloth. Do not use abrasive cleaners, solvents, or polishes as they may damage the finish or glass. For the glass shade, a mild glass cleaner can be used sparingly on a cloth, then wiped dry.

LED Replacement

The LED light source in this fixture is integrated and not designed to be user-replaceable. The LEDs are designed for a long operational life. If the LED light source fails, the entire fixture may need to be replaced. Contact customer support for assistance.

TROUBLESHOOTING

Before attempting any troubleshooting, ensure power is disconnected at the circuit breaker.

Problem	Possible Cause	Solution
Fixture does not light up.	No power to the fixture. Loose wire connections. Faulty wall switch.	Check circuit breaker. Verify all wire connections are secure. Test wall switch or replace if necessary.
Light flickers or dims improperly.	Incompatible dimmer switch. Loose wire connections.	Ensure an LED-compatible dimmer is used. Check wire connections.
Glass shade is loose.	Shade not properly secured.	Re-seat the glass shade and ensure any securing screws are tightened.

SPECIFICATIONS

Feature	Detail
Model Number	P5040-077-L
Brand	GEORGE KOVACS
Finish Color	Chrome
Material	Aluminum, Glass
Lamping Type	Integrated LED
Wattage	12 Watts
Color Temperature	3000 Kelvin
Lumens	633.3 Lumens
CRI	92

Feature	Detail
Dimmable	Yes (with compatible LED dimmer)
Moisture Rating	Damp Rated (Indoor use)
Voltage	120 Volts
Product Dimensions	4.75" W x 13.25" H x 4" D
Backplate Dimensions	4.75" W x 6.5" L
Item Weight	2.82 Pounds

WARRANTY AND SUPPORT

This GEORGE KOVACS product is covered by a manufacturer’s warranty against defects in materials and workmanship. Specific warranty terms and duration may vary. Please retain your proof of purchase for warranty claims.

For technical assistance, missing parts, or warranty inquiries, please contact GEORGE KOVACS customer support. Refer to the product packaging or the official GEORGE KOVACS website for the most current contact information.

Online Support: Visit the official GEORGE KOVACS website for FAQs and support resources.

Phone Support: Refer to your product packaging for customer service phone numbers.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

