

Manuals.plus /

› Orbegozo /

› Orbegozo MIG 2042 Microwave with Grill User Manual

Orbegozo MIG2042

Orbegozo MIG 2042 Microwave with Grill User Manual

1. INTRODUCTION

Thank you for choosing the Orbegozo MIG 2042 Microwave with Grill. This appliance is designed for efficient and convenient cooking, reheating, and defrosting of various food items. It features a 20-liter capacity, 700W microwave power, 900W grill power, 10 power levels, 8 automatic menus, and a digital LED display. Please read this manual thoroughly before operating the appliance to ensure safe and optimal performance.



Figure 1: Front view of the Orbegozo MIG 2042 Microwave with Grill.

2. IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, injury to persons, or exposure to excessive microwave energy when using your appliance, follow basic safety precautions, including the following:

1. Read all instructions before using the appliance.
2. Ensure the appliance is properly grounded. Connect only to a properly grounded outlet.
3. Do not operate the microwave if it is damaged, particularly the door, door seals, or interior. Contact qualified service personnel for repair.
4. Do not place metal containers, foil, or utensils inside the microwave during microwave cooking, as this can cause arcing.
5. Close supervision is necessary when the appliance is used by or near children.
6. Ensure adequate ventilation around the appliance. Do not block any ventilation openings.
7. Do not heat liquids or other foods in sealed containers, as they are liable to explode.
8. Exercise caution when heating liquids. Superheated liquids can boil over suddenly. Stir liquids before and halfway through heating.
9. Clean the microwave regularly and remove any food deposits. Failure to maintain the appliance in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.

3. PRODUCT COMPONENTS

The Orbegozo MIG 2042 Microwave with Grill includes the following main components:

- Microwave Unit (Main body)
- Glass Turntable (For even cooking)
- Roller Ring (Supports the turntable)
- Grill Rack (For use during grill cooking)
- Control Panel (Buttons and dial for operation)
- Digital LED Display (Shows time, settings, and status)
- Door with Handle (Access to the cooking cavity)



Figure 2: Interior view showing the glass turntable and grill rack.

4. SETUP

Follow these steps to set up your microwave oven:

1. **Unpacking:** Carefully remove the microwave oven and all packaging materials from the carton.
2. **Placement:** Place the microwave oven on a flat, stable, heat-resistant surface that is strong enough to hold the oven and the food you place in it. Ensure there is at least 10 cm of space at the rear, 20 cm at the top, and 5 cm on each side for proper ventilation. Do not place the oven near heat sources or in a damp environment.
3. **Interior Assembly:** Place the roller ring in the center of the oven cavity. Then, place the glass turntable securely on top of the roller ring. Ensure the turntable rotates freely.
4. **Electrical Connection:** Plug the power cord into a standard, grounded 220V electrical outlet.
5. **Initial Cleaning:** Before first use, wipe the interior and exterior of the microwave with a damp cloth.

5. OPERATING INSTRUCTIONS

This section details the various functions and how to operate your Orbegozo MIG 2042 microwave.

5.1. Control Panel Overview

The control panel features a digital LED display, function buttons, power level selection, and a time/menu dial. Specific button functions are typically indicated by icons or text.

5.2. Setting the Clock

Upon plugging in, the display may show '0:00' or similar. Refer to your specific model's instructions for setting the 24-hour clock. This usually involves pressing a 'Clock' or 'Time' button, rotating the dial to set hours and minutes, and confirming.

5.3. Microwave Cooking

1. Place food in a microwave-safe container on the glass turntable.
2. Close the door securely.
3. Press the 'Microwave' button or select the desired power level (e.g., 700W, 10 levels available).
4. Rotate the dial to set the cooking time.
5. Press the 'Start' button to begin cooking.

5.4. Grill Cooking

1. Place food on the grill rack, ensuring it is suitable for grilling.
2. Close the door securely.
3. Press the 'Grill' button.
4. Rotate the dial to set the grilling time.
5. Press the 'Start' button to begin grilling.

5.5. Combined Cooking

The appliance offers 2 combined grill+microwave functions for versatile cooking.

1. Place food in a suitable container.
2. Close the door.
3. Press the 'Combi' button repeatedly to select the desired combined mode (e.g., C-1, C-2).
4. Rotate the dial to set the cooking time.
5. Press the 'Start' button.

5.6. Automatic Menus

The microwave has 8 pre-configured automatic menus for common food items.

1. Place food in the microwave.
2. Press the 'Auto Menu' button.
3. Rotate the dial to select the desired menu number (e.g., A-1 for popcorn, A-2 for potato).
4. Confirm the quantity or weight if prompted.
5. Press 'Start'.

5.7. Defrost Function

This function allows defrosting by weight or time.

1. Place frozen food in the microwave.
2. Press the 'Defrost' button.
3. Rotate the dial to select defrost by weight or time, and adjust accordingly.
4. Press 'Start'.

5.8. Child Lock

To prevent unintended operation, especially by children, the control panel can be locked.

- **Activate:** Press and hold the 'Stop/Cancel' button for approximately 3 seconds until a lock indicator appears on the display.
- **Deactivate:** Press and hold the 'Stop/Cancel' button again for approximately 3 seconds until the lock indicator disappears.

6. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and efficient operation of your microwave oven.

- **Always unplug the appliance** from the power outlet before cleaning.
- **Exterior:** Wipe the exterior surface with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Interior:** Clean the inside cavity with a mild detergent and a damp cloth after each use. For stubborn food splatters, place a bowl of water with lemon juice inside and microwave for a few minutes to loosen residue, then wipe clean.
- **Door and Seals:** Clean the door, door seals, and adjacent parts carefully with a damp cloth to remove

any spills or splatters.

- **Turntable and Roller Ring:** The glass turntable and roller ring can be removed and washed in warm soapy water or in a dishwasher. Ensure they are completely dry before placing them back in the oven.
- **Grill Rack:** Clean the grill rack with warm soapy water.

7. TROUBLESHOOTING

If you encounter issues with your microwave, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Microwave does not start	Power cord not plugged in; Door not closed properly; Fuse blown or circuit breaker tripped.	Ensure power cord is securely plugged in; Close the door firmly; Check household fuse/circuit breaker.
Food not heating	Incorrect power level or cooking time set; Door not closed properly.	Adjust power level and cooking time; Ensure door is fully closed.
Turntable does not rotate	Turntable or roller ring not positioned correctly; Obstruction under turntable.	Reposition turntable and roller ring; Remove any obstructions.
Unusual noise / Fan runs after cooking	Normal operation for cooling internal components.	This is normal. The fan will continue to run for a short period after cooking to cool the appliance.
Display not working	No power supply.	Check power cord and electrical outlet.

If the problem persists after checking these points, please contact customer support.

8. SPECIFICATIONS

Feature	Specification
Brand	Orbegozo
Model Number	MIG2042
Color	Red
Capacity	20 Liters
Microwave Power	700 Watts
Grill Power	900 Watts
Voltage	220 Volts
Material	Steel
Dimensions (L x W x H)	35 x 45 x 25 cm (approx.)
Product Weight	11.2 kg
Noise Level	44 dB
Special Features	Control panel lock, Programmable, Timer



Figure 3: Approximate dimensions of the Orbegozo MIG 2042 Microwave.

9. WARRANTY AND SUPPORT

Your Orbegozo MIG 2042 Microwave with Grill is covered by a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions, including the warranty period and coverage details. For technical assistance, spare parts, or any questions regarding the operation or maintenance of your appliance, please contact Orbegozo customer service. Contact information can typically be found on the manufacturer's website or in the product packaging.

