

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Axess](#) /

› [Axess Portable Bluetooth Indoor/Outdoor Speaker SPBT1101BK User Manual](#)

Axess SPBT1101BK

Axess Portable Bluetooth Indoor/Outdoor Speaker

Model: SPBT1101BK

INTRODUCTION

This manual provides detailed instructions for the operation and maintenance of your Axess SPBT1101BK Portable Bluetooth Indoor/Outdoor Speaker. Please read this manual thoroughly before using the product to ensure proper function and to prevent damage.

SAFETY INFORMATION

To ensure safe operation and prolong the life of your speaker, please observe the following precautions:

- Do not expose the unit to extreme temperatures, humidity, or direct sunlight.
- Do not disassemble or modify the speaker. This will void the warranty and may cause damage.
- Keep the speaker away from water and other liquids.
- Use only the specified charging adapter.
- Clean the speaker with a soft, dry cloth. Do not use abrasive cleaners.
- Ensure proper ventilation around the speaker during operation.

PACKAGE CONTENTS

Please check the package for the following items:

- Axess SPBT1101BK Portable Bluetooth Speaker
- Wireless Microphone (1 unit)
- Charging Cable
- User Manual (this document)

PRODUCT FEATURES

The Axess SPBT1101BK speaker offers a range of features for versatile audio playback:

- **Bluetooth Connectivity:** Wirelessly stream audio from compatible devices within a 30-foot operating range.

- **Integrated Subwoofer:** Features a 6-inch subwoofer for enhanced bass.
- **Microphone Inputs:** Two microphone inputs with echo control for karaoke or public address.
- **USB and SD Card Playback:** Supports audio playback from USB flash drives and Micro SD cards.
- **FM Radio:** Built-in FM radio tuner for listening to local stations.
- **Rechargeable Battery:** High-capacity 3000 mAh lithium rechargeable battery for extended playtime.
- **Portable Design:** Sturdy handle and D-rings for easy transport.
- **Control Panel:** Comprehensive controls for adjusting volume, bass, microphone levels, and track navigation.

CONTROLS AND CONNECTIONS



This image displays a detailed diagram of the speaker's control panel, highlighting all inputs, outputs, and control knobs. The main components include the DC 5V input, USB port, SD card slot, AUX input, microphone inputs (MIC1, MIC2), and various control knobs for volume, bass, tone, and microphone echo.

Familiarize yourself with the control panel located on the side of the speaker:

- **DC 5V Input:** For charging the speaker's internal battery.
- **SD Card Input:** Insert a Micro SD card for audio playback.
- **USB Input:** Insert a USB flash drive for audio playback.
- **AUX Input:** Connect external audio devices using a 3.5mm audio cable.
- **MIC1 / MIC2 Inputs:** Connect wired microphones for karaoke or public address.
- **ON/OFF Switch:** Powers the speaker on or off.
- **MODE Button:** Switches between Bluetooth, FM Radio, USB, SD, and AUX modes.
- **Play/Pause Button:** Plays or pauses audio playback.
- **Previous/Next Track Buttons:** Navigates between tracks or FM radio stations.
- **VOL- / VOL+ Knobs:** Adjusts the main speaker volume.
- **BASS Knob:** Adjusts the bass level of the speaker output.
- **MIC VOL Knob:** Adjusts the volume of the connected microphones.
- **MIC ECHO Knob:** Adjusts the echo effect for the microphones.

SETUP

Charging the Speaker

Before first use, fully charge the speaker. Connect the charging cable to the DC 5V input on the speaker and the other end to a

compatible USB power source (e.g., USB wall adapter, computer USB port). The charging indicator light will illuminate during charging and turn off when fully charged. A full charge takes approximately 3-4 hours.

Initial Power On

Locate the ON/OFF switch on the control panel. Slide the switch to the "ON" position to power on the speaker. You will hear an audible prompt indicating the speaker is ready for operation.

OPERATING INSTRUCTIONS

Bluetooth Mode

1. Power on the speaker. The speaker will automatically enter Bluetooth pairing mode, indicated by an audible prompt.
2. Enable Bluetooth on your mobile device (smartphone, tablet, laptop).
3. Search for "SPBT1101BK" in your device's Bluetooth settings and select it to pair.
4. Once successfully paired, you will hear a confirmation sound. You can now stream audio wirelessly from your device to the speaker.
5. Use the Play/Pause and Previous/Next Track buttons on the speaker or your device to control playback.



This image shows the Axess SPBT1101BK speaker alongside its included wireless microphone, illustrating the product's primary components and portable form factor. The speaker features a sturdy handle for easy carrying.

USB/SD Card Playback

1. Insert a USB flash drive or Micro SD card into the respective slot on the control panel.
2. Press the "MODE" button to switch to USB or SD card mode. The speaker will automatically detect and begin playing audio files (MP3/WMA format recommended).
3. Use the Play/Pause and Previous/Next Track buttons to control playback.

FM Radio Mode

1. Press the "MODE" button repeatedly until you enter FM Radio mode.
2. Press and hold the Play/Pause button to initiate an automatic scan for available FM stations. The speaker will save detected stations.
3. Use the Previous/Next Track buttons to navigate between saved FM stations.

Microphone and Karaoke Function

1. Connect the included wireless microphone (if applicable) or a wired microphone to either the MIC1 or MIC2 input.
2. Adjust the "MIC VOL" knob to control the microphone's volume.
3. Adjust the "MIC ECHO" knob to add an echo effect to the microphone's output.
4. Ensure the main speaker volume (VOL) is set to a comfortable level.



This image shows a hand holding a microphone, positioned near the speaker's control panel, demonstrating the use of the microphone input for karaoke or public address functions. The speaker's robust design is also visible.

MAINTENANCE

- **Cleaning:** Use a soft, dry, lint-free cloth to clean the exterior of the speaker. Do not use liquid cleaners, aerosols, or solvents.
- **Storage:** When not in use for extended periods, store the speaker in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Battery Care:** To maintain battery life, avoid fully discharging the battery frequently. Recharge the speaker regularly, even if not in use.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Battery is depleted.	Charge the speaker using the provided charging cable.
No sound	Volume is too low; Incorrect mode selected; Device not paired (Bluetooth).	Increase volume; Press MODE button to select correct input; Re-pair Bluetooth device.
Bluetooth not connecting	Speaker is too far from device; Speaker not in pairing mode; Interference.	Move device closer to speaker; Ensure speaker is in Bluetooth mode; Turn off other Bluetooth devices.
Microphone not working	Microphone volume too low; Microphone not connected properly; Microphone battery low.	Adjust MIC VOL knob; Ensure microphone is securely plugged in; Replace microphone batteries (if applicable).
USB/SD playback issues	Unsupported file format; Corrupted files; Drive/card not inserted correctly.	Ensure files are MP3/WMA; Try different files; Reinsert USB drive/SD card.

SPECIFICATIONS

Feature	Detail
Model Number	SPBT1101BK
Brand	Axess
Connectivity	Bluetooth, USB, SD Card, AUX, FM Radio
Bluetooth Range	Up to 30 feet (9 meters)
Subwoofer Size	6 inches
Tweeter Size	3 inches
Output Power	20 Watts
Battery Type	Lithium Ion
Battery Capacity	3000 mAh
Charging Input	DC 5V
Product Dimensions (L x W x H)	43.18 x 27.31 x 29.21 cm (17 x 10.75 x 11.5 inches)
Product Weight	3.99 kg (8.8 lbs)





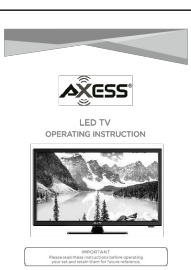
Feature	Detail
UPC	818443017475

WARRANTY AND SUPPORT

Axess provides a limited warranty for this product. For specific warranty terms, conditions, and support inquiries, please refer to the warranty card included with your purchase or visit the official Axess website. Please retain your proof of purchase for warranty claims.

For technical assistance or customer service, please contact Axess customer support through their official channels.

Related Documents - SPBT1101BK

	<p>AXESS SPBT1076 Bluetooth Media Speaker User Manual</p> <p>User manual for the AXESS SPBT1076 Bluetooth Media Speaker, detailing features, specifications, operation, and charging instructions.</p>
	<p>Axess PABT6020 Double 15\" Woofer Bluetooth Speaker User Manual</p> <p>Comprehensive user manual for the Axess PABT6020 Double 15\" Woofer Bluetooth Speaker. Provides detailed information on specifications, panel functions, operation of microphones, Bluetooth connectivity, FM radio, and recording features.</p>
	<p>Axess MPBT6506 Double 4\" Subwoofer Media Player Speaker User Manual</p> <p>User manual for the Axess MPBT6506 Double 4\" Subwoofer Media Player Speaker, detailing specifications, features, and operating instructions for Bluetooth, TF/MicroSD, USB, AUX, and MIC modes. Includes safety information and product details.</p>
	<p>Axess SPBT1032 Portable Indoor/Outdoor Hi-Fi Cylinder Speaker User Manual</p> <p>User manual for the Axess SPBT1032, a portable indoor/outdoor Hi-Fi cylinder speaker with Bluetooth compatibility, 5.5-inch subwoofer, and various playback options including USB, SD card, and FM radio.</p>
	<p>Axess 23.6\" LED TV Operating Instructions Manual</p> <p>Comprehensive operating instructions for the Axess 23.6-inch LED Television, covering setup, features, remote control, and troubleshooting. Learn how to use your Axess LED TV safely and effectively.</p>



[Axess PFBT7002 Party Flame Series Portable Bluetooth Speaker User Manual](#)

User manual for the Axess PFBT7002 Party Flame Series portable Bluetooth speaker, detailing specifications, remote control functions, and rear panel layout for optimal use.