

[Manuals.plus](#) /

› [Medion](#) /

› MEDION 3-in-1 Microwave (MD 17495) User Manual

Medion MD 17495

MEDION 3-in-1 Microwave Oven User Manual

MODEL: MD 17495

1. Product Overview

The MEDION MD 17495 is a versatile 3-in-1 microwave oven designed for modern kitchens. It combines the functionalities of a microwave, a grill, and a convection oven, offering a wide range of cooking possibilities. With a generous 23-liter capacity and 10 automatic programs, it simplifies meal preparation for various dishes, from defrosting and reheating to grilling and baking.



Figure 1.1: Front view of the MEDION MD 17495 3-in-1 Microwave Oven. This image displays the appliance's modern silver and black

exterior, featuring a large dark glass door and a digital display on the right side.

Key features include an 800W microwave power, a 1200W grill, and a convection function with temperatures ranging from 100°C to 190°C. The intuitive button controls and integrated LCD display ensure ease of use, while features like the child lock and digital timer enhance safety and convenience.

3-in-1 functie

Magnetron en grill in één



Figure 1.2: Illustration of the 3-in-1 functionality. This image shows a collage of four different food items—steamed vegetables, pizza, a fruit tart, and pasta—demonstrating the versatility of the microwave's combined microwave, grill, and convection functions.

2. Important Safety Instructions

To reduce the risk of fire, electric shock, injury to persons, or exposure to excessive microwave energy when using your appliance, follow basic safety precautions, including the following:

- Read all instructions before using the appliance.
- Do not attempt to operate this oven with the door open as this can result in harmful exposure to microwave energy.
- Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- Do not operate the oven if it is damaged. It is particularly important that the oven door closes properly and that there is no damage to the: (1) door (bent), (2) hinges and latches (broken or loosened), (3) door seals and sealing surfaces.
- The oven should not be adjusted or repaired by anyone except properly qualified service personnel.
- Always ensure proper ventilation around the appliance.
- Do not use corrosive chemicals or vapors in this appliance.
- This appliance is intended for household use only.

3. Setup and Installation

3.1 Unpacking

Carefully remove the microwave oven from its packaging. Retain the packaging materials for future transport or storage if needed. Check for any damage during transit. If the appliance is damaged, do not operate it and contact customer support.

3.2 Placement

Place the microwave oven on a flat, stable, and heat-resistant surface. Ensure there is adequate ventilation space around the appliance:

- Minimum 20 cm (7.9 inches) clearance above the oven.
- Minimum 10 cm (3.9 inches) clearance at the rear and sides.
- Do not block any ventilation openings.

Avoid placing the oven near heat sources such as radiators, stoves, or direct sunlight. Do not place it in a cabinet unless specifically designed for built-in installation, which this model is not.

3.3 Initial Cleaning

Before first use, wipe the interior and exterior surfaces of the oven with a soft, damp cloth. Clean the glass turntable and grill rack with warm, soapy water, rinse thoroughly, and dry completely.

3.4 Component Assembly

Place the turntable ring inside the oven cavity, then place the glass turntable securely on top of the ring. Ensure it sits correctly in the center. If using the grill function, place the stainless steel grill rack on the turntable as needed.

4. Operating Instructions

4.1 Control Panel Overview

The control panel features an LCD display and various buttons for different functions. Familiarize yourself with the layout:

- **Display:** Shows time, cooking settings, and program indicators.
- **Function Buttons:** Dedicated buttons for Microwave, Grill, Convection, Combination, Defrost, and Auto Programs.

- **Time/Weight Dial:** Used to adjust cooking time, weight, or select menu items.
- **Start/Pause Button:** To begin or temporarily stop cooking.
- **Stop/Cancel Button:** To clear settings or stop cooking.
- **Child Lock Button:** To activate/deactivate the child safety lock.

4.2 Setting the Clock

When the oven is first plugged in, the display will show "0:00".

1. Press the "Clock" button once.
2. Turn the Time/Weight dial to set the hour (12h/24h mode available).
3. Press the "Clock" button again.
4. Turn the Time/Weight dial to set the minutes.
5. Press the "Clock" button to confirm.

4.3 Microwave Cooking

To cook with microwave power:

1. Place food in a microwave-safe container on the glass turntable.
2. Close the door.
3. Press the "Microwave" button repeatedly to select the desired power level (e.g., P100 for 100% power, P80 for 80%, etc. There are 10 power levels).
4. Turn the Time/Weight dial to set the cooking time.
5. Press the "Start" button to begin cooking.

4.4 Grill Function

For grilling, use the provided grill rack.

1. Place food on the grill rack.
2. Press the "Grill" button.
3. Turn the Time/Weight dial to set the grilling time.
4. Press the "Start" button.

4.5 Convection Function

The convection function uses hot air for baking and roasting.

1. Press the "Convection" button.
2. Turn the Time/Weight dial to select the desired temperature (100°C - 190°C).
3. Press the "Convection" button again to confirm temperature.
4. Turn the Time/Weight dial to set the cooking time.
5. Press the "Start" button. The oven will preheat to the set temperature before cooking begins.

4.6 Automatic Programs

The oven features 10 automatic programs for common dishes. These programs automatically set the optimal cooking time and power level based on the food type and weight.

Automatisch programma

Voor elk gerecht het juiste programma



Figure 4.1: Examples of dishes prepared with automatic programs. This image illustrates various meals like a casserole, salmon with roasted potatoes, stuffed zucchini, and steamed broccoli, highlighting the convenience of the oven's pre-set cooking functions.

1. Press the "Auto Menu" button repeatedly to cycle through the programs (P1, P2, etc.). Refer to the manual's appendix for a list of programs and corresponding food types/weights.
2. Turn the Time/Weight dial to select the weight or quantity of food.
3. Press the "Start" button.

4.7 Defrost Function

The defrost function allows for quick and efficient thawing of frozen foods.

Eenvoudig ontdooien

Snel en efficiënt opwarmen



Figure 4.2: Frozen vegetables ready for defrosting. This image illustrates a variety of frozen vegetables, such as broccoli, carrots, and cauliflower, highlighting the type of food suitable for the defrost function.

1. Press the "Defrost" button.
2. Turn the Time/Weight dial to select the weight of the food.
3. Press the "Start" button.

4.8 Child Lock

To prevent accidental operation, especially by children, activate the child lock.

- **To activate:** Press and hold the "Stop/Cancel" button for 3 seconds. A lock indicator will appear on the display.
- **To deactivate:** Press and hold the "Stop/Cancel" button for 3 seconds again. The lock indicator will disappear.

5. Maintenance and Cleaning

Regular cleaning and maintenance will ensure the longevity and optimal performance of your microwave oven.

5.1 Cleaning the Interior

After each use, wipe the interior of the oven with a damp cloth to remove any food splatters. For stubborn stains, place a bowl of water with a few lemon slices inside and microwave on high for 5-7 minutes. The steam will loosen the grime, making it easier to wipe clean. Do not use abrasive cleaners or scouring pads.

5.2 Cleaning the Exterior

Wipe the exterior surfaces with a soft, damp cloth. For stainless steel parts, use a specialized stainless steel cleaner if necessary, following the product instructions. Avoid spraying cleaners directly onto the control panel or ventilation openings.

5.3 Cleaning the Turntable and Grill Rack

The glass turntable and stainless steel grill rack can be washed in warm, soapy water or in a dishwasher. Ensure they are completely dry before placing them back into the oven.

6. Troubleshooting

If you encounter issues with your microwave oven, refer to the following common problems and solutions before contacting customer service.

Problem	Possible Cause	Solution
Oven will not start.	Power cord not plugged in; Door not closed properly; Fuse blown or circuit breaker tripped; Child lock activated.	Ensure plug is firmly in outlet; Close door securely; Check household fuse/circuit breaker; Deactivate child lock (hold "Stop/Cancel" for 3 seconds).
Food not heating.	Incorrect power level or cooking time set; Door not closed properly; Food container not microwave-safe.	Adjust power level and time; Close door securely; Use microwave-safe cookware.
Light not working.	Bulb is faulty.	Contact qualified service personnel for bulb replacement. Do not attempt to replace yourself.
Turntable not rotating.	Turntable not placed correctly; Debris under turntable.	Ensure turntable and ring are correctly positioned; Clean under the turntable.

7. Specifications

Detailed technical specifications for the MEDION MD 17495 3-in-1 Microwave Oven:

Feature	Specification
Model Number	MD 17495
Product Type	3-in-1 Combi-Microwave (Microwave, Grill, Convection)
Capacity	23 Liters
Microwave Power	800 W
Grill Power	1200 W
Convection Temperature Range	100°C - 190°C

Feature	Specification
Power Levels	10
Power Supply	220-230 V AC, 50 Hz
Connected Load	1300 W
External Dimensions (W x D x H)	490 mm x 410 mm x 290 mm
Internal Dimensions (W x D x H)	314 mm x 314 mm x 201 mm
Turntable Diameter	27 cm
Display Type	LCD
Control Type	Buttons
Product Color	Silver, Stainless Steel
Material	Stainless Steel
Net Weight	13 kg



Figure 7.1: Dimensions of the MEDION MD 17495. This diagram illustrates the external width (490 mm), height (290 mm), and depth (410

mm), as well as the internal width (314 mm), height (201 mm), and depth (314 mm).

8. Warranty and Support

MEDION products are manufactured to high-quality standards and come with a manufacturer's warranty. For specific warranty terms and conditions, please refer to the warranty card included with your product or visit the official MEDION website.

For technical support, troubleshooting assistance beyond this manual, or spare parts, please contact MEDION customer service. Contact details can typically be found on the MEDION website or in the product packaging.

You can also visit the official MEDION store on Amazon for more information and support: [MEDION Store](#)