

## IKEA 402.735.93

# IKEA Flisat Children's Stool Instruction Manual

Model: 402.735.93

## INTRODUCTION

Thank you for choosing the IKEA Flisat Children's Stool. This manual provides essential information for the safe assembly, use, and maintenance of your new stool. Please read these instructions carefully before assembly and retain them for future reference.

## SAFETY INFORMATION

### WARNING:

- This product is made of solid wood and has a maximum weight recommendation of 35 kilograms (approximately 77 pounds). Exceeding this weight limit may compromise the stool's structural integrity and lead to failure.
- Improper use or assembly may result in product failure and potential injury. Ensure the stool is assembled correctly according to the instructions provided.
- This stool has a seat height of 28 cm (approximately 11 inches), which could pose a tipping hazard for young children, especially if they stand on it or lean excessively.
- Always supervise children while they are using this stool.
- Ensure the stool is placed on a stable, even surface to prevent wobbling or tipping.

## ASSEMBLY INSTRUCTIONS

The IKEA Flisat Children's Stool is designed for easy assembly without the need for tools or screws. Follow these steps to assemble your stool:

1. **Unpack Components:** Carefully remove all parts from the packaging. Verify that you have one stool seat and four stool legs.

2. **Identify Leg Slots:** Observe the underside of the stool seat. You will find four pre-drilled holes or slots designed to receive the stool legs.
3. **Insert Legs:** Take one stool leg and align its top end with one of the slots on the underside of the seat. Gently push and twist the leg into the slot until it is firmly seated. Repeat this process for the remaining three legs. Ensure each leg is fully inserted and stable.
4. **Check Stability:** Once all four legs are attached, place the stool on a flat, level surface. Apply gentle pressure to the seat to ensure all legs are securely in place and the stool does not wobble. If it wobbles, re-check the insertion of each leg.



*Image: The fully assembled IKEA Flisat Children's Stool, showcasing its natural wood finish and four sturdy legs.*

## OPERATING INSTRUCTIONS

The IKEA Flisat Children's Stool is designed for seating or as a low surface for activities. To use the stool:

- Place the stool on a flat, stable surface.
- Ensure the user's weight does not exceed the maximum recommendation of 35 kg (77 lbs).
- For seating, ensure the child is seated centrally to maintain balance.
- Avoid standing on the stool, especially for young children, due to potential tipping hazards.
- Do not use the stool as a step ladder or for climbing.

## CARE AND MAINTENANCE

Proper care will help maintain the appearance and longevity of your stool:

- **Cleaning:** Wipe clean using a damp cloth and a mild cleaner. Avoid abrasive cleaners or harsh chemicals that could damage the wood finish.
- **Drying:** Immediately wipe dry with a clean, dry cloth after cleaning to prevent water damage or staining.
- **Inspection:** Periodically check the leg connections to ensure they remain secure. Re-insert or tighten if any looseness is detected.
- **Storage:** Store the stool in a dry environment, away from extreme temperature changes or direct sunlight, which can cause wood to warp or fade.

## TROUBLESHOOTING

If you encounter any issues with your IKEA Flisat Children's Stool, refer to the following common solutions:

- **Stool wobbles after assembly:** Ensure all four legs are fully and securely inserted into their respective slots on the seat. Remove and re-insert any loose legs, applying firm pressure.
- **Legs feel loose over time:** Periodically check the leg connections. If a leg feels loose, gently push it back into its slot until it is firm. The design relies on a snug fit.
- **Wood surface appears dull or stained:** Clean the surface as per the "Care and Maintenance" section. For minor scuffs, a wood-friendly polish or wax may be applied, following the product manufacturer's instructions.

## SPECIFICATIONS

Feature	Detail
<b>Brand</b>	IKEA
<b>Model Number</b>	402.735.93
<b>Product Dimensions (D x W x H)</b>	9.5"D x 9.5"W x 12.25"H (24.1 cm D x 24.1 cm W x 31.1 cm H)
<b>Seat Height</b>	12.25 Inches (28 cm)
<b>Color</b>	Wood (Natural)
<b>Material</b>	Solid Wood
<b>Maximum Weight Recommendation</b>	35 Kilograms (77 lbs)
<b>Assembly Required</b>	Yes (Tool-free)

Feature	Detail
Number of Pieces	1 (consisting of seat and 4 legs)
Item Weight	3.74 pounds (1.7 kg)
UPC	680167276960, 605925855683, 669393823902

## WARRANTY AND SUPPORT

---

For information regarding warranty coverage, product support, or to purchase replacement parts, please refer to the official IKEA website or contact IKEA customer service directly. Keep your proof of purchase for any warranty claims.

**IKEA Official Website:** [www.ikea.com](http://www.ikea.com)