

[Manuals.plus](#) /

› [Easytry123](#) /

› Easytry123 Replacement Infrared Remote Control User Manual for Kenwood KDC-MP Series and KDC-X Series Car Receivers

## Easytry123 Easytry5482

# Easytry123 Replacement Infrared Remote Control User Manual

Model: Easytry5482

Compatible with Kenwood KDC-MP438U, KDC-MP442U, KDC-MP535U, KDC-MP538, KDC-X493, KDC-X591, KDC-X592, KDC-X692 CD Car Receiver Players

## INTRODUCTION

This manual provides essential instructions for the proper setup, operation, and maintenance of your Easytry123 replacement infrared remote control. This remote is designed to function with specific Kenwood CD Car Receiver Player models as listed above. Please read this manual thoroughly before use to ensure optimal performance and compatibility.

**Important Note:** This is a replacement remote control. While it is designed to replicate the primary functions of your original remote, some advanced or specific functions may vary or require direct operation on your Kenwood unit. No programming is required for this remote control; it is ready for use upon battery installation.

## SETUP

### 1. Battery Installation

The remote control requires two (2) AA batteries for operation. Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover off in the direction indicated by the arrow (if present).
3. Insert two new AA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



*Image: Back view of the remote control with the battery cover removed, illustrating the correct insertion of two AA batteries.*

**Note:** Always replace both batteries at the same time. Do not mix old and new batteries, or different types of batteries.

## **2. Compatibility Check**

Before attempting to use the remote, verify that your Kenwood CD Car Receiver Player model is listed as compatible in the header of this manual. If your model is not listed, the remote may not function correctly or at all. The appearance of this replacement remote may differ from your original remote, but its core functions are designed to be compatible.

**Directly to USE ! ! !**  
**Don't need any program ! ! !**



- NOT Easy Broken
- NOT Easy Lost
- Reliable Quality
- Easy Hold
- Easy to Operate
- Long life

*Image: A visual comparison of the Easytry123 replacement remote control (left) and a typical original Kenwood remote (right), demonstrating the replacement concept.*

## OPERATION

This infrared remote control operates by sending signals to your Kenwood CD Car Receiver Player. Ensure there is a clear line of sight between the remote's emitter and the receiver's infrared sensor.

- **Power (SRC/EXIT):** Press the **SRC** button to turn the unit on or cycle through sources. Press and hold **EXIT** to turn the unit off.
- **Volume Control (VOL):** Use the **VOL +** and **VOL -** buttons to adjust the audio output level.
- **Track/Tune (<< / >>):** Use these buttons to skip tracks, fast forward/rewind, or tune radio frequencies.
- **Numeric Keypad (0-9):** For direct input of radio station frequencies or track numbers.
- **ATT (Attenuate):** Reduces the audio volume temporarily.
- **AUD (Audio):** Accesses audio settings.
- **FM+/AM-:** For radio band selection or tuning.
- **ENT (Enter):** Confirms selections in menus.

Refer to your Kenwood CD Car Receiver Player's original manual for detailed functions of each button as they relate to your specific unit.

## MAINTENANCE

---

## Battery Replacement

When the remote control's operating range decreases or it becomes unresponsive, it is time to replace the batteries. Follow the battery installation steps outlined in the "Setup" section. Dispose of used batteries responsibly according to local regulations.

## Cleaning

To clean the remote control, gently wipe its surface with a soft, dry cloth. Do not use liquid cleaners, abrasive pads, or chemical solvents, as these can damage the remote's finish or internal components.

## Storage

Store the remote control in a cool, dry place away from direct sunlight, high temperatures, and excessive humidity. If the remote will not be used for an extended period, it is recommended to remove the batteries to prevent leakage and potential damage.

---

## TROUBLESHOOTING

- **Remote not responding:**
  - Ensure there is a clear line of sight between the remote and the Kenwood unit.
  - Check if the batteries are correctly installed with the correct polarity.
  - Replace the batteries with new ones.
  - Verify that your Kenwood unit is powered on.
- **Limited or incorrect functionality:**
  - Confirm that your Kenwood model is explicitly listed as compatible in this manual.
  - As a replacement remote, some specific functions might not be fully supported or may require direct interaction with the Kenwood unit.
  - Ensure no other infrared devices are interfering with the signal.

---

## SPECIFICATIONS

Feature	Detail
Brand	Easytry123
Model Number	Easytry5482
Connectivity Technology	Infrared (IR)
Controller Type	Button Control
Maximum Range	Up to 15 meters (approx. 49 feet)
Power Source	2 x AA Batteries (not included)
Supported Devices	1 (Specific Kenwood CD Car Receiver Players)
Special Features	Ergonomic design, direct replacement (no programming required)

---

## WARRANTY AND SUPPORT

This Easytry123 replacement remote control is designed for reliable performance. For any questions regarding compatibility, functionality, or troubleshooting not covered in this manual, please contact the seller directly through your purchase platform. Please have your product model number (Easytry5482) and your Kenwood unit's model number ready when contacting support.

As this is a replacement product, specific warranty details may vary. Please refer to the terms and conditions provided at the time of purchase or contact the seller for warranty information.