

Easytry123 KDC-Series Replacement Remote

User Manual for Easytry123 Replacement Remote Control

Compatible with Kenwood KDC-6080R, KDC-6080RV, KDC-5080R, KDC-6070R, KDC-5070R, KDC-2011S, KDC-1011S, KDC-4023, KDC-3023 CD Car Receiver Players

1. INTRODUCTION

This manual provides essential information for the use and maintenance of your Easytry123 replacement infrared remote control. This remote is designed as a direct replacement for specific Kenwood CD Car Receiver Player models, including KDC-6080R, KDC-6080RV, KDC-5080R, KDC-6070R, KDC-5070R, KDC-2011S, KDC-1011S, KDC-4023, and KDC-3023. It operates via infrared technology and requires no programming for immediate use.



Figure 1.1: This image illustrates the replacement remote control (left) and a similar original remote (right), emphasizing that the new remote is a direct replacement and requires no programming for use.

Please ensure your original remote control matches the appearance of this replacement remote for full compatibility. While designed to replace your original, some advanced or specific functions may vary slightly. Refer to your Kenwood receiver's original manual for detailed function descriptions.

2. SETUP

2.1 Battery Installation

The remote control requires two (2) AA batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Gently slide the cover downwards or in the direction indicated by an arrow to open it.
3. Insert two AA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



Figure 2.1: Rear view of the remote control, highlighting the battery compartment. The cover has an "OPEN" indicator to guide removal for battery installation.

Once batteries are installed, the remote is ready for use. No additional programming or pairing is required.

3. OPERATING THE REMOTE CONTROL

This replacement remote control provides essential functions for your Kenwood CD Car Receiver Player. Point the remote

directly at the infrared sensor on your car receiver for optimal performance.



Figure 3.1: Front view of the Easytry123 replacement remote control, displaying its button layout. Key buttons include Source (SRC), Exit, Volume Up/Down, Track Skip, Play/Pause, and a numeric keypad.

3.1 Key Functions

- **SRC (Source):** Changes the audio source (e.g., CD, Radio, AUX).
- **EXIT:** Exits current menu or function.
- **VOL < > (Volume):** Adjusts the audio volume level.
- **ATT (Attenuate):** Mutes or unmutes the audio.
- **AUD (Audio):** Accesses audio settings.
- **ENT / II (Enter / Play/Pause):** Confirms selections or plays/pauses media.
- **< / > (Track Skip):** Skips to the previous or next track/station.
- **^ / v (Navigation):** Navigates through menus or lists.
- **Numeric Keypad (0-9):** Direct input for radio station frequencies or track numbers.
- **DIRECT/ON:** Specific function, refer to your receiver's manual.
- ***FM+ / #AM-:** For radio tuning or preset selection.
- **Green Call Button:** May activate phone functions if supported by your receiver.
- **Red End Call Button:** May end phone calls if supported by your receiver.

For specific functions not explicitly listed or for advanced operations, please consult the original user manual of your Kenwood CD Car Receiver Player.

4. MAINTENANCE

Proper care will extend the life of your remote control.

- **Cleaning:** Use a soft, dry cloth to clean the remote. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones of the same type (AA).
- **Storage:** If the remote will not be used for an extended period, remove the batteries to prevent leakage and potential damage.
- **Environment:** Avoid exposing the remote to extreme temperatures, direct sunlight, high humidity, or liquids.

5. TROUBLESHOOTING

If you experience issues with your remote control, try the following solutions:

Problem	Possible Cause	Solution
Remote not working.	Dead or incorrectly installed batteries.	Replace batteries with new AA batteries, ensuring correct polarity.
Remote has limited range or intermittent response.	Weak batteries; Obstruction between remote and receiver; Remote not pointed directly at receiver.	Replace batteries. Remove any obstructions. Ensure direct line of sight to the receiver's IR sensor.
Some functions do not work.	Function not supported by this replacement remote; Receiver model incompatibility.	Verify your Kenwood receiver model is listed as compatible. Note that some advanced functions may not be replicated by replacement remotes.

If troubleshooting steps do not resolve the issue, please contact the seller for further assistance.

6. SPECIFICATIONS

- **Product Type:** Replacement Infrared Remote Control
- **Brand:** Easytry123
- **Compatible Kenwood Models:** KDC-6080R, KDC-6080RV, KDC-5080R, KDC-6070R, KDC-5070R, KDC-2011S, KDC-1011S, KDC-4023, KDC-3023
- **Connectivity Technology:** Infrared (IR)
- **Controller Type:** Button Control
- **Power Source:** 2 x AA Batteries (not included)
- **Special Feature:** Direct replacement, no programming required. Ergonomic design.
- **Country of Origin:** China
- **ASIN:** B07MQQQWG3
- **Date First Available:** January 14, 2019

7. WARRANTY AND SUPPORT

This product is a replacement remote control. For specific warranty information, please refer to the terms and conditions provided by the seller at the time of purchase. Typically, replacement parts may come with a limited warranty against manufacturing defects.

For technical support, troubleshooting assistance beyond this manual, or warranty claims, please contact the seller directly through the platform where the purchase was made. Provide your order number and a detailed description of the issue for prompt assistance.

Note: This remote is an aftermarket replacement and is not manufactured by Kenwood.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07MQQQWG3>

More documents and user manuals: **<https://manuals.plus/>**