

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Magicfly](#) /

> [Magicfly Mini Sewing Machine User Manual](#)

Magicfly MF600

Magicfly Mini Sewing Machine User Manual

Model: MF600

Brand: Magicfly

1. INTRODUCTION

This user manual provides comprehensive instructions for the safe and efficient operation of your Magicfly Mini Sewing Machine. Designed for beginners, this portable machine offers dual-speed functionality and comes with an extension table and a complete sewing kit, making it ideal for household and travel use. Please read this manual thoroughly before first use to ensure proper setup and to maximize the lifespan of your machine.

2. SAFETY INSTRUCTIONS

- Always unplug the sewing machine from the power outlet when not in use, before cleaning, or when changing parts.
- Keep fingers away from the needle, presser foot, handwheel, and other moving parts while the machine is operating.
- Use the provided safety needle guard to protect your fingers during operation.
- Do not operate the machine if the power cord or plug is damaged.
- Keep the machine dry and do not operate it in damp or wet conditions.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

SAFETY NEEDLE-GUARD



Image: The safety needle guard is designed to protect fingers from accidental needle contact during sewing operations.

3. PACKAGE CONTENTS

Your Magicfly Mini Sewing Machine package includes the following items:

- Magicfly Mini Sewing Machine (White)
- Extension Table
- Power Adapter
- Foot Pedal
- Bobbins (32 pieces)
- Needles (5 pieces)
- Scissors
- Threader
- Tape Measure
- Seam Ripper
- Thimble

- Dust-Proof Bag
- Safety Needle Guard



Image: The complete package contents, including the sewing machine, extension table, power adapter, foot pedal, and a comprehensive sewing accessory kit.



Image: A closer look at the included sewing accessory kit, featuring 32 bobbins, 5 needles, threader, tape measure, scissors, seam ripper, and thimble.

4. PRODUCT OVERVIEW

Familiarize yourself with the various parts of your Magicfly Mini Sewing Machine:



Image: A detailed diagram illustrating the key components of the sewing machine, including the take-up lever, tension screw, thread spindle, upper bobbin, handwheel, winding pole, light, ON/OFF switch, speed control, foot pedal port, DC power port, bottom bobbin, lamp, thread cutter, presser foot lever, and presser foot.

MULTI-PURPOSE SEWING MACHINE

Adjustable 2-speed double thread, convenient, humanized design



Safety Needle-Guard



3 Sewing Needle Types



Dual Power Operation



Two-Speeds Mode



Sewing Sleeves



Built-in Sewing Light



Anti-Slip Rubber Pad



Sewing Accessory Set (42pcs)



Extension Table

Image: This image highlights the multi-purpose features of the sewing machine, such as the safety needle guard, different needle types, dual power options, two-speed mode, capability for sewing sleeves, built-in light, anti-slip rubber pads, the included accessory set, and the extension table.

5. SETUP

5.1 Powering the Machine

Your Magicfly Mini Sewing Machine can be powered in two ways:

- **AC/DC Power Supply:** Connect the provided power adapter to the DC Power Port on the machine and plug it into a standard wall outlet.
- **Battery Power Supply:** For wireless operation, insert 4 AA batteries (not included) into the battery compartment located at the bottom of the machine. Ensure correct polarity.



Image: Illustration of the dual power options: using the power adapter for continuous operation or 4 AA batteries for portable use.

5.2 Attaching the Extension Table

For larger projects or increased stability, attach the extension table:

1. Align the tabs on the extension table with the slots on the sewing machine.
2. Gently slide the extension table onto the machine until it clicks into place. Ensure it is placed **on top** of the edge of the machine, not even with it, to prevent slipping.



Image: The extension table provides a larger work surface for various sewing projects, easily attaching to the main unit.

6. THREADING THE MACHINE

Correct threading is crucial for proper machine function. Follow these steps carefully:

6.1 Upper Threading

1. Place a spool of thread on the thread spindle.
2. Guide the thread through the first thread guide (marked '1' in the diagram).
3. Pass the thread through the tension screw (marked '2'). Ensure the thread is properly seated in the tension discs.
4. Thread through the take-up lever (marked '3'), ensuring it goes from right to left.

5. Guide the thread down through the needle bar thread guide (marked '4').
6. Finally, thread the needle from left to right (marked '5').



1
Please follow the
threading steps
otherwise the
thread will always
break or get stuck

Image: Visual guide for correct upper threading. Incorrect threading can lead to thread breakage or jamming.



2
Please loosen the
tension otherwise
the needle will
break while sewing

Image: Proper tension adjustment is vital. Loosen the tension slightly to prevent needle breakage during sewing.

6.2 Bobbin Winding and Lower Threading

1. To wind a bobbin, place an empty bobbin on the winding pole (located near the handwheel).
2. Guide thread from a spool through the bobbin winding tension disc and then around the empty bobbin.
3. Turn the handwheel manually a few times to secure the thread, then turn on the machine to wind the bobbin.
4. Once wound, remove the bobbin and insert it into the bobbin case under the needle plate. Ensure the thread unwinds in the correct direction (usually counter-clockwise).
5. Pull the lower thread out about 4 inches (10 cm) to ensure it can be caught by the upper thread.



3

Please pull the thread out about 4in otherwise it is not easy to catch the bottom thread

Image: Ensure sufficient lower thread is pulled out (approximately 4 inches) to allow the upper thread to catch it properly.

Note: The machine may arrive pre-threaded with a small piece of cloth. This is a factory test and does not indicate a used product.



!

The machine has been threaded from the manufacturer and the cloth is to test the machine NOT a USED product.

Image: A small piece of fabric under the presser foot signifies that the machine has undergone factory testing to ensure proper

7. OPERATING INSTRUCTIONS

7.1 Basic Sewing

1. Raise the presser foot using the presser foot lever.
2. Place your fabric under the presser foot.
3. Lower the presser foot onto the fabric.
4. Select your desired speed using the speed button (High/Slow).
5. Start sewing by pressing the ON/OFF switch or by using the foot pedal.
6. Guide the fabric gently as you sew. Do not pull or push the fabric forcefully.
7. When finished, turn off the machine, raise the presser foot, and carefully remove the fabric. Use the thread cutter to snip the threads.

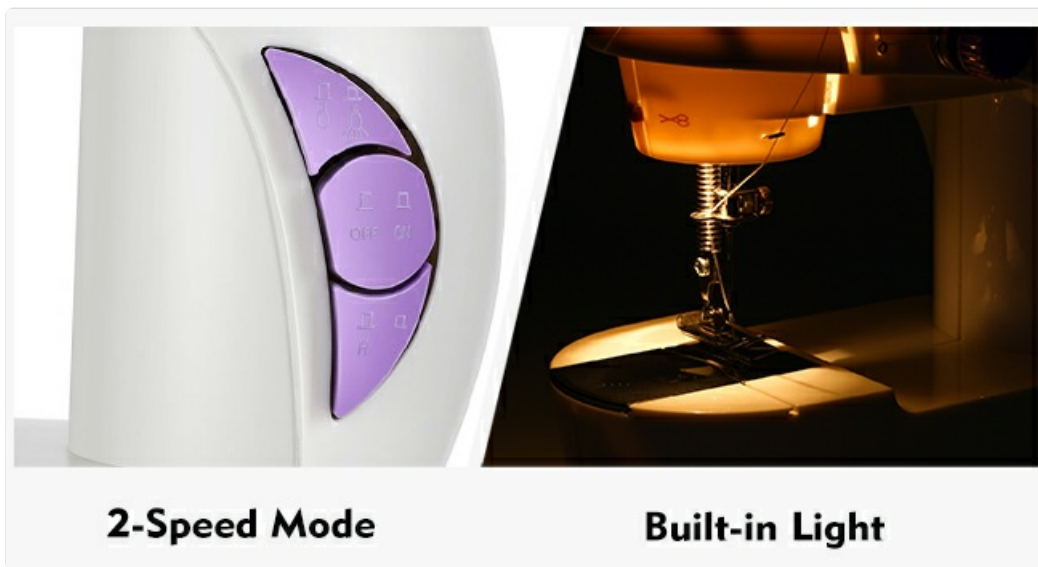


Image: The machine features a convenient 2-speed mode selector and a built-in light to illuminate the sewing area.

STRAIGHT-LINE SEWING

 Eat Thick of 4-Layer Cloth

 sew silk-like thin cloth



Image: The machine is capable of straight-line sewing on various fabric thicknesses, from multi-layered cloth to delicate silk-like materials.

7.2 Applicable Fabrics

The Magicfly Mini Sewing Machine is suitable for a range of fabrics. Refer to the table below for guidance:

Specification	Cotton / Linen	Silk / Wool	Polyester	Elastic
Regular	✓	✓	✓	△
Thick	✓	✗	✓	△
Thin	✓	✗	✓	✗
Hard	✓	✓	✓	△
Soft	✓	✗	✗	✗

Key: ✓ = Easy to sew, △ = Not smooth to sew, ✗ = Difficult to sew.

Thickness (2 layers fabric): Thin: <0.35mm, Regular: ≥0.35mm & ≤0.8mm, Thick: >0.8mm.

APPLICABLE FABRICS FOR SEWING

Specification \ Fabrics	Cotton / Linen	Silk / Wool	Polyster	Elastic
Regular	✓	✗	✓	△
Thick	✓	✗	✓	△
Thin	✓	✗	✗	✗
Hard	✓	✓	✓	△
Soft	✓	✗	✗	✗

Thickness (2 layers fabric): Thin: <0.35mm Regular: ≥0.35mm & ≤0.8mm Thick: >0.8mm
 Sewing performance: ✓ : Easy to sew △ : Not smooth to sew ✗ : Difficult to sew

Image: A comprehensive table detailing the suitability of various fabric types and thicknesses for use with the sewing machine.

8. MAINTENANCE

8.1 Cleaning

- Always unplug the machine before cleaning.
- Use a soft, dry cloth to wipe the exterior of the machine.
- Periodically remove the needle plate and clean any lint or dust from the bobbin area using a small brush.

8.2 Needle Replacement

Replace the needle if it becomes bent, dull, or broken. Use only appropriate needles for your machine.

1. Ensure the machine is unplugged.
2. Loosen the needle clamp screw.
3. Remove the old needle.
4. Insert a new needle with the flat side facing the back of the machine.
5. Push the needle up as far as it will go, then tighten the needle clamp screw securely.

Your browser does not support the video tag.

Video: Official Magicfly guide on how to replace the needle of the Magicfly Mini Sewing Machine. This video demonstrates the steps for safely changing the needle.

9. TROUBLESHOOTING


If you encounter issues with your sewing machine, refer to the common problems and solutions below:

Problem	Possible Cause	Solution
Machine not turning on	No power supply; batteries dead or incorrectly inserted; power adapter not connected.	Check power connection; replace batteries; ensure adapter is fully plugged in.
Thread breaks frequently	Incorrect threading; tension too tight; needle bent or dull; poor quality thread.	Re-thread the machine carefully; adjust tension; replace needle; use good quality thread.

Problem	Possible Cause	Solution
Skipped stitches	Needle bent or inserted incorrectly; wrong needle type for fabric; incorrect threading.	Replace needle, ensuring flat side faces back; use appropriate needle; re-thread.
Fabric not feeding	Presser foot not lowered; feed dogs obstructed by lint.	Lower presser foot; clean lint from feed dog area.
Machine jams or makes loud noise	Thread tangled in bobbin area; needle hitting presser foot; machine overloaded with thick fabric.	Clear bobbin area; check needle alignment; avoid sewing overly thick materials.

For further assistance, please refer to the official product videos and FAQ section available on the product's sales page.

LEARN MORE FROM VIDEOS & FAQ & INSTRUCTION

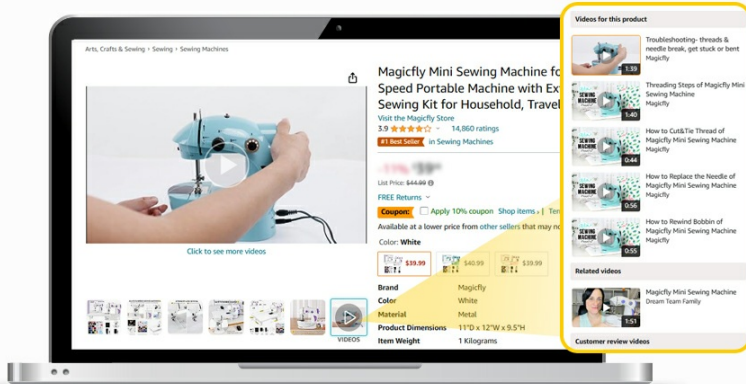

- ✓ Click on "VIDEOS" for more information about Magicfly Mini Sewing Machines (unique design & operation steps).
- ✓ Find "Product guides and documents" on this page to access to the FAQ file that answers the most frequently-asked questions and tells you matters that need your attention.

Image: Access additional support and detailed instructions by viewing product videos and downloading guides from the official product page.

10. SPECIFICATIONS

Brand	Magicfly
Model Number	MF600
Product Dimensions	12 x 11 x 9.5 inches (30.5 x 27.9 x 24.1 cm)
Item Weight	2.2 pounds (1 kg)
Power Supply	AC/DC Adapter or 4 AA Batteries
Stitching Type	Fixed stitch width/length, no backstitch function
Speed Modes	Dual-speed (High/Slow)
Country of Origin	China

11. WARRANTY AND SUPPORT

Magicfly provides a Quality Warranty for this product. For specific warranty details, claims, or technical support,

please contact Magicfly customer service through the retailer where you purchased the product or visit the official Magicfly website. Keep your purchase receipt as proof of purchase.

For additional resources, including FAQs and video tutorials, please visit the [Magicfly Store on Amazon](#).