

TOTAL TGT11316

TOTAL TGT11316 Electric Pressure Washer User Manual

Model: TGT11316 | Brand: TOTAL

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your TOTAL TGT11316 Electric Pressure Washer. Please read these instructions carefully before using the appliance and retain them for future reference. This pressure washer is designed for deep cleaning tasks on outdoor surfaces such as vehicles, floors, and patios.

2. SAFETY INFORMATION

WARNING: Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and personal injury.

- Ensure the power supply matches the voltage specified on the pressure washer.
- Never direct the water jet at people, animals, electrical equipment, or the appliance itself.
- Wear appropriate personal protective equipment, including safety glasses and gloves.
- Keep children and pets away from the work area.
- Do not operate the pressure washer if the power cord or other critical parts are damaged.
- Always disconnect the power supply before performing any maintenance or cleaning.
- Use only original spare parts and accessories.

3. PRODUCT OVERVIEW

The TOTAL TGT11316 is a powerful electric pressure washer designed for effective outdoor cleaning. It features a robust carbon brush motor and an automatic stop system for enhanced safety and control.

Components Included:

- 1 x 1400 W High-Pressure Washer unit
- 1 x Water Spray Gun
- 1 x 5-meter High-Pressure Hose

- Adjustable Nozzles



Figure 1: TOTAL TGT11316 Pressure Washer with included accessories.

- ▶ 1 Manguera de alta presión de 5 metros
- ▶ 1 Pistola rociadora
- ▶ Motor de escobillas de carbón



Figure 2: Visual representation of the main components.

Tiene un asa de transporte que facilita su manejo



Figure 3: Integrated handle for easy transport.

4. SETUP

1. **Unpacking:** Carefully remove all components from the packaging. Check for any damage during transit.
2. **Hose Connection:** Connect the 5-meter high-pressure hose to the pressure washer unit and the spray gun. Ensure all connections are secure to prevent leaks.
3. **Water Supply:** Connect the pressure washer to a suitable water source. Ensure the water supply is clean and free of debris.
4. **Power Connection:** Plug the power cable into a grounded electrical outlet. Ensure the power supply meets the requirements of the appliance.
5. **Initial Water Flow:** Before turning on the motor, squeeze the trigger on the spray gun to allow water to flow through the system and expel any trapped air. This helps protect the pump.

5. OPERATING INSTRUCTIONS

Starting the Pressure Washer:

1. Ensure the unit is properly set up and connected to water and power.
2. Turn the ON/OFF switch to the 'ON' position. The motor will start.
3. Squeeze the trigger on the spray gun to begin spraying water. The automatic stop system will engage when the trigger is released, stopping the motor to save energy and reduce noise.

Adjusting the Spray:

The pressure washer is equipped with adjustable nozzles to customize the water flow according to your cleaning needs. Rotate the nozzle head to switch between different spray patterns, from a concentrated jet for tough stains to a wider fan spray for general cleaning.

Cleaning Applications:

- **Vehicles:** Use a wide fan spray and appropriate detergent for washing cars and motorcycles. Avoid directing a high-pressure jet directly at tires or sensitive components.
- **Patios and Floors:** For stubborn dirt, use a concentrated jet. For general cleaning, a wider spray is effective.
- **Garden Furniture:** Use a gentle fan spray to clean garden furniture without causing damage.



Figure 4: Pressure washer in use for garden cleaning.



Figure 5: Versatile cleaning applications.

6. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your pressure washer.

- **After Each Use:** Disconnect the water supply and run the pressure washer briefly to release any remaining pressure and drain water from the pump and hose.
- **Cleaning Nozzles:** If the spray pattern becomes irregular or pressure drops, clean the nozzle orifice with the provided needle tool (if applicable) or a thin wire.
- **Water Inlet Filter:** Regularly check and clean the water inlet filter to prevent debris from entering the pump.
- **Storage:** Store the pressure washer in a dry, frost-free environment. If storing for an extended period, consider using a pump protector solution.
- **Power Cord:** Inspect the power cord for any signs of damage before each use.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Motor does not start	No power supply; Faulty switch; Thermal overload activated	Check power connection and outlet; Check switch position; Allow motor to cool down
Low pressure	Insufficient water supply; Clogged nozzle; Air in pump; Leaks in hose/connections	Ensure adequate water flow; Clean nozzle; Purge air from system; Check for and tighten leaks
Motor stops frequently	Automatic stop system engaging; Overheating	This is normal operation when trigger is released; Ensure proper ventilation, avoid prolonged use
Water leaks	Loose connections; Damaged O-rings/seals	Tighten all connections; Replace damaged O-rings/seals

8. SPECIFICATIONS

Feature	Specification
Brand	TOTAL
Model Number	TGT11316
Power Source	Electric Cable
Power	1400 W
Motor Type	Carbon Brush Motor
Maximum Pressure	130 Bar
Maximum Flow Rate	5.5 Liters per minute
Hose Length	5 Meters
Product Weight	5.4 Kilograms
Product Dimensions (L x W x H)	23 x 48 x 26.5 Centimeters
Compliance	CE, CSA

- ▶ Potencia de 1400 W
- ▶ Presión máxima de hasta 130 Bar
- ▶ Caudal de agua de 5,5 l/min
- ▶ Diseño compacto con asa de transporte y manguera de alta presión de 5 m
- ▶ Funciona a cable para total flexibilidad de uso



Figure 6: Key product specifications.

9. WARRANTY AND SUPPORT

TOTAL is committed to providing quality products. This pressure washer is designed for durability and performance.

- **Spare Parts Availability:** Spare parts for this model are available in the EU for a duration of 10 years.
- **Customer Support:** For any questions, technical assistance, or warranty claims, please refer to the contact information provided with your purchase documentation or visit the official TOTAL website.