

## Tribit BTS25

# Tribit MaxSound Plus Portable Bluetooth Speaker User Manual

Model: BTS25

## 1. INTRODUCTION

Thank you for choosing the Tribit MaxSound Plus Portable Bluetooth Speaker. This manual provides essential information for setting up, operating, and maintaining your speaker to ensure optimal performance and longevity. The Tribit MaxSound Plus delivers powerful 24W sound with exceptional XBass, offering a rich audio experience for both indoor and outdoor environments.



Figure 1: Tribit MaxSound Plus Portable Bluetooth Speaker

## 2. PACKAGE CONTENTS

- Tribit MaxSound Plus Bluetooth Speaker
- USB-C Charging Cable (Note: Power adapter not included)

- User Manual (This document)

### 3. PRODUCT OVERVIEW

Familiarize yourself with the speaker's controls and features.

#### 3.1. Controls and Indicators

The top panel features intuitive buttons for power, volume, playback, and special sound modes.



Figure 2: Top Controls and Indicators

- **Power Button:** Press and hold to power on/off.
- **Bluetooth Button:** Press to enter pairing mode.
- **Volume - / +:** Adjust volume level.
- **Multi-function Button (Circle):** Play/Pause, Answer/End calls, Skip tracks.
- **XBass Button:** Activate/Deactivate enhanced bass mode.
- **Light Button:** Control LED lighting modes.
- **TWS Button:** Initiate True Wireless Stereo pairing.

#### 3.2. Ports

The rear panel houses the charging and auxiliary input ports, protected by a waterproof cover.



Figure 3: Speaker Dimensions and Side View

- **USB-C Charging Port:** For charging the speaker.
- **AUX Input:** For wired audio connection.

## 4. SETUP

### 4.1. Charging the Speaker

Before first use, fully charge your Tribit MaxSound Plus speaker. Connect the provided USB-C cable to the speaker's charging port and a compatible USB power adapter (not included). A full charge takes approximately 5 hours.

### 4.2. Bluetooth Pairing

1. Power on the speaker by pressing and holding the Power button. The Bluetooth indicator will flash, indicating it's in pairing mode.
2. On your smartphone or Bluetooth-enabled device, search for "Tribit MaxSound Plus" in the Bluetooth settings.
3. Select the speaker to connect. Once connected, the Bluetooth indicator will turn solid blue.

The speaker offers a robust and stable Bluetooth 5.4 connection with a range of up to 30 meters (100 feet).



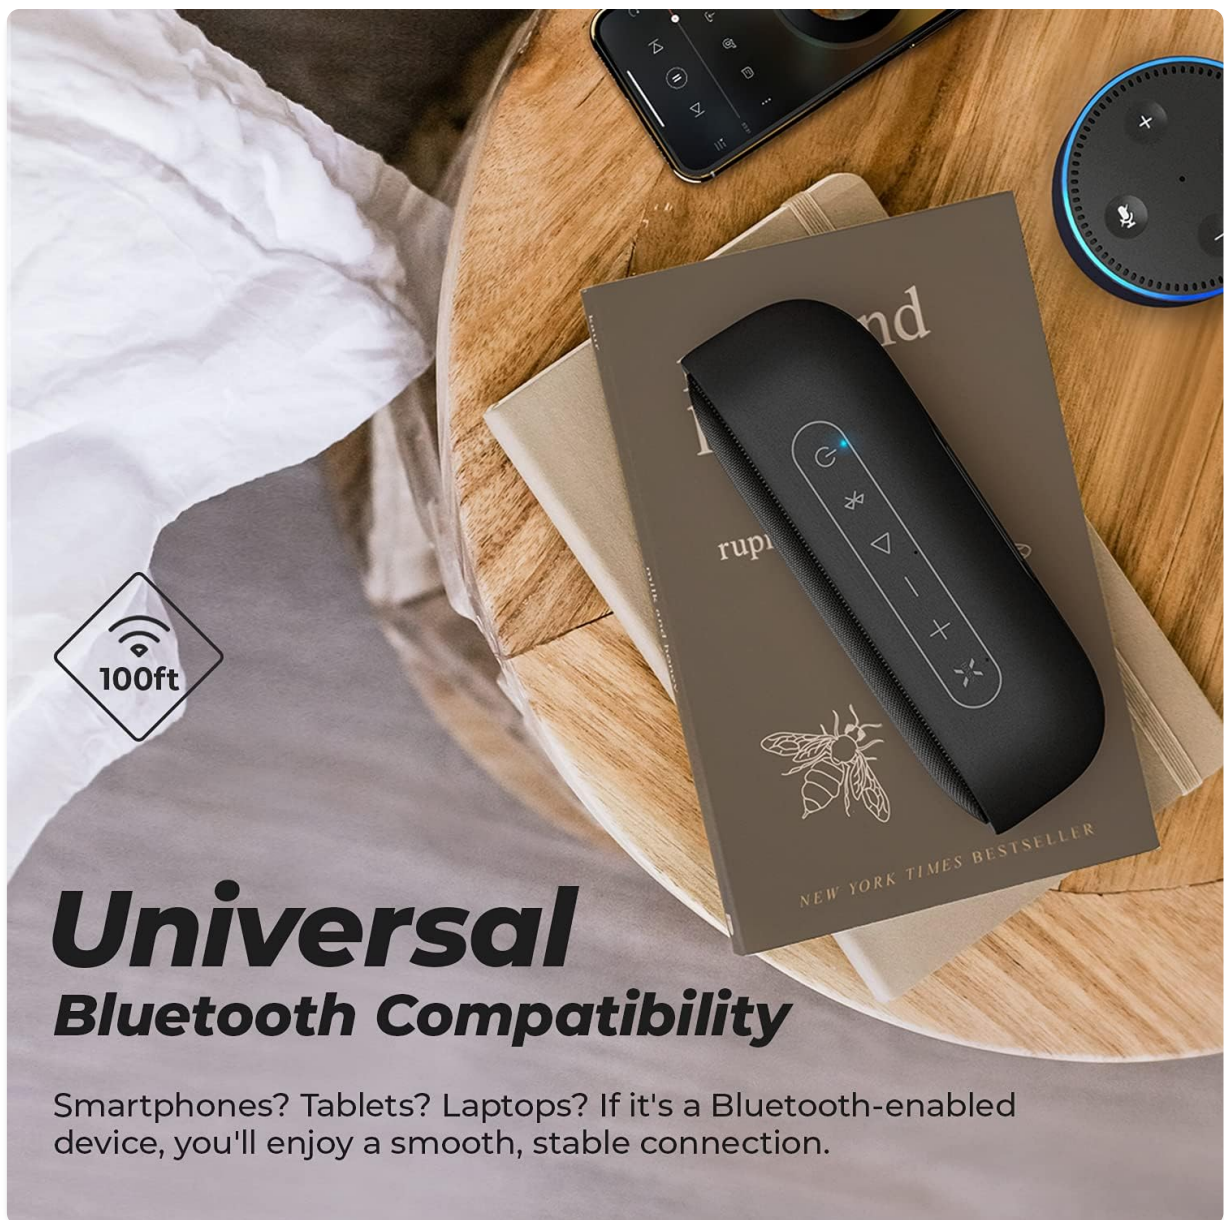


Figure 4: Bluetooth Connectivity

## 5. OPERATING INSTRUCTIONS

### 5.1. Power On/Off

- Press and hold the Power button for 2 seconds to turn the speaker on or off.

### 5.2. Playback and Volume Control

- Press the Multi-function button (circle) to Play or Pause music.
- Press the Volume + button to increase volume.
- Press the Volume - button to decrease volume.
- Double-press the Multi-function button for the next track.
- Triple-press the Multi-function button for the previous track.

### 5.3. XBass Function

Activate Tribit's proprietary XBass technology for thundering basslines and punchier drum beats.

# Next Level XBass®

Powerful XBass® technology provides toe-curling bass for a multi-sensory experience.



Figure 5: XBass Feature

- Press the XBass button to toggle XBass mode on or off.

## 5.4. True Wireless Stereo (TWS) Pairing

Pair two Tribit MaxSound Plus speakers for an immersive stereo sound experience.

1. Ensure both speakers are powered on and not connected to any other device.
2. On one speaker, press the TWS button. It will automatically search for another Tribit MaxSound Plus speaker.
3. Once connected, both speakers will play audio in stereo.

## 6. MAINTENANCE & CARE

### 6.1. Waterproofing (IPX7)

The Tribit MaxSound Plus is IPX7 waterproof, meaning it can be submerged in up to 1 meter of water for 30 minutes. Ensure all port covers are securely closed before exposing the speaker to water.

# 100% Waterproof

This mighty speaker is ready for surf, turf, snow, and more.



Figure 6: IPX7 Waterproof Rating

## 6.2. Cleaning

Wipe the speaker with a soft, damp cloth. Do not use abrasive cleaners or solvents.

## 7. TROUBLESHOOTING

- **Speaker not turning on:** Ensure the battery is charged. Connect to a power source and try again.
- **Cannot pair via Bluetooth:** Ensure the speaker is in pairing mode (flashing blue light). Turn off Bluetooth on your device and turn it back on. Forget "Tribit MaxSound Plus" from your device's Bluetooth list and try pairing again.
- **No sound:** Check the volume levels on both the speaker and your connected device. Ensure the speaker is properly paired.
- **Poor sound quality:** Move the speaker closer to your device to reduce interference. Ensure there are no obstructions between the speaker and your device.

## 8. SPECIFICATIONS

| Feature | Specification |
|---------|---------------|
|---------|---------------|



|                              |                       |
|------------------------------|-----------------------|
| Model Name                   | MaxSound Plus         |
| Model Number                 | BTS25                 |
| Brand                        | Tribit                |
| Speaker Maximum Output Power | 24 Watts              |
| Audio Output Mode            | Stereo                |
| Connectivity Technology      | Bluetooth 5.4         |
| Bluetooth Range              | 30 Meters (100 feet)  |
| Battery Life (Playtime)      | Up to 20 Hours        |
| Charging Time                | Approx. 5 Hours       |
| Water Resistance Level       | IPX7                  |
| Item Weight                  | 1.3 Pounds (0.59 kg)  |
| Product Dimensions (DxWxH)   | 2.76" x 7.83" x 2.63" |
| Audio Driver Type            | Dynamic Driver        |
| Speaker Size                 | 45 Millimeters        |

## 9. WARRANTY & SUPPORT

Your Tribit MaxSound Plus speaker comes with a limited warranty. For detailed warranty information and customer support, please visit the official Tribit website or refer to the original purchase documentation.

You can also download the full User Manual (PDF)[here](#).

## 10. SAFETY INFORMATION

- Do not disassemble, repair, or modify the product.
- Do not expose the product to extreme temperatures or direct sunlight for prolonged periods.
- Keep the product away from children and pets.
- Use only the provided or certified charging cables.
- Dispose of the product responsibly according to local regulations.

### Related Documents - BTS25

|  |   |
|--|---|
|  | <p><a href="#">Tribit MAXSound Plus Portable Wireless Speaker User Manual</a></p> <p>Comprehensive user manual for the Tribit MAXSound Plus portable wireless speaker (Model IC-BTS25), covering setup, operation, safety precautions, and specifications. Learn how to connect via Bluetooth or AUX and enjoy amplified audio.</p> |
|--|---|

