

- Manuals.plus /
- › UpStart Components /
 - › UpStart Components RCA 3-Device Universal Remote Control RC-RCR503BZ-DL91 User Manual

UpStart Components RC-RCR503BZ-DL91

UpStart Components RCA 3-Device Universal Remote Control User Manual

Model: RC-RCR503BZ-DL91

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your UpStart Components RCA 3-Device Universal Remote Control, model RC-RCR503BZ-DL91. This remote is designed to replace your original RCA 3-Device remote and is compatible with various devices, including Polaroid TVs. Please read this manual thoroughly to ensure proper use and to maximize the functionality of your new remote control.

PRODUCT OVERVIEW

The UpStart Components Universal Remote Control is a palm-sized device designed for ease of use. It features dedicated buttons for power, channel, volume, menu navigation, and media playback. Below is an image illustrating the remote's layout and key buttons.



Figure 1: Front view of the UpStart Components RCA 3-Device Universal Remote Control. It features a black body with red, light blue, and dark blue buttons for various functions such as Power, TV/SAT/CBL/DVD-VCR device selection, Sleep, Channel, Volume, Mute, Number Pad, Enter, Source, and media playback controls (Rewind, Play, Fast Forward, Record, Pause, Stop).

SETUP INSTRUCTIONS

1. Battery Installation

1. Locate the battery compartment cover on the back of the remote control.

2. Slide the cover downwards or press the latch and lift to open.
3. Insert two (2) AAA batteries, ensuring the positive (+) and negative (-) terminals align with the markings inside the compartment.
4. Replace the battery compartment cover, sliding it back into place until it clicks securely.
5. **Note:** Batteries are not included with the remote control.

2. Programming Your Remote Control (Code Search Method)

This universal remote requires programming to control your specific devices. The following steps outline the code search method. Ensure your device (TV, DVD, etc.) is turned ON before starting.

1. **Turn on the device** you wish to control (e.g., your Polaroid TV).
2. On the remote, press and hold the **CODE SEARCH** button until the indicator light (usually red) illuminates.
3. While holding **CODE SEARCH**, press the desired device button (e.g., **TV** for television, **SAT-CBL-DTC** for satellite/cable/digital converter, **DVD-VCR** for DVD/VCR). The indicator light will blink once and then remain lit.
4. Release the **CODE SEARCH** button.
5. Point the remote at your device and repeatedly press the **POWER** button (or **CHAN+** button) until your device turns off (or changes channel). This may take several presses.
6. Once the device responds, immediately press the **ENTER** button to save the code. The indicator light will turn off.
7. Test the remote's functions (Volume, Channel, Mute, etc.). If some functions do not work, repeat the programming process.

Known Compatible Codes for Polaroid TV: 1523, 0765, 1276, 1498, 1687, 1766, 1769, 2121. You can try entering these codes directly if your remote supports direct code entry (refer to the original RCA manual if available for direct code entry instructions, as this replacement remote primarily uses the search method).

OPERATING INSTRUCTIONS

Once programmed, your remote control is ready for use. Select the appropriate device mode (TV, SAT-CBL-DTC, DVD-VCR) before operating.

- **POWER:** Turns the selected device on or off.
- **TV / SAT-CBL-DTC / DVD-VCR:** Selects the device to be controlled.
- **VOL+ / VOL-:** Increases or decreases the volume.
- **CHAN+ / CHAN-:** Changes the channel up or down.
- **MUTE:** Silences the audio.
- **MENU:** Accesses the device's on-screen menu.
- **Navigation Buttons (Up, Down, Left, Right, OK/Enter):** Navigates through menus and confirms selections.
- **GO BACK:** Returns to the previous menu or channel.
- **SOURCE:** Changes the input source on your TV.
- **Number Pad (0-9):** Direct channel entry.
- **SLEEP:** Activates the sleep timer function on compatible devices.
- **REW / PLAY / FWD / REC / PAUSE II / STOP:** Controls media playback functions for DVD/VCR devices.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's range decreases or buttons become unresponsive. Always replace both batteries at the same time with new AAA batteries.

- **Storage:** If the remote will not be used for an extended period, remove the batteries to prevent leakage.

TROUBLESHOOTING

Problem	Possible Cause / Solution
Remote does not operate the device.	• Batteries are dead or inserted incorrectly. Check battery orientation and replace if necessary. • Remote is not programmed correctly for the device. Repeat the programming steps. • Device is not turned on. Ensure the device is powered on. • Obstruction between remote and device. Ensure a clear line of sight.
Only some buttons work after programming.	• The selected code is partially compatible. Repeat the programming steps to find a more compatible code.
Indicator light does not illuminate.	• Batteries are dead or inserted incorrectly. Replace batteries.

SPECIFICATIONS

- **Model Number:** RC-RCR503BZ-DL91
- **Brand:** UpStart Components
- **Compatible Devices:** Television, Satellite/Cable/DTC, DVD/VCR
- **Max Number of Supported Devices:** 3 (as a replacement for a 3-device universal remote)
- **Power Source:** 2 x AAA Batteries (not included)
- **Color:** Black
- **Special Feature:** Universal Remote Control

WARRANTY AND SUPPORT

This product is an UpStart Components Brand replacement part. Any warranties for this product are offered solely by UpStart Components. This product is not affiliated with any other brands mentioned, and is not covered under any warranties offered by original manufacturers. For support or warranty inquiries, please contact UpStart Components directly.

Legal Disclaimer: This is an UpStart Components Brand replacement part, NOT an OEM product. All mentions of brand names or model descriptions are made strictly to illustrate compatibility. All brand names and logos are registered trademarks of their respective owners. This product is not affiliated with any brands and is not covered under any warranties offered by the original manufacturers. Any warranties for this product are offered solely by UpStart Components.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07MR63VGD>

More documents and user manuals: **<https://manuals.plus/>**