

- › [UpStart Components](#) /
- › [UpStart Components Universal 3-Device Remote Control Instruction Manual RC-RCR503BZ-2PK-DL55](#)

UpStart Components RC-RCR503BZ-2PK-DL55

UpStart Components Universal 3-Device Remote Control Instruction Manual

Model: RC-RCR503BZ-2PK-DL55

1. PRODUCT OVERVIEW

This manual provides instructions for the UpStart Components Universal 3-Device Remote Control, model RC-RCR503BZ-2PK-DL55. This remote is designed to replace and operate up to three different audio/video devices, such as TVs, VCRs, and satellite/cable boxes. It is a replacement part and not an OEM product.



Front view of the UpStart Components Universal 3-Device Remote Control, showing all buttons and their labels.

2. PACKAGE CONTENTS

- 1 or 2 x UpStart Components Universal 3-Device Remote Control (depending on pack size)

- Instruction Manual (this document)

3. SETUP

3.1 Battery Installation

The remote control requires two (2) AAA batteries (not included).

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards to remove it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it upwards until it clicks into place.



Angled view of the UpStart Components Universal 3-Device Remote Control. The battery compartment is located on the back of the remote.

3.2 Device Programming

This universal remote control requires programming to operate your specific devices. Use the provided remote codes to set up your TV, VCR, or satellite/cable box.

3.2.1 Automatic Code Search

1. Turn on the device you wish to control (e.g., TV).
2. Press and hold the **CODE SEARCH** button on the remote until the indicator light turns on.
3. Press and release the device button you want to program (e.g., **TV**). The indicator light will blink once and then remain on.
4. Point the remote at the device and repeatedly press the **POWER** button (approximately every 2 seconds) until the device turns off.
5. Once the device turns off, press the **ENTER** button to save the code. The indicator light will turn off.
6. Test the remote's functions (e.g., volume, channel). If some functions do not work, repeat the process to find a more compatible code.

3.2.2 Direct Code Entry

If you know the 4-digit code for your device (e.g., JVC TV codes: 0463, 0053, 1253, 1601, 1774, 2264), you can enter it directly.

1. Turn on the device you wish to control.
2. Press and hold the **CODE SEARCH** button until the indicator light turns on.
3. Press and release the device button you want to program (e.g., **TV**). The indicator light will blink once and then remain on.
4. Enter the 4-digit code using the number buttons on the remote. After entering the fourth digit, the indicator light should turn off.
5. Test the remote's functions. If the device does not respond or some functions are missing, try another code from the list for your brand.

4. OPERATION

Once programmed, the remote control functions similarly to your original device remote. Below is a list of common buttons and their functions:

- **POWER**: Turns the selected device on or off.
- **TV, SAT-CBL-DTC, DVD-VCR**: Selects the device to be controlled.
- **VOL+** / **VOL-**: Adjusts the volume.
- **CHAN+** / **CHAN-**: Changes channels.
- **MUTE**: Mutes the audio.
- **MENU**: Accesses the device's menu.
- **GO BACK**: Returns to the previous menu or channel.
- **Number Buttons (0-9)**: Direct channel entry.
- **ENTER**: Confirms selections.
- **SOURCE**: Changes input source.
- **REW, PLAY, FWD, REC, PAUSE, STOP**: Controls playback functions for compatible devices (e.g., DVD, VCR).
- **SLEEP**: Activates sleep timer function on compatible devices.



The UpStart Components Universal 3-Device Remote Control, highlighting the layout of all control buttons for various functions.

5. TROUBLESHOOTING

5.1 Remote does not operate the device.

- Ensure fresh AAA batteries are installed correctly.
- Verify the remote is pointed directly at the device and there are no obstructions.
- Re-program the remote using a different code for your device brand.
- Ensure the correct device button (TV, SAT-CBL-DTC, DVD-VCR) is selected.

5.2 Some functions do not work.

- The current code may not be fully compatible. Try programming the remote again using a different code for your device brand.
- Not all functions of your original remote may be supported by a universal remote.

6. SPECIFICATIONS

Feature	Detail
Model Number	RC-RCR503BZ-2PK-DL55
Brand	UpStart Components
Compatible Devices	Television, Satellite/Cable Box, DVD/VCR
Connectivity Technology	Infrared
Power Source	2 x AAA Batteries (not included)
Special Feature	Universal
Color	Black
JVC TV Remote Codes	0463, 0053, 1253, 1601, 1774, 2264

7. WARRANTY AND SUPPORT

This product is an UpStart Components Brand replacement part. It is not an OEM product. Any warranties for this product are offered solely by UpStart Components. For support or warranty inquiries, please contact UpStart Components directly.

Please note that this product is not affiliated with any original equipment manufacturers (OEMs) and is not covered under any warranties offered by original manufacturers.