

[Manuals.plus](#) /

› [Energizer](#) /

› Energizer Rechargeable LED Metal Torch, Super Bright Flashlight, Shatterproof and Water Resistant, USB Port to Charge Other Devices, Charging Cable Included

Energizer E301528000

Energizer Rechargeable LED Metal Torch User Manual

Model: E301528000

Brand: Energizer

INTRODUCTION

Thank you for choosing the Energizer Rechargeable LED Metal Torch. This versatile and durable flashlight is designed to provide powerful illumination and serve as a portable power source for your devices. Engineered for reliability and performance, it is an ideal tool for various situations, from everyday use to emergency preparedness.





Figure 1: Energizer Rechargeable LED Metal Torch in its retail packaging.

PRODUCT FEATURES

- **Rechargeable Design:** Equipped with a non-removable Lithium Ion battery, easily rechargeable via micro USB.
- **Power Bank Functionality:** Features a second USB port to charge other devices, ideal for emergencies.
- **High Brightness:** Delivers up to 1000 lumens in high mode, providing powerful illumination.
- **Multiple Light Modes:** Offers 7 modes including High, Low, High Spot, Low Spot, High Wide, Low Wide, and Strobe for various lighting needs.
- **Durable Construction:** Made from aircraft-grade aluminum, designed to withstand a 1-meter drop.
- **Water Resistant:** IPX4 rated, protecting against splashing water from any direction.
- **MAXVIZ Technology:** Provides a wide, uniform, high-definition beam for clear visibility.
- **Long Runtime:** Up to 4 hours of runtime on a full charge in high mode.

PACKAGE CONTENTS

Ensure all items are present in the package:

- 1 x Energizer Rechargeable LED Metal Torch
- 1 x Micro USB Charging Cable
- 1 x Torch Lanyard

SETUP

Initial Charging

Before first use, fully charge the flashlight. The non-removable Lithium Ion battery is included and pre-installed.

1. Locate the micro USB charging port on the flashlight, typically covered by a rubber flap for water resistance.
2. Open the rubber flap.
3. Connect the smaller end of the included micro USB cable to the flashlight's charging port.
4. Connect the larger USB-A end of the cable to a standard USB power source (e.g., wall adapter, computer USB port, power bank).
5. A green indicator light will illuminate to show that the flashlight is charging.
6. Charging is complete when the indicator light changes or turns off (refer to specific product behavior if different).

Note: For optimal battery life, avoid completely draining the battery before recharging.

OPERATING INSTRUCTIONS

Power On/Off and Mode Selection

The flashlight features a single button for power control and mode cycling.

1. **To Turn On:** Press the power button once. The flashlight will typically turn on in its last used mode or default to High mode.
2. **To Cycle Modes:** While the flashlight is on, press the power button repeatedly to cycle through the available modes: High, Low, High Spot, Low Spot, High Wide, Low Wide, and Strobe.
3. **To Turn Off:** Press and hold the power button for approximately 1-2 seconds, or cycle through all modes until the light turns off.



Figure 2: Examples of the flashlight's various light modes and beam patterns.

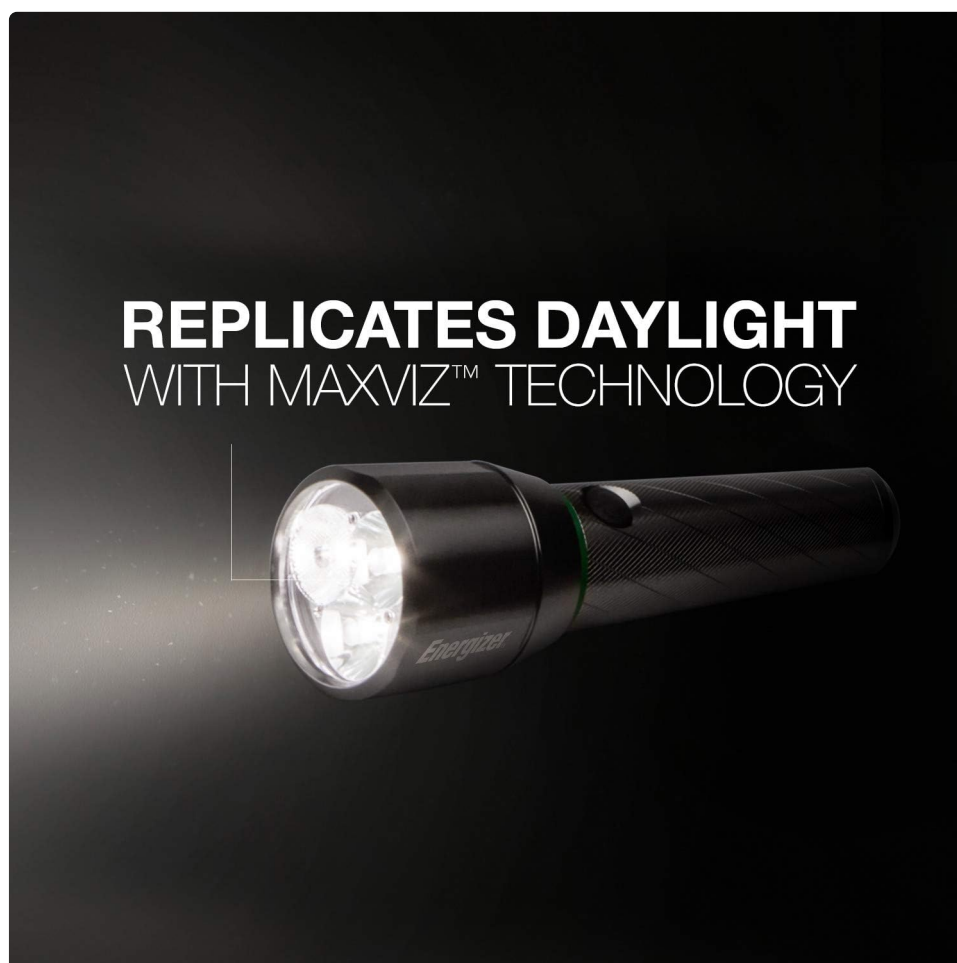


Figure 3: The flashlight's head, featuring MAXVIZ technology for optimal light distribution.



Figure 4: Detail of the flashlight's lens, capable of producing 1000 lumens.

CHARGING OTHER DEVICES (POWER BANK FUNCTION)

The Energizer Rechargeable LED Metal Torch can also be used to charge other USB-powered devices.

1. Locate the USB-A output port on the flashlight, typically next to the micro USB input port.
2. Open the rubber flap covering the USB-A port.
3. Connect your device's charging cable (USB-A end) to the flashlight's USB-A output port.
4. Connect the other end of your device's charging cable to your device.
5. The flashlight will begin charging your device. Monitor your device's charging indicator.

Note: Using the flashlight as a power bank will consume its internal battery charge. Ensure the flashlight has sufficient charge before attempting to charge other devices.

USB IN & OUT



Figure 5: The flashlight's USB-out port being used to charge a smartphone.

MAINTENANCE

Cleaning and Storage

- **Cleaning:** Wipe the flashlight with a soft, damp cloth. Do not use abrasive cleaners or solvents. Ensure the USB ports are dry before closing their rubber flaps.
- **Storage:** Store the flashlight in a cool, dry place away from direct sunlight and extreme temperatures. For long-term storage, charge the battery to approximately 50% every 3-6 months to maintain battery health.

Durability Features

DURABLE AIRCRAFT GRADE BODY



Figure 6: The robust aircraft-grade aluminum body of the flashlight.

IPX4 WATER RESISTANCE

WITHSTANDS SPLASHING



Figure 7: The flashlight demonstrating its IPX4 water resistance against splashing.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Flashlight does not turn on.	Battery is depleted.	Charge the flashlight using the provided USB cable.
Light is dim or flickers.	Low battery charge.	Recharge the flashlight.
Cannot charge other devices.	Flashlight battery is too low or cable is faulty.	Ensure flashlight is fully charged. Try a different USB cable.
USB port cover does not seal properly.	Debris in the port or cover is misaligned.	Clean the port area and ensure the cover is properly seated to maintain water resistance.

SPECIFICATIONS

Brand	Energizer
Model Number	E301528000
Light Source Type	LED
Brightness	1000 Lumens (High Mode)
Runtime	4 hours (High Mode)
Power Source	Battery Powered (Lithium Ion, included)
Material	Aircraft-Grade Aluminum
Water Resistance	IPX4 (Water Resistant)
Drop Resistance	1 Meter
Dimensions (L x W x H)	5.31 x 1.97 x 1.25 inches
Item Weight	13.2 ounces (374 grams)

SAFETY INFORMATION

- Do not look directly into the LED light. It can cause temporary vision impairment or permanent eye damage.
- Keep out of reach of children.
- Do not disassemble, modify, or attempt to repair the flashlight. This may void the warranty and pose a safety risk.
- Do not expose the flashlight to extreme temperatures, fire, or immerse it in water beyond its IPX4 rating.
- Dispose of the product responsibly according to local regulations for electronic waste.

WARRANTY AND SUPPORT

Energizer products are manufactured to the highest quality standards. For warranty information, technical support, or customer service inquiries, please refer to the official Energizer website or contact their customer support line. Please

retain your proof of purchase for warranty claims.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question