

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [EverNice](#) /

› [EverNice Bobbin Winder Assembly for Juki LK-1850 Bartacking Machine Instruction Manual](#)

EverNice 135-26157

Product Instruction Manual

Bobbin Winder Assembly for Juki LK-1850 Bartacking Machine

INTRODUCTION

This manual provides detailed instructions for the installation, operation, and maintenance of the EverNice Bobbin Winder Assembly, Part #135-26157, designed specifically for the Juki LK-1850 Bartacking Machine. Please read this manual thoroughly before use to ensure proper function and longevity of the product.

PRODUCT OVERVIEW

The Bobbin Winder Assembly is a crucial component for efficient thread management on your Juki LK-1850 Bartacking Machine. It ensures bobbins are wound evenly and consistently, which is essential for smooth sewing operations and preventing thread breakage.



Figure 1: Front view of the Bobbin Winder Assembly, showing the main winding spindle and mounting bracket.



Figure 2: Side view of the Bobbin Winder Assembly, highlighting the tensioning mechanism and bobbin holder.



Figure 3: Another side view of the Bobbin Winder Assembly, showing the full length of the bobbin spindle and the adjustment screw.



Figure 4: Rear view of the Bobbin Winder Assembly, illustrating the mounting points and overall compact design.

SETUP AND INSTALLATION

1. **Preparation:** Ensure your Juki LK-1850 Bartacking Machine is powered off and unplugged before beginning installation. Clear the area around the bobbin winder mounting point.
2. **Locate Mounting Point:** Identify the designated mounting location for the bobbin winder assembly on your Juki LK-1850 machine. Refer to your machine's primary instruction manual if unsure.
3. **Attach Assembly:** Align the mounting holes of the Bobbin Winder Assembly (Part #135-26157) with the corresponding holes on the machine. Secure the assembly using the appropriate screws or fasteners provided with your machine or the winder (if included). Do not overtighten.
4. **Check Stability:** Gently test the installed winder to ensure it is firmly attached and does not wobble.

OPERATING INSTRUCTIONS

- 1. Insert Empty Bobbin:** Place an empty bobbin onto the bobbin winder spindle. Ensure it sits securely.
- 2. Thread Path:** Guide the thread from your spool through the tension disc of the bobbin winder. The thread should pass smoothly through the tension mechanism to ensure even winding.
- 3. Initial Wind:** Manually wind the thread a few times around the empty bobbin to secure the starting end.
- 4. Engage Winder:** Engage the bobbin winder mechanism. This typically involves pushing a lever or button that brings the winder into contact with the machine's drive wheel.
- 5. Start Machine:** Power on your Juki LK-1850 machine and begin operation. The bobbin winder will automatically start winding the thread onto the bobbin.
- 6. Monitor Winding:** Observe the bobbin as it fills. The winder is designed to stop automatically when the bobbin is full.
- 7. Remove Bobbin:** Once winding stops, disengage the winder and carefully remove the full bobbin from the spindle. Cut the thread.

MAINTENANCE

- Regular Cleaning:** Periodically clean the bobbin winder assembly to remove lint, dust, and thread residue. Use a soft brush or compressed air.
- Lubrication:** Apply a small amount of sewing machine oil to moving parts as recommended by your Juki machine's manual for its bobbin winder mechanism. Avoid over-lubrication.
- Inspect for Wear:** Regularly inspect the spindle, tension disc, and engagement points for signs of wear or damage. Replace the assembly if significant wear is observed to maintain optimal performance.
- Storage:** When not in use for extended periods, ensure the machine and its components, including the bobbin winder, are stored in a clean, dry environment.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Bobbin not winding evenly.	Incorrect thread tension; lint in tension disc.	Adjust tension; clean tension disc.
Winder not engaging.	Winder not properly aligned or engaged with drive wheel.	Ensure winder is fully engaged; check for obstructions.
Thread breaking during winding.	Too much tension; burr on spindle; poor quality thread.	Reduce tension; inspect spindle for damage; use quality thread.
Winder not stopping automatically.	Sensor or stop mechanism obstructed or faulty.	Clean stop mechanism; consult a technician if issue persists.

SPECIFICATIONS

- Product Name:** Bobbin Winder Assembly
- Part Number:** 135-26157
- Compatibility:** Juki LK-1850 Bartacking Machine
- Brand:** EverNice

- **Material:** Metal alloy components

For further assistance, please refer to your Juki LK-1850 Bartacking Machine's main instruction manual or contact a qualified service technician.

© 2024 EverNice. All rights reserved.