Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- HyperGear /
- > HyperGear Wave Portable Wireless Bluetooth Speaker 14704 User Manual

HyperGear 14704

HyperGear Wave Portable Wireless Bluetooth Speaker 14704 User Manual

Model: 14704 | Brand: HyperGear

INTRODUCTION

The HyperGear Wave Portable Wireless Bluetooth Speaker (Model 14704) is designed to deliver high-definition stereo sound in various environments. Its IPX4 waterproof rating makes it suitable for use near water, while the built-in microphone allows for hands-free calls. This manual provides essential information for the proper setup, operation, and maintenance of your speaker.



Image: HyperGear Wave speaker, showcasing its waterproof design with water splashes.

PACKAGE CONTENTS

Verify that all items are present in the package:

- HyperGear Wave Speaker
- 3.5mm Stereo Auxiliary Cable
- Micro USB Charging Cable
- User Manual (this document)



Image: The HyperGear Wave speaker alongside its included 3.5mm auxiliary cable and Micro USB charging cable.

SETUP

1. Charging the Speaker

Before initial use, fully charge the speaker. Connect the Micro USB Charging Cable to the speaker's charging port and the other end to a USB power source (e.g., wall adapter, computer USB port). The charging indicator light will illuminate during charging and turn off or change color when fully charged.

2. Powering On/Off

Press and hold the Power button (usually marked with a power icon) for approximately 3 seconds to turn the speaker on or off. A sound prompt or LED indicator will confirm the status change.

OPERATING INSTRUCTIONS

1. Bluetooth Pairing

- 1. Ensure the speaker is powered on and within 33 feet (10 meters) of your Bluetooth-enabled device.
- 2. The speaker will automatically enter pairing mode, indicated by a flashing LED light (refer to your speaker's specific LED behavior).
- 3. On your device, navigate to the Bluetooth settings and search for available devices.
- 4. Select "HyperGear Wave" (or similar name) from the list.
- 5. Once paired, the speaker will emit a confirmation sound, and the LED light will become solid.

The speaker will automatically attempt to reconnect to the last paired device when powered on.



Image: The HyperGear Wave speaker positioned on sand, demonstrating its wireless capability for outdoor use.

2. Basic Controls

• Play/Pause: Press the Play/Pause button once.

• Volume Up: Press the '+' button.

• Volume Down: Press the '-' button.

• Next Track: Press and hold the '+' button.

• Previous Track: Press and hold the '-' button.

- Answer/End Call: Press the Play/Pause button once during an incoming call.
- Reject Call: Press and hold the Play/Pause button during an incoming call.

3. Audio Input Modes

The HyperGear Wave speaker supports multiple audio input options:

- Bluetooth Mode: Default wireless connection.
- Auxiliary (AUX) Mode: Connect an audio device using the included 3.5mm Stereo Auxiliary Cable. The speaker will automatically switch to AUX mode when the cable is inserted.
- Micro SD Card Mode: Insert a Micro SD card (not included) with audio files into the designated slot.

 The speaker will automatically detect and play music from the card.



Image: A close-up view of the speaker highlighting its compatibility with Bluetooth, Auxiliary input, and Micro SD cards.

MAINTENANCE

- Cleaning: Use a soft, damp cloth to clean the speaker's exterior. Avoid harsh chemicals or abrasive cleaners.
- Water Exposure: While IPX4 waterproof, avoid submerging the speaker. Ensure all port covers are securely closed before exposure to water.

- Storage: Store the speaker in a cool, dry place away from extreme temperatures and direct sunlight.
- **Battery Care:** To prolong battery life, avoid fully discharging the speaker frequently. Charge it regularly, even if not in use for extended periods.



Image: The HyperGear Wave speaker attached to a kayak, illustrating its suitability for splash-prone environments.

Troubleshooting

- Speaker will not turn on: Ensure the battery is charged. Connect the charging cable and try again.
- · Cannot pair with Bluetooth device:
 - Ensure the speaker is in pairing mode (flashing LED).
 - Make sure Bluetooth is enabled on your device.
 - Move the speaker closer to your device (within 33 feet).
 - Turn off and on both the speaker and your device's Bluetooth.
 - Forget the speaker from your device's Bluetooth list and attempt to re-pair.

· No sound or low volume:

Adjust the volume on both the speaker and your connected device.

- Ensure the speaker is properly paired or the AUX cable/Micro SD card is correctly inserted.
- Check if the audio source is playing.

• Poor sound quality:

- Move the speaker closer to your Bluetooth device to avoid interference.
- Ensure there are no obstructions between the speaker and your device.
- If using AUX, check the cable for damage and ensure it's fully inserted.

SPECIFICATIONS

Model Name	HyperGear Wave	
Model Number	14704	
Speaker Type	Outdoor	
Connectivity Technology	Bluetooth, Wireless	
Bluetooth Range	33 Feet (10 meters)	
Water Resistance	IPX4 Waterproof	
Audio Output Power	10 Watts	
Audio Output Mode	Stereo	
Playtime	Up to 4 hours	
Power Source	Battery Powered	
Item Weight	362.87 Grams (12.8 ounces)	
Product Dimensions	8.2 x 2.6 x 2.9 inches	

WARRANTY AND SUPPORT

Warranty Information

This HyperGear product comes with a Limited Warranty. For specific details regarding warranty coverage, duration, and terms, please refer to the warranty card included in your product packaging or visit the official HyperGear website.

Customer Support

If you encounter any issues or have questions not covered in this manual, please contact HyperGear customer support. Contact information can typically be found on the product packaging or the official HyperGear website: www.hypergear.com.

Related Documents - 14704



 
HyperGear SoundTower Wireless LED Speaker User Manual

Comprehensive user manual for the HyperGear SoundTower Wireless LED Speaker, covering safety instructions, specifications, pairing, audio modes, and party mode.



HyperGear Halo LED Wireless Speaker User Manual

User manual for the HyperGear Halo LED Wireless Speaker, detailing features, controls, specifications, and usage instructions, including IPX6 waterproof rating and Party Mode.

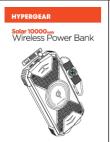

HYPERGEAR Solar 10000mAh Wireless Power Bank User Manual

Comprehensive user manual for the HYPERGEAR Solar 10000mAh Wireless Power Bank. Learn about its features, specifications, charging methods (USB, USB-C, Solar), wireless charging, flashlight operation, and important safety guidelines. Includes IPX5 water resistance details and FCC compliance information.



<u>HyperGear Wireless Audio Essentials Duo Speaker + Headphones User Manual</u>

User manual for the HyperGear Wireless Audio Essentials Duo, a light-up speaker and headphone combo. Includes setup, operation, controls, specifications, and safety information.



HyperGear Vibe Wireless Headphones User Manual

User manual for the HyperGear Vibe Wireless Headphones, covering specifications, charging, pairing, usage via AUX, functions, and important safety instructions.



HyperGear True Wireless Earbuds User Manual

User manual for HyperGear True Wireless Earbuds, covering safety instructions, charging, pairing, and controls. Learn how to use your HyperGear earbuds effectively.