

[manuals.plus](#) /› [Relaxdays](#) /› [Relaxdays 60L Sensor Kitchen Bin Instruction Manual - Model 10024950](#)

Relaxdays 10024950

Relaxdays 60L Sensor Kitchen Bin

Model: 10024950

Instruction Manual

INTRODUCTION

Thank you for choosing the Relaxdays 60L Sensor Kitchen Bin. This manual provides essential information for the safe and efficient use of your new sensor bin. Please read these instructions carefully before assembly and operation, and retain them for future reference.

SAFETY INSTRUCTIONS

- Do not immerse the lid or electronic components in water or other liquids.
- Use only the specified battery type (6 x AA batteries). Ensure correct polarity when inserting batteries.
- Do not mix old and new batteries, or different types of batteries.
- Remove batteries if the bin will not be used for an extended period.
- Keep the sensor area clean and unobstructed for optimal performance.
- This product is intended for indoor use only.
- Keep out of reach of children to prevent accidents.

PACKAGE CONTENTS

Please check that all parts are present and in good condition:

- 1 x Stainless Steel Bin Body (60L)
- 1 x Sensor Lid Assembly
- 1 x Clamping Ring for Bin Liner

Note: 6 x AA batteries are required and not included in the package.

SETUP

1. **Battery Installation:** Locate the battery compartment on the underside of the sensor lid. Open the compartment cover and insert 6 new AA batteries, ensuring correct polarity (+/-). Close the compartment

cover securely.

2. **Attach Lid:** Carefully place the sensor lid onto the bin body, ensuring it sits flush and is stable.
3. **Insert Bin Liner:** Place your bin liner into the bin. Secure the top edge of the liner by fitting the clamping ring over it and then placing the clamping ring back into the bin. This holds the liner in place and hides any excess.
4. **Placement:** Position the bin in your desired location. Ensure there is enough clear space above the sensor for the lid to open fully without obstruction.



Image: The sensor bin with its lid open, illustrating the area for battery installation and liner placement.



Image: A user activating the motion sensor to open the bin lid.

OPERATING INSTRUCTIONS

Motion Sensor Operation

To open the lid automatically, simply wave your hand or an object within the detection range (approximately 10-15 cm) of the infrared sensor located on the front of the lid. The lid will open instantly. After approximately 5 seconds of inactivity, the lid will close automatically.

Manual Operation

For situations where you need the lid to stay open longer, or prefer manual control:

- Press the **OPEN** button on the sensor panel. The lid will open and remain open.
- To close the lid, press the **CLOSE** button.



Image: Detailed view of the control panel with OPEN/CLOSE buttons and the motion sensor.

MAINTENANCE

Cleaning the Bin

- Exterior:** Wipe the stainless steel exterior with a soft, damp cloth and a mild detergent. Dry thoroughly with a clean, soft cloth to prevent water spots. Do not use abrasive cleaners or scouring pads.
- Interior:** Clean the interior of the bin body with warm soapy water. Rinse and dry completely before reinserting the bin liner.
- Sensor Area:** Gently wipe the sensor window with a soft, dry cloth to remove dust or debris that might interfere with its function.

Battery Replacement

When the lid's operation becomes slow or inconsistent, it is likely time to replace the batteries. Follow the battery installation steps in the 'Setup' section to replace all 6 AA batteries with new ones.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Lid does not open/close automatically.	Low or dead batteries. Sensor obstructed or dirty. Object too far from sensor.	Replace all 6 AA batteries. Clean the sensor window. Ensure hand/object is within 10-15 cm of the sensor.
Lid opens unexpectedly.	Sensor detecting movement nearby. Direct sunlight or strong artificial light interfering with sensor.	Relocate the bin away from high-traffic areas or direct light sources.
Lid does not respond to OPEN/CLOSE buttons.	Low or dead batteries.	Replace all 6 AA batteries.

SPECIFICATIONS

- **Model Number:** 10024950
- **Capacity:** 60 Liters
- **Dimensions (L x W x H):** 31 x 42 x 69.5 cm
- **Weight:** 5.04 kg
- **Material:** 80% Stainless Steel, 10% Plastic
- **Color:** Grey
- **Opening Mechanism:** Motion Sensor
- **Power Source:** 6 x AA Batteries (not included)
- **Recommended Use:** Kitchen



Image: Product dimensions for the 60L sensor bin.

WARRANTY AND SUPPORT

Relaxdays products are designed for quality and durability. For any questions, concerns, or warranty claims regarding your Relaxdays 60L Sensor Kitchen Bin, please contact Relaxdays customer support through the retailer where the product was purchased or visit the official Relaxdays website for contact information. Please have your model number (10024950) and proof of purchase ready when contacting support.