

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Timex](#) /
- › [Timex DGTL A-Game 50mm Watch \(Model TW5M27700\) Instruction Manual](#)

### Timex TW5M27700

# Timex DGTL A-Game 50mm Watch (Model TW5M27700) Instruction Manual

Comprehensive guide for setup, operation, and maintenance.

## INTRODUCTION

This manual provides instructions for the Timex DGTL A-Game 50mm Digital Watch, model TW5M27700. This timepiece features a durable design and digital functionalities including a chronograph, daily alarm, dual time zones, and Indiglo backlight. It is designed for everyday use and is water-resistant up to 50 meters.





Front view of the Timex DGTL A-Game 50mm Digital Watch, displaying the digital time and date.



The Timex DGTL A-Game 50mm Digital Watch worn on a wrist, showing its size and fit.

### Key Features:

- Adjustable black 20mm resin strap, fitting up to an 8-inch wrist circumference.
- 24-Hour Chronograph with 1/100-second resolution.
- Daily alarm function.
- Two independent time zones.
- 24-hour military time mode.
- Day, date, and month calendar display.

- Gray 50mm resin case with black and orange accents.
- Durable acrylic lens.
- Negative digital display for clear readability.
- Indiglo light-up watch dial for low-light conditions.
- Water resistance up to 50 meters (165 feet), suitable for short periods of recreational swimming, but not for diving or snorkeling.

## SETUP

---

Your Timex DGTL A-Game watch comes with a pre-installed lithium metal battery. Follow these steps to set the time and date.



Side view of the watch, highlighting the control buttons for setting and mode changes.

### Setting Time and Date:

1. Press the **MODE** button repeatedly until the time setting mode is displayed (usually indicated by flashing digits).
2. Use the **SET** or **START/STOP** button to adjust the flashing digit (hours, minutes, seconds).
3. Press the **RESET** button to move to the next setting (e.g., from hours to minutes).
4. Continue adjusting and moving through settings for year, month, and day.
5. Once all settings are correct, press the **MODE** button to exit the setting mode and return to the normal time display.

**Note:** The exact button labels and sequence may vary slightly. Refer to the on-screen indicators for guidance.

## OPERATING INSTRUCTIONS

---

### Basic Time Display:

In normal time mode, the watch displays the current time, day, and date.

### Indiglo Night-Light:

Press the **INDIGLO** button (typically located on the top left or front of the watch) to activate the backlight for easy viewing in low-light conditions. The light will remain on for a few seconds.

## Chronograph (Stopwatch):

1. Press the **MODE** button until "CHRONO" or "STW" is displayed.
2. Press the **START/STOP** button to begin timing.
3. Press **START/STOP** again to pause or stop the timer.
4. Press the **RESET** button to clear the chronograph to zero.

## Daily Alarm:

1. Press the **MODE** button until "ALARM" is displayed.
2. Use the **SET** or **START/STOP** button to adjust the alarm time.
3. Press the **RESET** button to move between hours and minutes.
4. Press **MODE** to save the alarm setting.
5. To activate/deactivate the alarm, typically press **START/STOP** while in alarm mode. An alarm icon will appear when active.

## Dual Time Zones:

This watch supports two time zones. To access and set the second time zone (T2):

1. Press the **MODE** button until "T2" or "DUAL TIME" is displayed.
2. Follow similar steps as setting the main time to adjust the hours and minutes for the second time zone.
3. Press **MODE** to save and exit.

## Water Resistance:

The watch is water resistant to 50 meters (165 feet). This means it is suitable for short periods of recreational swimming.

**Do not press buttons underwater**, as this can compromise the water resistance seal. Not suitable for diving or snorkeling.

Your browser does not support the video tag.

Video demonstrating the Timex DGTL A-Game watch from various angles, showcasing its design and features.

## MAINTENANCE

---

### Cleaning:

To clean your watch, wipe it with a soft, damp cloth. Avoid using harsh chemicals or abrasive materials, which can damage the resin case and strap.

### Water Resistance Care:

After exposure to saltwater, rinse the watch with fresh water and dry it thoroughly. Ensure the watch is completely dry before pressing any buttons.

### Battery Replacement:

The watch uses one Lithium Metal battery. When the display dims or functions become erratic, it may be time for a battery replacement. It is recommended to have the battery replaced by a qualified watch technician to ensure the water

resistance seal is maintained.





Rear view of the watch, showing the stainless steel case back where battery access is located.

## TROUBLESHOOTING

---

### Display is blank or dim:

- The battery may be low. Consider professional battery replacement.
- Ensure the watch has not been exposed to extreme temperatures.

### Buttons are unresponsive:

- Ensure the watch is not wet. Do not press buttons underwater.
- A soft reset might be needed. If available, look for a small recessed button on the back or side that can be pressed with a paperclip. Otherwise, a battery removal/reinsertion by a professional may be required.

### Time is inaccurate:

- Re-set the time following the "Setting Time and Date" instructions.
- If inaccuracy persists, the battery may be weak, or the internal module may require service.

For issues not covered here, or for complex repairs, please contact Timex customer support or an authorized service center.

## SPECIFICATIONS

---

Feature	Detail
Model Number	TW5M27700
Brand	Timex
Case Material	Resin
Case Diameter	50 Millimeters
Case Thickness	16 Millimeters
Band Material	Resin
Band Width	20 Millimeters

Feature	Detail
Band Length	8 Inches (Adjustable)
Crystal Type	Acrylic
Display Type	Digital
Movement Type	Quartz
Water Resistance Depth	50 Meters (165 Feet)
Power Source	Battery Powered (1 Lithium Metal battery included)
Item Weight	2.4 ounces (0.15 Pounds)

## WARRANTY AND SUPPORT

---

### Warranty Information:

This Timex watch is covered by a manufacturer's warranty. For specific details regarding the warranty period and coverage, please refer to the warranty card included with your purchase or visit the official Timex website.

### Customer Support:

For further assistance, technical support, or service inquiries, please contact Timex customer service. You can typically find contact information on the Timex official website or through the documentation provided with your watch.

**Online Resources:** For additional information, FAQs, and product registration, visit the official Timex website: [www.timex.com](http://www.timex.com)

