

John Timberland SHF41-BLACK

John Timberland Black Grid Outdoor Wall Light Fixture Instruction Manual

Model: SHF41-BLACK

INTRODUCTION

Thank you for purchasing the John Timberland Black Grid Outdoor Wall Light Fixture. This manual provides essential information for the safe installation, proper operation, and effective maintenance of your new lighting fixture. Please read these instructions thoroughly before beginning installation and retain them for future reference.

Your browser does not support the video tag.

Official John Timberland Brand Video. This video showcases various outdoor lighting and decor styles from the John Timberland brand.

SAFETY INFORMATION

For your safety, always read and understand all instructions completely before beginning installation. If you are unsure about any part of the installation process, consult a qualified electrician.

- **WARNING:** To avoid electric shock, disconnect power at the circuit breaker or fuse box before installation or servicing.
- All electrical connections must be in accordance with local codes, ordinances, or the National Electric Code (NEC).
- This fixture is rated for wet locations, suitable for direct exposure to weather and rain.
- Ensure the mounting surface can support the weight of the fixture.
- Do not exceed the maximum wattage specified for the light bulb.
- Wear safety glasses and gloves during installation.

PACKAGE CONTENTS

Verify that all components are present before discarding packaging materials. If any parts are missing or damaged, contact customer support.

- 1 x Light Fixture Body (Black finish, die-cast metal)
- 1 x Frosted Glass Shade
- 1 x Mounting Hardware Kit (includes mounting plate, wire nuts, screws for mounting plate to junction box)
- *Note: Wall screws for mounting the fixture to the wall are not included and may need to be purchased separately depending on your installation surface.*

SPECIFICATIONS

Feature	Detail
Model Number	SHF41-BLACK (61E59)
Dimensions (H x W x Extension)	10 inches x 7.5 inches x 5.25 inches
Weight	3.6 lbs
Material	Die-cast Metal, Frosted Glass
Finish	Black
Bulb Type	E26 Medium Base (Bulb not included)
Max Wattage	60 Watts
Voltage	120 Volts
Indoor/Outdoor Usage	Outdoor (Wet Location Rated)
Installation Orientation	Vertical or Horizontal

Extends 5 1/4"

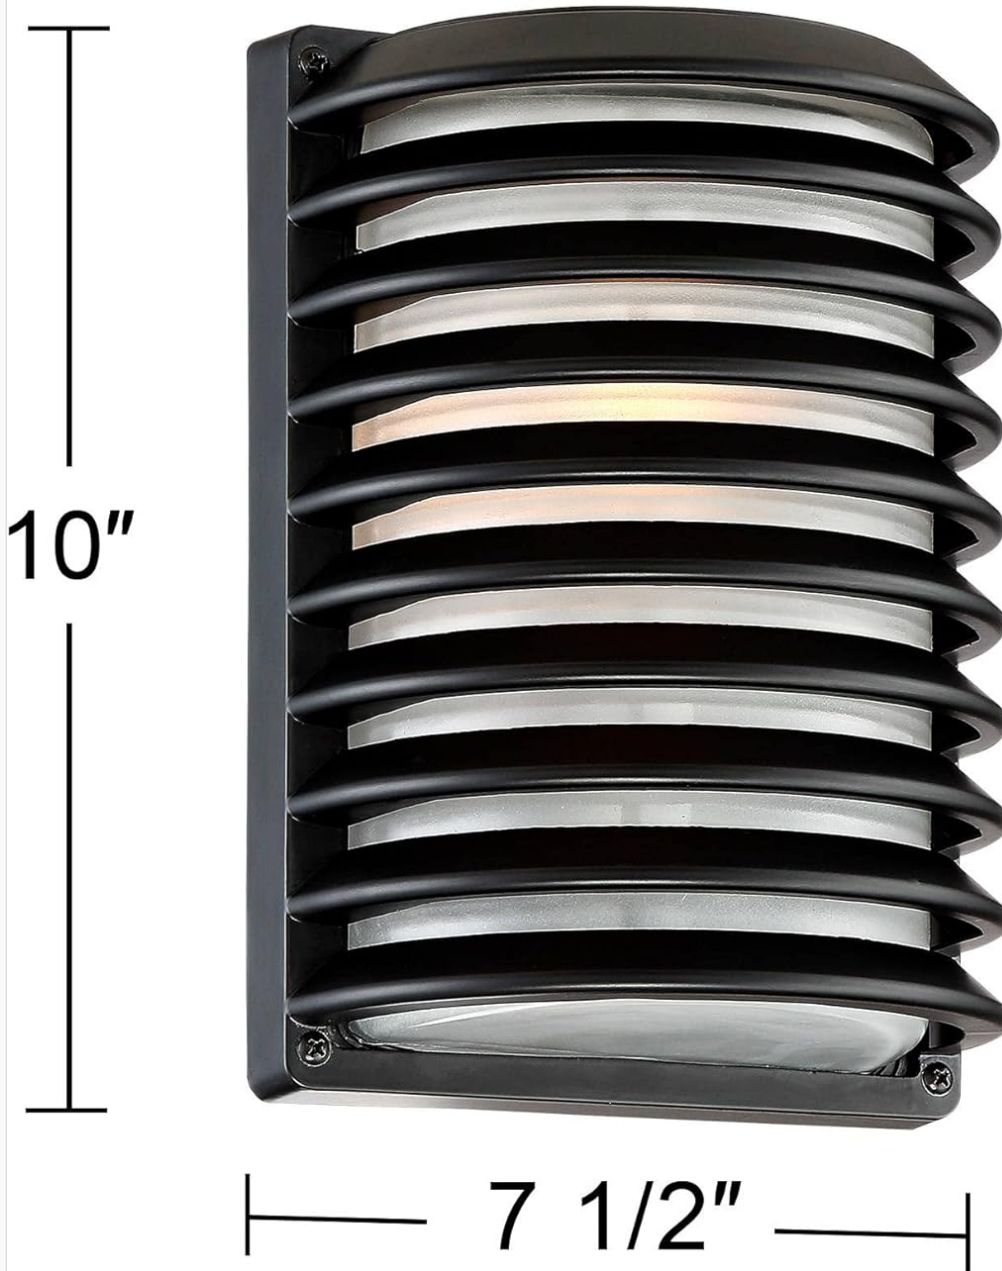


Figure 1: Fixture Dimensions. The diagram illustrates the height, width, and extension of the wall light fixture.

INSTALLATION INSTRUCTIONS

1. Pre-Installation

1. **Turn off power:** Locate the circuit breaker or fuse box that supplies power to the light fixture location. Turn off the power completely before proceeding.
2. **Prepare the area:** Clear the work area and ensure you have all necessary tools (screwdriver, wire strippers, electrical tape, safety glasses, gloves).
3. **Remove old fixture (if applicable):** Carefully disconnect and remove any existing light fixture.

2. Mounting the Fixture

4. **Attach mounting plate:** Secure the mounting plate (included in hardware kit) to your electrical junction box using the provided screws. Ensure it is firmly attached.
5. **Wire connections:** Carefully connect the electrical wires:
 - Connect the fixture's black wire to the house's black (hot) wire.
 - Connect the fixture's white wire to the house's white (neutral) wire.
 - Connect the fixture's ground wire to the house's ground wire (or to the mounting plate if no house ground wire is available).

Use wire nuts to secure all connections and wrap them with electrical tape for added safety.

6. **Secure the fixture:** Align the fixture body with the mounting plate and secure it using the screws provided. This fixture can be installed vertically or horizontally.
7. **Install bulb and glass shade:** Insert one E26 medium base bulb (max 60W, not included) into the socket. Carefully place the frosted glass shade into the fixture and secure it according to the design.
8. **Restore power:** Once the fixture is securely installed and all connections are checked, restore power at the circuit breaker.



Figure 2: Installed Fixture. The image shows the light fixture mounted on an exterior wall, demonstrating its appearance when

OPERATING INSTRUCTIONS

This outdoor wall light fixture operates via a standard wall switch (not included). Once installed and power is restored, simply toggle the wall switch to turn the light on or off. The fixture is compatible with dimmer switches if you wish to control light intensity (dimmer switch sold separately).

MAINTENANCE

- **Cleaning:** To clean the fixture, ensure power is off. Wipe the metal surfaces with a soft, damp cloth. For the glass shade, use a mild glass cleaner. Avoid abrasive cleaners or solvents that could damage the finish.
- **Bulb Replacement:** Ensure power is off before replacing the bulb. Carefully remove the glass shade, unscrew the old bulb, and screw in a new E26 medium base bulb (max 60W). Reattach the glass shade securely.
- **Periodic Inspection:** Periodically check all connections and mounting hardware for tightness and signs of wear or corrosion.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Light does not turn on	No power to fixture Loose wire connections Defective bulb	Check circuit breaker/fuse Verify all wire connections are secure (power off) Replace bulb with a new one
Light flickers	Loose bulb Loose wire connections Incorrect bulb type/wattage	Tighten bulb Check wire connections (power off) Ensure bulb meets specifications
Fixture is loose	Mounting screws not tight	Tighten mounting screws (power off)

WARRANTY AND SUPPORT

Warranty Information

This John Timberland light fixture comes with a **Limited 1-year warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use. It does not cover damage resulting from improper installation, accident, misuse, abuse, or unauthorized modifications. Please retain your proof of purchase for warranty claims.

Customer Support

If you have any questions, require assistance with installation, or need to make a warranty claim, please contact John Timberland customer support. Refer to the contact information provided with your purchase or visit the official John Timberland website for support resources.



