

[manuals.plus](#) /› [OVENTE](#) /› [OVENTE Electric Warming Tray FW170S Instruction Manual](#)

OVENTE FW170S

OVENTE Electric Warming Tray FW170S Instruction Manual

Model: FW170S

1. INTRODUCTION

Thank you for choosing the OVENTE Electric Warming Tray FW170S. This appliance is designed to keep your food warm and fresh for extended periods, making it ideal for various occasions. Please read this manual thoroughly before use to ensure safe and efficient operation.

2. IMPORTANT SAFETY INSTRUCTIONS

WARNING: To reduce the risk of fire, electric shock, or injury, always follow basic safety precautions.

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use cool-touch handles or oven mitts.
- To protect against electrical hazards, do not immerse the cord, plugs, or the appliance in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach the plug to the appliance first, then plug the cord into the wall outlet. To disconnect, turn any control to "off," then remove the plug from the wall outlet.
- Do not use the appliance for other than intended use.

- Use only with heat-resistant ceramic, glass, or metal cookware.

3. PRODUCT FEATURES

- **Efficient Heating:** Powered by a 200-watt system, it heats up quickly and distributes heat evenly.
- **Adjustable Temperature Control:** Features a dial to select desired temperature from 90°F to 284°F. The unit cycles on and off to maintain temperature.
- **Versatile Design:** Compact yet spacious enough for multiple dishes, suitable for countertops and tables.
- **Durable Construction:** Made with stainless steel to resist bending and warping.
- **Cool-Touch Handles:** Equipped with handles for safe and easy transport.
- **Indicator Light:** Illuminates when the tray is heating.

4. SETUP

1. Unpack the warming tray and all its components.
2. Place the warming tray on a stable, flat, heat-resistant surface. Ensure there is adequate ventilation around the unit.
3. Ensure the temperature control dial is set to the 'OFF' position before plugging in.
4. Plug the power cord into a standard 120V AC electrical outlet.

5. OPERATING INSTRUCTIONS

1. After plugging in the unit, turn the temperature control dial clockwise to your desired heat setting. The indicator light will illuminate, signaling that the tray is heating.
2. Allow a few minutes for the tray to reach the selected temperature.
3. Place heat-safe ceramic, glass, or metal cookware directly onto the warming surface.
4. The warming tray will automatically cycle on and off to maintain the set temperature. The indicator light will turn off when the desired temperature is reached and turn back on when heating resumes.
5. To turn off the appliance, rotate the temperature control dial counter-clockwise to the 'OFF' position and unplug the unit from the outlet.

6. MAINTENANCE AND CLEANING

Always unplug the warming tray and allow it to cool completely before cleaning.

- Wipe the warming surface with a soft, damp cloth. For stubborn stains, use a mild non-abrasive cleaner.
- Do not use abrasive pads, harsh chemicals, or metal scouring pads, as these can damage the surface.
- Do not immerse the appliance in water or any other liquid.
- Clean the cool-touch handles and the base with a damp cloth.
- Ensure the appliance is completely dry before storing or next use.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in or power outlet is faulty.	Ensure the power cord is securely plugged into a working electrical outlet. Check the circuit breaker.
Food is not warm enough.	Temperature setting is too low.	Increase the temperature setting using the control dial. Ensure cookware is heat-safe and suitable for warming.
Food is too hot.	Temperature setting is too high.	Decrease the temperature setting using the control dial.

8. SPECIFICATIONS

- **Model:** FW170S
- **Brand:** OVENTE
- **Material:** Stainless Steel
- **Power Source:** Electric
- **Wattage:** 200 watts
- **Product Dimensions:** 21.5" L x 9.62" W x 1.75" H
- **Item Weight:** 3 pounds
- **Maximum Temperature:** 284°F (140°C)
- **UPC:** 814667023834

9. WARRANTY AND SUPPORT

OVENTE warrants that this product shall be free from defects in material and workmanship under normal use and conditions for 1 year from the original purchase date. For customer service or support, please refer to the contact information provided with your product packaging or visit the official OVENTE website.

10. PRODUCT IMAGES



Image 1: The OVENTE Electric Warming Tray FW170S, showcasing its sleek design on a kitchen counter.

ADJUSTABLE TEMPERATURE CONTROL

Set to desired heat setting



Image 2: Close-up of a hand adjusting the temperature control dial, labeled 'MIN' to 'MAX', on the side of the warming tray.



COOL-TOUCH HANDLES

For convenient portability when not in use

Image 3: The warming tray featuring cool-touch handles on both ends, designed for safe and convenient portability.



Image 4: An overhead view of the warming tray holding multiple dishes, including a teapot, chicken wings, mashed potatoes, and macaroni and cheese, demonstrating its capacity.

11. PRODUCT VIDEOS

Video 1: Official product video demonstrating the OVENTE Electric Food Buffet Warmer FW170S in use, highlighting its features and benefits for keeping food warm.

Video 2: A product overview video showcasing the OVENTE Electric Warming Tray, detailing its design and functionality.