

Kichler 49688BK

Kichler Toman 49688BK Outdoor Wall Mount Light Instruction Manual

Model: 49688BK

1. SAFETY INFORMATION

Please read and understand all instructions before beginning installation. Failure to do so may result in electric shock, fire, or other injuries that could be fatal or cause serious damage.

- **WARNING:** Risk of electric shock. Disconnect power at the main circuit breaker or fuse box before installation or servicing.
- All electrical connections must be in accordance with local codes, ordinances, or the National Electric Code (NEC). Contact a qualified electrician if you are unfamiliar with proper electrical wiring connections.
- This fixture is intended for outdoor use. Ensure the mounting surface is structurally sound.
- Use only the bulb type and wattage specified in the specifications section.
- Do not attempt to alter the fixture in any way.

2. PACKAGE CONTENTS

Verify that all components are present before proceeding with installation.

- A. Fixture Assembly (1)
- B. Glass Shade (1)
- C. Mounting Hardware Kit (1) - Includes mounting strap, outlet box screws, wire connectors, ground screw.



Figure 2.1: Front view of the Kichler Toman outdoor wall mount light fixture.



Figure 2.2: Side view of the Kichler Toman outdoor wall mount light fixture, showing its depth.

3. TOOLS REQUIRED (NOT INCLUDED)

- Phillips Head Screwdriver
- Flathead Screwdriver
- Wire Strippers
- Pliers
- Electrical Tape
- Safety Glasses

4. INSTALLATION INSTRUCTIONS

Follow these steps carefully to install your Kichler Toman outdoor wall mount light.

1. **Turn Off Power:** Before starting, ensure the electrical power is turned off at the circuit breaker or fuse box to prevent electric shock.
2. **Prepare Mounting Surface:** Ensure the electrical outlet box is securely mounted to the building structure.
3. **Attach Mounting Strap:** Secure the mounting strap (part of C) to the outlet box using the provided outlet box screws. Ensure the strap is oriented correctly for the fixture.
4. **Make Electrical Connections:**
 - Connect the bare copper or green ground wire from the fixture to the ground wire from the outlet box using a wire connector. If no ground wire is present in the outlet box, attach the fixture's ground wire to the ground screw on the mounting strap.
 - Connect the white wire from the fixture to the white (neutral) wire from the outlet box using a wire connector.
 - Connect the black wire from the fixture to the black (hot) wire from the outlet box using a wire connector.
 - Carefully tuck all wires into the outlet box.
5. **Mount Fixture Assembly:** Align the fixture assembly (A) with the mounting strap and secure it using the screws provided in the mounting hardware kit.
6. **Install Bulb:** Insert one 150 Watt maximum, E26 medium base incandescent bulb (not included) into the socket.
7. **Attach Glass Shade:** Carefully place the glass shade (B) over the bulb and secure it according to the fixture's design, typically by twisting or using retaining screws. Ensure it is snug to prevent rattling.



Figure 4.1: The Kichler Toman outdoor wall mount light after complete installation.



Our Commitment

At Kichler, our past moves us forward. We have a strong history of quality, service and bringing people together. For more than 85 years, we've committed to the mindset of continuously improving, making each product and interaction better, so every life that is illuminated with Kichler products can shine.

Figure 4.2: Detail of the clear seeded glass shade and deep black finish.

5. OPERATING INSTRUCTIONS

Once installed, operating your Kichler Toman outdoor wall mount light is straightforward.

- **Power On:** Restore power to the fixture at the main circuit breaker or fuse box.
- **Switch Operation:** Use the wall switch connected to the fixture to turn the light on and off.
- **Dimming Functionality:** This fixture is dimmable. If connected to a compatible dimmer switch (sold separately), you can adjust the light output. Ensure the bulb used is also dimmable.

6. MAINTENANCE

Regular maintenance will help preserve the appearance and functionality of your light fixture.

- **Cleaning:** To clean the fixture, wipe it with a soft, dry cloth. Do not use abrasive cleaners or solvents as they may damage the finish or glass.
- **Glass Shade Cleaning:** The clear seeded glass shade can be cleaned with a mild glass cleaner applied to a cloth, then wiped onto the glass. Avoid spraying cleaner directly onto electrical components.

- **Bulb Replacement:** Ensure power is off before replacing the bulb. Allow the bulb to cool completely before touching. Replace with an E26 medium base bulb, up to 150 Watts.
- **Anti-Rust Feature:** The fixture is designed with anti-rust properties for outdoor durability. However, periodic inspection for any signs of wear or corrosion is recommended.

7. TROUBLESHOOTING

If your light fixture is not functioning correctly, refer to the following common issues and solutions:

Problem	Possible Cause	Solution
Light does not turn on	<ol style="list-style-type: none"> 1. Power is off 2. Faulty bulb 3. Loose wiring connection 	<ol style="list-style-type: none"> 1. Check circuit breaker/fuse 2. Replace bulb 3. Check wiring connections (ensure power is off)
Light flickers	<ol style="list-style-type: none"> 1. Loose bulb 2. Incorrect bulb type for dimmer 3. Loose wiring connection 	<ol style="list-style-type: none"> 1. Tighten bulb 2. Use dimmable bulb with dimmer 3. Check wiring connections (ensure power is off)
Glass shade rattles	Shade not securely fastened	Ensure glass shade is properly seated and secured with retaining screws or twist mechanism.

8. SPECIFICATIONS

Feature	Detail
Brand	Kichler
Model Number	49688BK
Product Dimensions	11"L x 10"W x 20"H
Color	Black
Material	Aluminum, Glass
Style	Transitional
Light Fixture Form	Wall
Room Type	Porch, Patio
Indoor/Outdoor Usage	Outdoor
Power Source	Corded Electric
Installation Type	Wall Mount
Special Features	Anti-Rust, Dimmable
Light Source Type	Incandescent

Feature	Detail
Finish Type	Painted
Shade Material	Glass (Clear Seeded)
Number of Light Sources	1
Voltage	120 Volts (AC)
Wattage	150 watts (max)
Bulb Base	E26 Medium
Item Weight	8.14 pounds
Assembly Required	Yes
Water Resistance Level	Water Resistant

9. WARRANTY AND SUPPORT

Kichler products are manufactured to high standards and are backed by a limited warranty.

- **Warranty:** This product comes with a 1-year limited warranty. Please retain your proof of purchase for warranty claims.
- **Customer Support:** For technical assistance, missing parts, or warranty inquiries, please contact Kichler customer service. Refer to the Kichler website or product packaging for contact information.