

SHP-DS705

Samsung SHP-DS705 Digital Door Lock User Manual

1. PRODUCT OVERVIEW

This manual provides comprehensive instructions for the installation, operation, and maintenance of the Samsung SHP-DS705 Digital Door Lock. Please read this manual carefully before using the product to ensure proper function and safety.

Key Features:

- Automatic Wake-up:** Equipped with an IR sensor, the lock automatically activates when it detects a user's presence.
- Adjustable Sound Settings:** Customize the lock's sound volume to suit your environment, ideal for quiet hours or ensuring entry alerts.
- Enhanced Security:** Features like randomizer PIN code entry and RF key tag support provide robust protection against unauthorized access. The randomizer PIN helps prevent fingerprint trace analysis.



Figure 1: Samsung SHP-DS705 Digital Door Lock (Main Unit and Keypad)

2. SAFETY INFORMATION

- Do not attempt to disassemble, repair, or modify the lock yourself. This may void the warranty and cause damage.
- Keep the product away from water and direct sunlight.
- Use only specified batteries. Incorrect battery types may cause malfunction or leakage.
- Avoid exposing the lock to strong impacts or vibrations.
- Ensure the door is properly aligned and closes smoothly before installation to prevent damage to the lock mechanism.

3. PACKAGE CONTENTS

Please check that all components are present in the package:

- Outdoor Unit (Keypad)
- Indoor Unit (Main Body)
- Mortise Lock
- Strike Plate
- RF Key Tags (Quantity may vary)
- Mounting Screws and Hardware
- AA Batteries (Quantity may vary)
- User Manual (This document)

4. INSTALLATION AND SETUP

Professional installation is recommended for optimal performance and security. Ensure the door thickness and backset are compatible with the lock specifications.

General Installation Steps:

1. **Prepare the Door:** Ensure the door is drilled according to the provided template.
2. **Install Mortise Lock:** Insert the mortise lock into the door edge and secure it with screws.
3. **Install Outdoor Unit:** Mount the outdoor keypad unit, feeding the cable through the door.
4. **Install Indoor Unit:** Connect the cable from the outdoor unit to the indoor unit. Mount the indoor unit and secure it with screws.
5. **Install Batteries:** Insert the specified AA batteries into the battery compartment of the indoor unit.
6. **Test Functionality:** Verify that the lock operates smoothly from both inside and outside.

Initial Setup (PIN Code Registration):

1. Open the battery cover on the indoor unit.
2. Press the [Registration] button.
3. On the outdoor keypad, enter your desired 4-12 digit PIN code, then press the [*] button.
4. Press the [Registration] button again to complete.



Figure 2: Samsung SHP-DS705 Digital Door Lock Keypad

5. OPERATION

Unlocking with PIN Code:

1. Touch the keypad to activate it.
2. Enter your registered PIN code.
3. Press the [*] button. The door will unlock.

Unlocking with RF Key Tag:

1. Place the registered RF key tag on the card reader area of the outdoor unit.
2. The door will unlock.

Locking the Door:

- **Automatic Locking:** The lock will automatically engage approximately 3 seconds after the door is closed.
- **Manual Locking (Outside):** Touch the keypad or press the [*] button after closing the door.
- **Manual Locking (Inside):** Press the [CLOSE] button on the indoor unit.

Sound Adjustment:

To adjust the volume of the lock's sounds (e.g., key press, unlock/lock sounds), locate the volume control button or switch on the indoor unit and select your desired level.

Privacy Mode (Indoor Forced Lock):

Activate privacy mode from the indoor unit to prevent unlocking from the outside using PIN codes or key tags. This feature is typically engaged by pressing and holding a specific button on the indoor unit.

6. MAINTENANCE

- **Battery Replacement:** Replace all batteries when the low battery indicator appears. Use new, high-quality AA alkaline batteries. Do not mix old and new batteries.
- **Cleaning:** Wipe the lock's surface with a soft, dry cloth. Do not use abrasive cleaners, solvents, or water directly on the lock.

- **Regular Checks:** Periodically check that all screws are tight and the lock mechanism operates smoothly.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Lock does not respond.	Dead batteries.	Replace all batteries with new ones.
Cannot unlock with PIN code.	Incorrect PIN entered; Privacy mode activated.	Re-enter correct PIN; Deactivate privacy mode from inside.
Door does not lock automatically.	Auto-lock function disabled; Door not fully closed.	Check auto-lock settings; Ensure door is properly closed and aligned.
Keypad is not lighting up.	Batteries are low or dead.	Replace batteries.

8. SPECIFICATIONS

Feature	Detail
Brand	Generic (Compatible with Samsung SHP-DS705)
Model	SHP-DS705
Lock Type	Digital Keyless Lock
Special Feature	Easy to install, IR Sensor for auto-wake
Recommended Use	Security for residential or office doors
Style	Modern
Colour	Black
Controller Type	Touch Control
Control Method	Touch
Item Weight	454 g (approx. 1 Pound)
Package Dimensions	25 x 20 x 9 cm
Manufacturer	JAL

9. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation provided at the time of purchase or contact your retailer. Keep your purchase receipt as proof of purchase.

