

[Manuals.plus](#) /

› [ECONTROLLY](#) /

› Instruction Manual for ECONTROLLY EN2X27HS Remote Control

ECONTROLLY RCEC-EN2X27HS

Instruction Manual for ECONTROLLY EN2X27HS Remote Control

Compatible with various HISENSE TV Models

PRODUCT OVERVIEW

The ECONTROLLY EN2X27HS is a replacement remote control designed for a wide range of HISENSE TV models. This remote provides full functionality without the need for complex programming or setup. Simply insert batteries, and it is ready for use.

Compatible HISENSE TV Models include: H55M3300, H50M3300, H49M3000, H49M2600, H43MEC3050, H75M7900, H65M7000, H40M3300, H40M2600, H43M3000, H50M5500, H55M5500, H65M5500, H55M7000, H32M2600, H50N5300, H55N5300, H43N5300.





Image: Front view of the ECONTROLLY EN2X27HS remote control, displaying its full button layout. This includes the power button, input selection, numeric keypad, channel and volume controls, navigation arrows with an OK button, and dedicated quick access buttons for Netflix and YouTube.

SETUP AND INSTALLATION

This remote control is designed for immediate use without any complex programming. Follow these simple steps to begin using your new remote:

1. **Open the Battery Compartment:** Locate the battery compartment cover on the back of the remote control. Slide or lift the cover to open it.
2. **Insert Batteries:** Insert two (2) AAA alkaline batteries into the compartment. Ensure that the positive (+) and negative (-) ends

of the batteries align correctly with the markings inside the compartment.

3. **Close the Battery Compartment:** Replace the battery compartment cover, ensuring it clicks securely into place.
4. **Test the Remote:** Point the remote control towards your HISENSE TV and press the Power button. The TV should respond. If not, double-check battery orientation and ensure the batteries are new and fully charged.

No programming or pairing is required for this remote control. It functions directly with compatible HISENSE TV models upon battery installation.

OPERATING INSTRUCTIONS

Familiarize yourself with the buttons on your ECONTROLLY EN2X27HS remote control for optimal use:

- **Power Button ():** Turns the TV on or off.
- **Input Button:** Cycles through available input sources (HDMI, AV, etc.).
- **Number Pad (0-9):** Directly enters channel numbers.
- **Volume Up/Down (VOL +/-):** Adjusts the TV's volume level.
- **Channel Up/Down (CH +/-):** Changes the TV channel.
- **Mute Button ():** Mutes or unmutes the TV audio.
- **Navigation Buttons (▲ ◀ OK ▶ ▼):** Used to navigate menus and select options. The **OK** button confirms selections.
- **Back Button:** Returns to the previous screen or menu.
- **Exit Button:** Exits the current menu or application.
- **Home Button ():** Accesses the TV's main smart hub or home screen.
- **Netflix Button:** Direct access to the Netflix application.
- **YouTube Button:** Direct access to the YouTube application.
- **EPG (Electronic Program Guide):** Displays the program guide.
- **Info:** Displays information about the current program or input.
- **Subtitle:** Toggles subtitles on or off.
- **Media Playback Controls (Play, Pause, Stop, Rewind, Fast Forward):** Controls media playback.

Ensure there is a clear line of sight between the remote control and the TV's infrared receiver for optimal performance.

MAINTENANCE

Proper care and maintenance will extend the life of your remote control:

- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new alkaline batteries.
- **Cleaning:** Wipe the remote control with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, but ensure no moisture enters the remote. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures. If the remote will not be used for an extended period, remove the batteries to prevent leakage.
- **Avoid Drops:** Protect the remote from physical impact, as drops can damage internal components.

TROUBLESHOOTING

If you experience issues with your remote control, try the following troubleshooting steps:

Problem	Possible Cause	Solution
Remote not working at all.	Dead or incorrectly inserted batteries.	Replace batteries with new AAA alkaline batteries, ensuring correct polarity (+/-).
Remote works intermittently.	Low battery power; Obstruction between remote and TV; Remote too far from TV.	Replace batteries. Ensure clear line of sight to the TV's IR receiver. Move closer to the TV.
Specific buttons not responding.	Dirt or debris under the button; Internal malfunction.	Clean the remote surface. If problem persists, the remote may be faulty and require replacement.
TV not responding to remote.	TV is off or unplugged; TV's IR receiver is blocked; Remote is not compatible with TV model.	Ensure TV is powered on. Remove any obstructions from the TV's IR receiver. Verify your TV model is listed as compatible.

SPECIFICATIONS

Feature	Detail
Model Number	RCEC-EN2X27HS
Brand	ECONTROLLY
Compatible Devices	HISENSE Televisions (various models)
Connectivity Technology	Infrared (IR)
Power Source	2 x AAA Batteries (not included)
Product Dimensions	7 x 2 x 0.65 inches
Item Weight	1 ounces
Special Feature	Ergonomic design, No programming required

WARRANTY AND SUPPORT

Specific warranty information for this ECONTROLLY EN2X27HS remote control is typically provided by the seller or manufacturer at the time of purchase. Please refer to your product packaging, purchase receipt, or the seller's website for detailed warranty terms and conditions.

For technical support or further assistance, please contact the seller or the manufacturer directly. Contact information is usually available on the product packaging or through the point of purchase.

