

[Manuals.plus](#) /

› [KEMEI](#) /

› KEMEI Reciprocating Cordless Razor User Manual

KEMEI KM-1102

KEMEI Reciprocating Cordless Razor User Manual

Model: KM-1102

1. INTRODUCTION

Thank you for choosing the KEMEI Reciprocating Cordless Razor, Model KM-1102. This electric shaver is designed for efficient and comfortable grooming, featuring a twin-blade system and a precision beard and sideburn trimmer. Its cordless and rechargeable design makes it ideal for both home use and travel. Please read this manual thoroughly before using the appliance to ensure safe and optimal performance.

2. IMPORTANT SAFETY INFORMATION

To reduce the risk of electric shock, injury, or damage, always follow these basic safety precautions:

- Do not immerse the shaver in water or use it in the shower/bath. This appliance is not waterproof.
- Keep the appliance dry.
- Do not use the shaver if it is damaged or if the power cord/plug is damaged.
- Keep out of reach of children. This appliance is not intended for use by persons with reduced physical, sensory, or mental capabilities unless supervised.
- Only use the charging cable provided with the shaver.
- Unplug the shaver from the power source before cleaning.
- Do not disassemble the shaver. Refer all servicing to qualified personnel.

3. PACKAGE CONTENTS

Please check the package for the following items:

- KEMEI Reciprocating Cordless Razor (KM-1102)
- USB Charging Cable
- Cleaning Brush
- Protective Cap
- Travel Pouch



Image 1: KEMEI KM-1102 shaver and its accessories.

4. SETUP

4.1 Charging the Shaver

Before first use, fully charge the shaver for approximately 8 hours. A full charge provides up to 45 minutes of cordless shaving time.

1. Ensure the shaver is turned off.
2. Insert the small end of the USB charging cable into the charging port on the shaver.
3. Connect the large end of the USB cable to a compatible USB power source, such as a computer/PC, car charger, USB adapter, or power bank.
4. The charging indicator light will illuminate during charging.

USB Charging Interface

45 minutes of use on a single charge



Image 2: USB Charging Interface and compatible power sources.

5. OPERATING INSTRUCTIONS

5.1 Basic Shaving

The KEMEI KM-1102 features two independent floating mesh foils and internal sharp blades designed to conform to facial contours for a close shave.

1. Ensure the shaver is fully charged.
2. Press the power button to turn on the shaver.
3. Hold the shaver at a right angle to your skin and move it slowly against the direction of hair growth.
4. For best results, stretch your skin taut with your free hand.
5. After shaving, press the power button again to turn off the shaver.



Image 3: Detail of the dual foil shaving head.

5.2 Using the Sideburn Trimmer

The integrated pop-up trimmer is ideal for shaping sideburns, mustaches, and beards, or for pre-trimming longer hairs before shaving.

1. Locate the trimmer switch on the side of the shaver.
2. Slide the switch upwards to activate the pop-up trimmer.
3. Carefully trim and shape as desired.
4. After use, slide the switch downwards to retract the trimmer.

Easily trim sideburns

SUPER PARAMAGNETIC HAIRCUT, DEDICATED TO EVERY LOVE BEGAN TO DREAM OF HOME
YOUR HAIRSTYLE, BY ME. DO YOUR OWN STYLIST



Image 4: Using the integrated sideburn trimmer.

6. MAINTENANCE

6.1 Cleaning the Shaver

Regular cleaning ensures optimal performance and hygiene.

1. Turn off the shaver and unplug it from any power source.
2. Press the release buttons on the side of the shaver head to detach the cutter head assembly.
3. Use the provided cleaning brush to remove hair clippings from the foil and the internal cutting blades.
4. Do not rinse the shaver head under water as the unit is not waterproof.
5. Reattach the cutter head assembly until it clicks into place.



KM-1102

Light and convenient
Detachable cutter head



Image 5: Detachable cutter head for easy cleaning.

6.2 Blade and Foil Replacement

For continued optimal shaving performance, it is recommended to replace the foil and cutter blades every 6-12 months, depending on usage. Replacement parts can typically be purchased from authorized KEMEI retailers or online. Refer to the product packaging or KEMEI's official website for specific replacement part numbers.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Shaver pulls hair.	Hair is too long; shaver not fully charged; blades/foil are dull.	Use the pop-up trimmer to shorten long hairs before shaving. Ensure the shaver is fully charged (8 hours). Replace the foil and cutter blades if they are dull.

Problem	Possible Cause	Solution
Shaver does not turn on.	Battery is depleted.	Charge the shaver for 8 hours.
Shaver not charging.	Charging cable or adapter faulty; improper connection.	Ensure the USB cable is securely connected to both the shaver and the power source. Try a different USB power source or adapter. Inspect the charging cable for damage.

8. SPECIFICATIONS

- **Brand:** KEMEI
- **Model Name:** KM-1102
- **Power Source:** Battery Powered (Rechargeable)
- **Input Voltage:** AC 100-240V
- **Frequency:** 50/60Hz
- **Power:** 3W
- **Charge Time:** Approximately 8 hours
- **Usage Time:** Up to 45 minutes (cordless)
- **Recommended Use:** Beard, Sideburns
- **Special Features:** Cordless, Rechargeable, Multifunction, Twin Blade, Pop-up Trimmer, Detachable Cutter Head

9. WARRANTY AND SUPPORT

KEMEI products are manufactured to high-quality standards. For information regarding warranty coverage, technical support, or replacement parts, please contact your retailer or visit the official KEMEI website. Please retain your proof of purchase for warranty claims.

For further assistance, you may visit the KEMEI Store on Amazon:[KEMEI Official Store](#)

© 2024 KEMEI. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07MW3C15V>

More documents and user manuals: <https://manuals.plus/>