

[Manuals.plus](#) /

› [Midea](#) /

› Midea Countertop Dishwasher WQP8-3802F-S User Manual

Midea WQP8-3802F-S

Midea Countertop Dishwasher WQP8-3802F-S User Manual

Model: WQP8-3802F-S

1. INTRODUCTION

This manual provides essential instructions for the safe and efficient operation, installation, and maintenance of your Midea Countertop Dishwasher, model WQP8-3802F-S. Please read this manual thoroughly before using the appliance and retain it for future reference.



Image 1.1: Front view of the Midea Countertop Dishwasher WQP8-3802F-S. This image displays the compact design and control panel layout.

2. SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury.

- Ensure the dishwasher is properly grounded.
- Do not operate a damaged appliance. Contact qualified service personnel.
- Keep children away from the dishwasher, especially when it is operating. Utilize the child lock feature.

- Use only detergents and rinse aids specifically designed for automatic dishwashers.
- Avoid touching the heating element during or immediately after use.
- Sharp items should be loaded with points down to prevent injury.

3. SETUP AND INSTALLATION

3.1 Unpacking

Carefully remove all packaging materials. Inspect the dishwasher for any shipping damage. Report any damage to your retailer immediately.

3.2 Placement

Place the dishwasher on a stable, level countertop near a water supply, drain, and electrical outlet. Ensure adequate ventilation around the unit.

3.3 Water Connection

Connect the water inlet hose to a cold water tap. Ensure all connections are tight to prevent leaks. For installations with multiple appliances, a T-piping setup may be required for proper water supply.

3.4 Drain Connection

Securely connect the drain hose to a suitable drain point, ensuring it is not kinked or obstructed.

3.5 Electrical Connection

Plug the dishwasher into a grounded electrical outlet. Verify that the voltage matches the appliance's requirements (220-240 Volts).

4. OPERATING INSTRUCTIONS

4.1 Loading the Dishwasher

Scrape off large food particles. Load dishes securely in the racks, ensuring water can reach all surfaces. Place larger items in the lower rack and smaller, delicate items in the upper rack. Avoid overcrowding.



Image 4.1: Interior view of the dishwasher showing the upper and lower racks for dish placement.

4.2 Adding Detergent and Rinse Aid

Fill the detergent dispenser with the recommended amount of dishwasher detergent. Check the rinse aid dispenser and refill if necessary. The dishwasher features an adjustable automatic rinse agent dispenser and an automatic detergent dispenser.

4.3 Selecting a Wash Program

Close the dishwasher door. Use the control panel to select your desired wash program. The LED display will show the selected program.

- **Rapid Wash:** A 30-minute cycle for lightly soiled dishes or when a quick wash is needed.
- **Intensive Wash (70°C):** A high-temperature cycle effective for heavily soiled dishes, pots, and pans, eliminating 99.99% of bacteria.

- **Normal:** Standard cycle for everyday dishware.
- The dishwasher offers four additional specialized cycles for a total of 7 programs.



Image 4.2: Angled view of the dishwasher highlighting the control panel with program indicators and LED display.

4.4 Starting a Cycle

Press the Start button to begin the wash cycle. The LED display will show the remaining time.

4.5 Delay Start Function

To delay the start of a wash cycle, press the Delay Start button repeatedly to set the desired delay time (1-24 hours). The cycle will

begin automatically after the set delay.

4.6 Child Lock

Activate the child lock feature to prevent accidental operation or opening of the dishwasher by children. Refer to your control panel for specific activation instructions, typically a combination of buttons or a long press.

5. MAINTENANCE AND CLEANING

5.1 Exterior Cleaning

Wipe the exterior surfaces with a soft, damp cloth. Avoid abrasive cleaners or solvents.

5.2 Interior Cleaning

Periodically clean the interior of the dishwasher, including the spray arms and door seal, to remove any food residue or mineral deposits.

5.3 Self-Cleaning Filter System

The dishwasher is equipped with a self-cleaning filter system. While this reduces manual cleaning, it is recommended to periodically check the filter for any large debris and clear it if necessary to ensure optimal performance.

6. TROUBLESHOOTING

Before contacting service, review the following common issues and solutions:

Problem	Possible Cause	Solution
Dishwasher does not start	Power cord not plugged in; door not closed properly; fuse blown or circuit breaker tripped.	Ensure power cord is secure; close door firmly; check household fuse/circuit breaker.
Dishes not clean	Improper loading; insufficient detergent; spray arm blocked; filter clogged.	Reload dishes correctly; add more detergent; ensure spray arms rotate freely; clean filter.
Water not draining	Drain hose kinked or clogged; drain pump malfunction.	Check and clear drain hose; contact service if pump is faulty.
Excessive noise	Dishes rattling; foreign object in pump; motor issue.	Rearrange dishes; inspect pump area; contact service if noise persists.

7. SPECIFICATIONS

Feature	Detail
Model Name	WQP8-3802F-S
Brand	Midea
Installation Type	Countertop
Place Settings	8
Number of Programs	7 (Rapid Wash, Intensive, Normal, and four other specialized cycles)

Feature	Detail
Voltage	220-240 Volts
Item Weight	26 Kilograms
Product Dimensions (L x W x H)	50 x 55 x 59 cm
Efficiency	A+
Annual Energy Consumption	201.6 Kilowatt Hours Per Year
Noise Level	49 dB
Material	Stainless Steel
Special Features	A+ Energy Efficiency Class, Adjustable Automatic Rinse Agent Dispenser, Automatic Detergent Dispenser, Child Lock, Self Cleaning Filter System, Delay Start (1-24 hours)

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or visit the official Midea website. Keep your purchase receipt as proof of purchase for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question