

[Manuals.plus](#) /

› [EasyAcc](#) /

› EasyAcc Mini Portable Bluetooth Speaker User Manual

EasyAcc 2724639653076

EasyAcc Mini Portable Bluetooth Speaker User Manual

Model: 2724639653076

INTRODUCTION

Thank you for purchasing the EasyAcc Mini Portable Bluetooth Speaker. This compact and versatile speaker is designed to provide high-quality audio on the go, featuring Bluetooth 4.0 connectivity, a built-in microphone for calls, FM radio, and support for Micro SD cards. Please read this manual carefully before using the product to ensure proper operation and to maximize its lifespan.

SAFETY INFORMATION

- Do not expose the speaker to extreme temperatures, direct sunlight, or high humidity.
- Avoid dropping or subjecting the speaker to strong impacts.
- Do not disassemble, repair, or modify the speaker yourself. This will void the warranty.
- Keep the speaker away from water and other liquids.
- Use only the provided charging cable or a certified equivalent.
- Clean the speaker with a soft, dry cloth. Do not use abrasive cleaners.

PACKAGE CONTENTS

- EasyAcc Mini Portable Bluetooth Speaker
- Micro USB Charging Cable
- User Manual

PRODUCT OVERVIEW



Figure 1: Front View of the Speaker. This image shows the main speaker grille and the EasyAcc branding on top. The compact cylindrical design is visible, highlighting its portability.



Figure 2: Angled View with Control Buttons. This view displays the control panel at the base of the speaker, including buttons for mode selection (M), call answer/end, play/pause, previous track/volume down, and next track/volume up. The microphone is also visible.



Figure 3: Bottom View with Ports and Power Switch. This image highlights the bottom of the speaker, showing the ON/OFF switch, Micro USB charging port, Micro SD card slot, and AUX input. Product model and certification details are also visible.



Figure 4: Speaker in Use with a Laptop. This image demonstrates the compact size of the speaker relative to a laptop, emphasizing its portability and ease of integration into a workspace or travel setup.

Control Buttons and Ports:

- **M Button:** Mode switch (Bluetooth / FM Radio / Micro SD / AUX).
- **Play/Pause / Call Button:** Play/pause music; Answer/end phone calls.
- **Previous Track / Volume Down Button:** Short press for previous track; Long press for volume down.
- **Next Track / Volume Up Button:** Short press for next track; Long press for volume up.
- **Microphone:** For hands-free calls.
- **Micro USB Port:** For charging the speaker.
- **Micro SD Card Slot:** For playing music from a Micro SD card.

- **AUX Input:** For connecting external audio devices via a 3.5mm audio cable (not included).
- **ON/OFF Switch:** Power switch for the speaker.

SETUP

1. Charging the Speaker

Before first use, fully charge the speaker. Connect the Micro USB charging cable to the speaker's Micro USB port and the other end to a USB power adapter (5V/1A recommended) or a computer's USB port. The LED indicator will show charging status (e.g., red for charging, off when fully charged). A full charge takes approximately 2-3 hours and provides 4-5 hours of playtime.

2. Powering On/Off

Slide the ON/OFF switch located at the bottom of the speaker to the "ON" position to power on. Slide it to "OFF" to power off.

OPERATING INSTRUCTIONS

1. Bluetooth Mode

1. Power on the speaker. It will automatically enter Bluetooth pairing mode, indicated by a flashing blue LED.
2. Enable Bluetooth on your device (smartphone, tablet, computer).
3. Search for "EasyAcc Speaker" in your device's Bluetooth list and select it to pair.
4. Once successfully paired, the LED indicator will turn solid blue, and you will hear a confirmation tone.
5. You can now play audio from your device through the speaker.

2. FM Radio Mode

1. Power on the speaker. Press the "M" button repeatedly until you hear static, indicating FM radio mode.
2. To auto-scan and save available FM stations, press and hold the Play/Pause button. The speaker will scan and store stations automatically.
3. Use the Previous Track / Next Track buttons to switch between saved stations.

3. Micro SD Card Mode

1. Insert a Micro SD card (with MP3 audio files) into the Micro SD card slot at the bottom of the speaker.
2. The speaker will automatically switch to Micro SD card mode and begin playing music. If not, press the "M" button to select this mode.
3. Use the Play/Pause, Previous Track, and Next Track buttons to control playback.

4. AUX Mode

1. Connect one end of a 3.5mm audio cable (not included) to the AUX input port on the speaker and the other end to the audio output of your external device.
2. The speaker will automatically switch to AUX mode. If not, press the "M" button to select this mode.
3. Control playback from your external device.

5. Call Function (Bluetooth Mode Only)

- **Answer Call:** When a call comes in, press the Play/Pause / Call button once to answer.
- **End Call:** During a call, press the Play/Pause / Call button once to end the call.
- **Reject Call:** Press and hold the Play/Pause / Call button for 2 seconds to reject an incoming call.

- **Redial Last Number:** In Bluetooth mode, double-press the Play/Pause / Call button to redial the last dialed number.
- For optimal call quality, ensure the speakerphone is within 20cm of your mouth.

6. Volume Control

Press and hold the "Next Track / Volume Up" button to increase volume. Press and hold the "Previous Track / Volume Down" button to decrease volume.

MAINTENANCE

- Clean the speaker's surface with a soft, lint-free cloth.
- Do not use liquid cleaners, aerosols, or solvents.
- Store the speaker in a cool, dry place when not in use for extended periods.
- Recharge the battery at least once every three months to maintain battery health if not used regularly.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not power on.	Battery is depleted.	Charge the speaker fully.
Cannot pair with Bluetooth device.	Speaker is not in pairing mode; Device's Bluetooth is off; Speaker is too far from device.	Ensure speaker is in Bluetooth mode (flashing blue LED). Turn on device's Bluetooth. Move speaker closer to device (within 10m). Forget previous pairings on device and try again.
No sound from speaker.	Volume is too low; Incorrect mode selected; Audio source issue.	Increase speaker and device volume. Press "M" button to switch to correct mode. Check audio source (e.g., Micro SD card, AUX cable).
FM radio reception is poor.	Weak signal; Environmental interference.	Move to an open area. Re-scan stations.

SPECIFICATIONS

Brand	EasyAcc
Model Number	2724639653076
Connectivity Technology	Bluetooth 4.0, 3.5mm Aux, Micro SD, USB
Speaker Output Power	3 Watts
Battery Capacity	500mAh
Play Time	4-5 hours
Charging Time	Approx. 2-3 hours

Bluetooth Transmission Range	8-10 meters (without obstructions)
Product Dimensions	63 x 63 x 57 mm (approx. 7.4 x 15 x 8.8 cm as per product data)
Product Weight	260 g
Material	ABS + Metal

WARRANTY AND SUPPORT

EasyAcc products come with a standard manufacturer's warranty. For detailed warranty terms and conditions, please refer to the warranty card included in your package or visit the official EasyAcc website. If you encounter any issues or require technical assistance, please contact EasyAcc customer support through their official website or the contact information provided with your purchase. Please have your model number (2724639653076) and purchase details ready when contacting support.

For more information, visit: www.easyacc.com

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question