



Manuals.plus /

› **Nikai** /

› Nikai 32-inch LED TV NTV3272LED9 User Manual

Nikai NTV3272LED9

Nikai 32-inch LED TV NTV3272LED9 User Manual

Model: NTV3272LED9

1. INTRODUCTION

Thank you for purchasing the Nikai 32-inch LED TV, model NTV3272LED9. This manual provides essential information for setting up, operating, and maintaining your television. Please read it thoroughly before use and keep it for future reference.

The Nikai NTV3272LED9 is a 32-inch standard LED television featuring HD resolution (1366x768) and multiple connectivity options, including HDMI and USB. It comes with a remote control for convenient operation.

2. SAFETY INFORMATION

- Do not expose the TV to rain or moisture to prevent fire or electric shock.
- Ensure proper ventilation. Do not block ventilation openings.
- Place the TV on a stable, level surface to prevent it from falling.
- Keep the TV away from direct sunlight, heat sources, and extreme temperatures.
- Unplug the power cord during lightning storms or when unused for long periods.
- Do not open the TV casing. Refer all servicing to qualified personnel.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- Nikai 32-inch LED TV (NTV3272LED9)
- Remote Control
- TV Stand (2 pieces)
- Wall Mount Bracket
- Power Cable

- User Manual (this document)

4. SETUP

4.1 Attaching the Stand

1. Carefully place the TV screen-down on a soft, clean surface to prevent scratches.
2. Align the stand pieces with the corresponding slots on the bottom of the TV.
3. Secure the stand pieces using the provided screws. Ensure they are tightened firmly.
4. Carefully lift the TV and place it on a stable surface.

4.2 Wall Mounting

A wall mount bracket is included for wall installation. Follow the instructions provided with the wall mount for secure installation. Professional installation is recommended.



Image: Nikai 32-inch LED TV displaying a vibrant image.

4.3 Connecting Peripherals

The TV offers various ports for connecting external devices:

- **USB Input:** Connect USB flash drives or external hard drives to play media files.
- **Earphone Jack:** Connect headphones for private listening.
- **HDMI Ports:** Connect devices such as Blu-ray players, gaming consoles, or set-top boxes for high-definition audio and video.
- **Antenna/Cable Input:** Connect your antenna or cable TV source.

Your browser does not support the video tag.

Video: Product demonstration showing USB input, earphone jack, and wall mount bracket. It also highlights HD Ready Display, High Definition visual quality, and multiple connectivity options.

4.4 Power Connection

After connecting all desired peripherals, plug the power cable into the TV's power input and then into a wall outlet.

5. OPERATING INSTRUCTIONS

5.1 Remote Control Overview

The included remote control allows you to manage all TV functions. Insert two AAA batteries (not included) into the remote control, observing the correct polarity.

- **Power Button:** Turns the TV on or off.
- **Channel Buttons (CH+/CH-):** Changes channels.
- **Volume Buttons (VOL+/VOL-):** Adjusts the volume level.
- **Input/Source Button:** Selects the input source (HDMI1, HDMI2, USB, AV, TV).
- **Menu Button:** Accesses the main menu for settings.
- **Navigation Buttons (Up/Down/Left/Right):** Navigates through menus.
- **OK/Enter Button:** Confirms selections.

5.2 Basic Operation

1. **Power On/Off:** Press the Power button on the remote control or on the TV.
2. **Channel Selection:** Use CH+/CH- buttons or the number pad to select channels.
3. **Volume Adjustment:** Use VOL+/VOL- buttons.
4. **Input Source:** Press the Input/Source button to cycle through available inputs.

5.3 Picture Settings

To adjust picture settings:

1. Press the **Menu** button on the remote.
2. Navigate to the **Picture** menu using the navigation buttons.
3. Adjust settings such as Picture Mode (Personal, Standard, Dynamic), Contrast, Brightness, Color, Sharpness, Color Temperature, and Noise Reduction.
4. Press **Exit** to leave the menu.



Image: Nikai 32-inch LED TV showcasing a high-definition image of a racing event.

6. MAINTENANCE

- **Cleaning the Screen:** Gently wipe the screen with a soft, lint-free cloth. For stubborn marks, use a screen cleaner specifically designed for TVs. Do not spray cleaner directly onto the screen.
- **Cleaning the Casing:** Wipe the TV casing with a soft, dry cloth. Avoid using abrasive cleaners or solvents.
- **Ventilation:** Ensure the ventilation openings on the back of the TV are not blocked to prevent overheating.

7. TROUBLESHOOTING

If you encounter issues with your TV, refer to the following common problems and solutions:

Problem	Possible Solution
No power	Check if the power cable is securely plugged into the TV and the wall outlet. Ensure the wall outlet is functioning.
No picture, but sound is present	Verify the correct input source is selected. Check cable connections to external devices.
No sound, but picture is present	Check the volume level and ensure the TV is not muted. Verify audio cable connections.
Remote control not working	Check and replace batteries. Ensure there are no obstructions between the remote and the TV's IR sensor.
Screen dims fully (as per customer review)	This indicates a potential hardware issue. Contact Nikai customer support for assistance.

For issues not covered here, please contact Nikai customer support.

8. SPECIFICATIONS

Feature	Detail
Brand	Nikai
Model Number	NTV3272LED9
Screen Size	32 inches
Display Technology	LED
Resolution	1366 x 768 (HD)
Refresh Rate	60 Hz
Aspect Ratio	1.78:1
Connectivity Technology	HDMI, USB
Included Components	TV, Remote Control, Stand
Product Dimensions	11.3D x 79.5W x 50H cm
Weight	2 kg

9. WARRANTY AND SUPPORT

Nikai products are designed for reliability and performance. For warranty information, please refer to the warranty card included with your product or visit the official Nikai website. For technical support or service inquiries, please contact Nikai customer service through their official channels.